

Full HD Multiple Streaming IP Fixed Dome Camera

ALL2295V2



User Manual

Table of Contents

1.	Overv	/iew	. 2		
	1.1	Features	. 2		
	1.2	Package Contents	. 3		
	1.3	Dimensions	. 4		
	1.4	Connectors	. 5		
2.	Came	ra Cabling	. 6		
	2.1	Connect Power	. 6		
	2.2	Connect Ethernet Cable	. 6		
	2.3	Connect Alarm I/O	. 6		
3.	Syste	m Requirements	.7		
4.	Acces	ss Camera	. 8		
5.	Setup	Video Resolution1	12		
6.	Confi	guration Files Export/ Import1	19		
Арр	Appendix A: Technical Specifications20				
Арр	Appendix B: Delete the Existing DC Viewer23				
Apr	Appendix C: Setup Internet Security				

1. Overview

Supported with both H.264 and MJPEG standard, the product series not only features in superior Full HD resolution for real-time streaming at 25/30 fps, but also supplies D1 720p real-time streaming. With more computing power, the IP Camera could provide more flexibility for users and system managers.


1.1 Features

- Progressive Scan CMOS Sensor
- Dual Streams, Full HD real-time + D1 real-time
- H.264 and MJPEG compression
- Remote Zoom & Focus (Motorized Lens; Optional)
- Motion Detection
- Privacy Masks
- WDR
- Smart Picture Quality/3DNR
- Tampering Alarm
- Day/Night (ICR)
- Micro SD support
- BNC analog output
- IR LED module (Optional)
- Weatherproof (IP66 International)
- Vandal Proof Dome Cover
- Sunshield & Outdoor Mounting Kit
- ONVIF Support

1.2 Package Contents

Please check the package contains the following items listed below.


Indoor Camera Package Contents

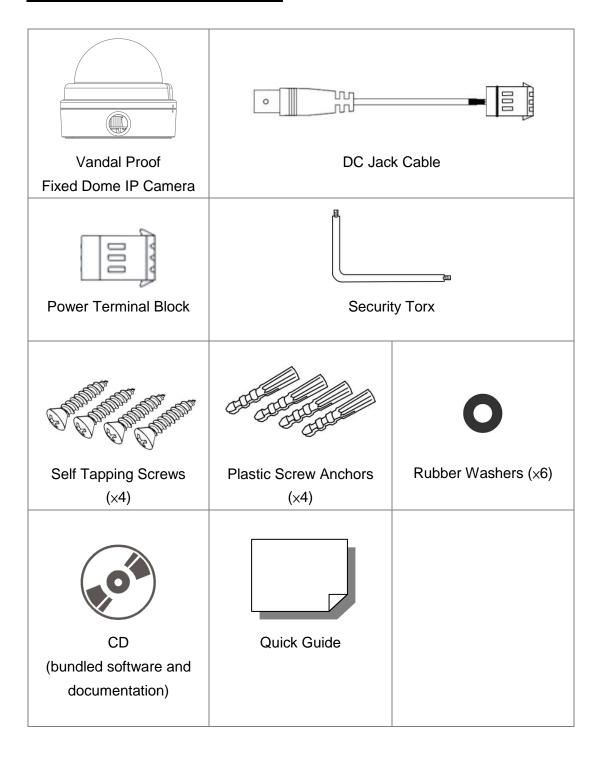

1.3 **Dimensions**


The IP Dome Camera's dimensions are shown below.

<u>Indoor</u>

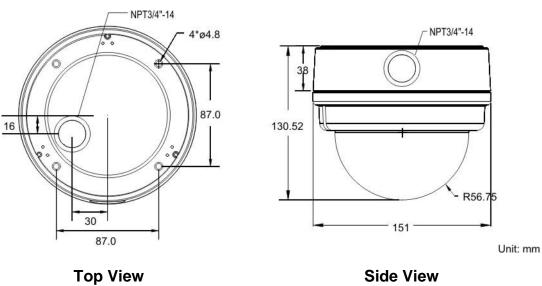


Side View

<u>Outdoor</u>

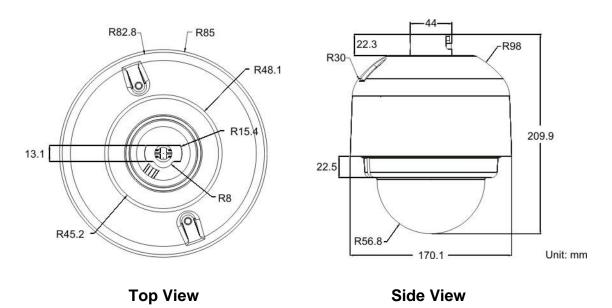

1.4 Connectors

The diagram below shows the IP Camera's reset button and various connectors. Definition for each connector will be given as follows.

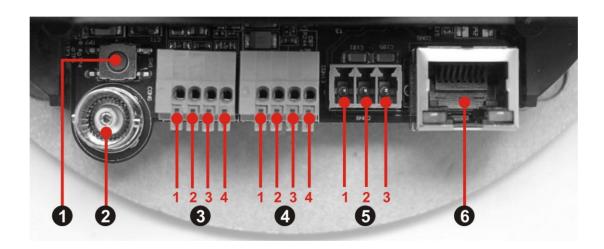

No.	Conr	nector	Pin	Definition	Remarks
1	Reset Button - Restore to factory default		ry default		
2	BNC		1	Analog Video Ou	utput
			1	GND (Input-)	
3	Alarm I/	0	2	Input+	Alarm connection
3	Alamii I/	O	3	Output-	Alaim connection
			4	Output+	
			1	Output (L)	
4	Audio I/O		2	Output (R)	Two way audio transmission
4			3	GND	Two-way audio transmission
				Input	
			1	Power	
	Power DC 12V 2 3 1	DC 12V	2	Reserved	
5			3	GND	Power connection
3		1	Power-1	r ower connection	
		AC 24V 2	2	Earth GND	
			3	Power-2	
6	6 RJ-45		-	10/100 Mbps Eth	nernet / PoE

2. Camera Cabling

Please follow the instructions below to complete IP Camera connection.

2.1 Connect Power

Please refer to <u>Section: Connectors</u>. Alternatively, connect the Ethernet cable to the camera's PoE port and plug the other end of the cable into a PoE switch.



NOTE: If using PoE, make sure Power Sourcing Equipment (PSE) is in use in the network.

2.2 Connect Ethernet Cable

Use of Category 5 Ethernet cable is recommended for network connection; to have best transmission quality, cable length shall not exceed 100 meters. Connect one end of the Ethernet cable to the RJ-45 connector of the IP Dome Camera, and the other end of the cable to the network switch or PC.



NOTE: In some cases, you may need use an Ethernet crossover cable when connecting the IP Dome Camera directly to the PC.

Check the status of the link indicator and activity indicator LEDs; if the LEDs are unlit, please check LAN connection.




Green Link Light indicates good network connection.

Orange Activity Light flashes for network activity indication.

2.3 Connect Alarm I/O

The camera equips one alarm input and one relay output for alarm application. Refer to alarm pin definition below to connect alarm devices to the IP Camera if needed.

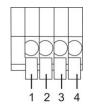

PIN 1: GND (Input-)

PIN 2: Input+

PIN 3: Output-

PIN 4: Output+

3. System Requirements

To perform the IP Camera via web browser, please ensure your PC is in good network connection, and meet system requirements as described below.

Items	System Requirement
	1. Intel [®] Pentium [®] M, 2.16 GHz or Intel [®] Core [™] 2 Duo, 2.0
Personal Computer	GHz
	2. 2 GB RAM or more
Operating System	Windows VISTA / Windows XP / Windows 7
Web Browser	Microsoft Internet Explorer 6.0 or later
	Firefox
	Chrome
	Safari
Network Card	10Base-T (10 Mbps) or 100Base-TX (100 Mbps) operation
Viewer	ActiveX control plug-in for Microsoft IE

4. Access Camera


For initial access to the IP Camera, users can search the camera through the installer program: DeviceSearch.exe, which can be found in "DeviceSearch" folder in the supplied CD.

Device Search Software Setup

- **Step 1:** Double click on the program Device Search.exe. After its window appears, click on the <Device Search> button on the top side.
- **Step 2:** The security alert window will pop up. Click on <Unblock> to continue.

Device Search

- **Step 3:** Click on <Device Search> again, and all the finding IP devices will be listed in the page. The IP Camera's default IP address is: 192.168.0.250.
- **Step 4:** Double click or right click and select <Browse> to access the camera directly via web browser.

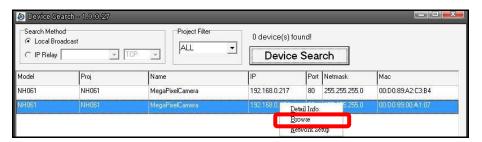

Step 5: Then the prompt window of request for entering default username and password will appear for login to the IP Dome Camera.

The default login ID and password for the Administrator are:

Login ID	Password
admin	admin



NOTE: ID and password are case sensitive.



NOTE: It is strongly advised that administrator's password be altered for the security concerns. Refer to Full HD_Multiple Streams IP Camera Menu Tree for further details.

Additionally, users can change the IP Camera's network property, either DHCP or Static IP directly in the device finding list. Refer to the following section for changing the IP Camera's network property.

Example of Changing IP Camera's Network Property

Users can directly change an IP Camera's network property, ex. from static IP to DHCP, in the finding device list. The way to change the IP Camera's network property is specified below:

- **Step 1:** In the finding device list, click on the IP Camera that you would like to change its network property. On the selected item, right click and select "Network Setup." Meanwhile, record the IP Camera's MAC address, for future identification.
- **Step 2:** The "Network Setup" page will come out. Select "DHCP," and press "Apply" button down the page.
- **Step 3:** Click on <OK> on the Note of setting change. Wait for one minute to re-search the IP Camera.
- **Step 4:** Click on the <Device Search> button to re-search all the devices. Then select the IP Camera with the correct MAC address. Double click on the IP Camera, and the login window will come out.
- **Step 5:** Enter User name and Password to access the IP Camera.

Installing DC Viewer Software Online

For the initial access to the IP Camera, a client program, DC Viewer, will be automatically installed to your PC when connecting to the IP Camera.

If the Web browser doesn't allow DC Viewer installation, please check the Internet security settings or ActiveX controls and plug-ins settings (refer to Section: Internet Security Settings) to continue the process.

The Information Bar (just below the URL bar) may come out and ask for permission to install the ActiveX Control for displaying video in browser. Right click on the Information Bar and select <Install ActiveX Control...> to allow the installation.

The download procedure of DC Viewer software is specified as follows.

- **Step 1:** In the DC Viewer installation window, click on <Next> to start installation.
- **Step 2**: The status bar will show the installation progress. After the installation is completed, click on <Finish> to exit the installation process.
- **Step 3:** Click on <Finish> to close the DC Viewer installation page.

Once the DC Viewer is successfully installed, the IP Camera's Home page will be able to correctly display as the figure below.

Motorized Model

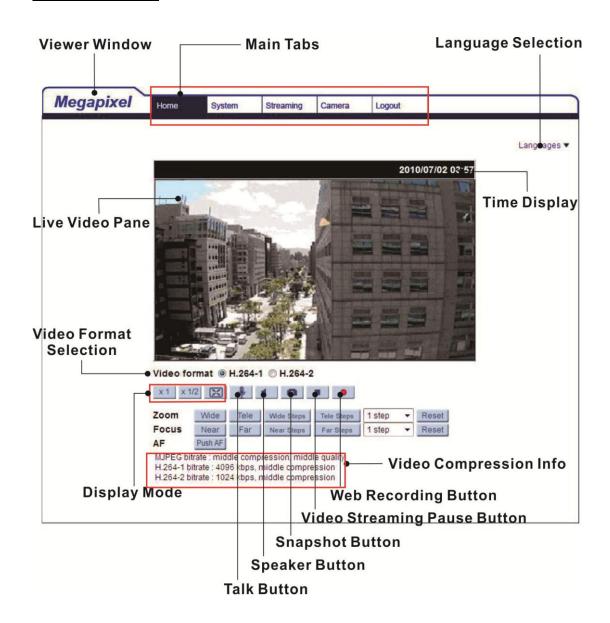


Image and Focus Adjustment

The image displays on the Home page when successfully accessing to the IP Camera. Adjust zoom and focus as necessary to produce a clear image.




Note: Please refer to <u>Full HD Multiple Streams IP Camera Menu Tree</u> for more button function detail.

5. Setup Video Resolution

Users can setup Video Resolution on Video Format page of the user-friendly browser-based configuration interface.

Video Format can be found under this path: **Streaming> Video Format**.

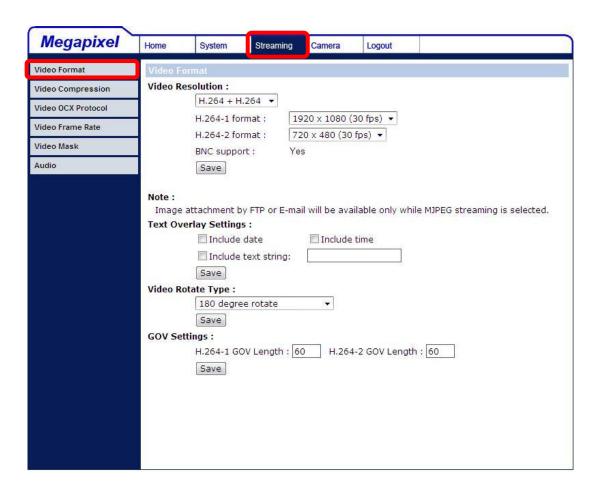

2M Model

Video Format

Under Video Resolution section, select a preferred resolution setting. The available Video Resolution for MJPEG & H.264 format includes:

H.264 + H.264				
H.264-1	H.264-2	BNC SUPPORT		
	1280 x 720 (30fps)*	√		
	1024 x 768 (30fps)	-		
4000 v 4000 (45fma)	800 x 600 (30fps)	-		
1920 x 1080 (15fps)	720 x 480 (30fps)	√		
	640 x 480 (30fps)	√		
	352 x 240 (30fps)	√		
	1280 x 1024 (15fps)	√		
	1280 x 720 (15fps)	-		
	1024 x 768 (15fps)	-		
1280 x 1024 (30fps)	800 x 600 (30fps)	-		
	720 x 480 (30fps)	√		
	640 x 480 (30fps)	√		
	352 x 240 (30fps)	√		
	1280 x 720 (30fps)	√		
	1024 x 768 (30fps)	-		
4000 :: 700 (00f)	800 x 600 (30fps)	-		
1280 x 720 (30fps)	720 x 480 (30fps)	√		
	640 x 480 (30fps)	√		
	352 x 240 (30fps)	√		
	1024 x 768 (30fps)	√		
	800 x 600 (30fps)	-		
1024 x 768 (30fps)	720 x 480 (30fps)	√		
	640 x 480 (30fps)	√		
	352 x 240 (30fps)	√		
	800 x 600 (30fps)	√		
000 11 000 (005)	720 x 480 (30fps)	√		
800 x 600 (30fps)	640 x 480 (30fps)	√		
	352 x 240 (30fps)	√		
	720 x 480 (30fps)	√		
720 x 480 (30fps)	640 x 480 (30fps)	√		
	352 x 240 (30fps)	√		

	640 x 480 (30fps)	√
640 x 480 (30fps)	352 x 240 (30fps)	√
352 x 240 (30fps)	352 x 240 (30fps)	-
	H.264 + MJPEG	<u>'</u>
H.264	MJPEG	BNC SUPPORT
	1280 x 720 (30fps)	√
	1024 x 768 (30fps)	-
4000 :: 4000 (456)	800 x 600 (30fps)	-
1920 x 1080 (15fps)	720 x 480 (30fps)	√
	640 x 480 (30fps)	√
	352 x 240 (30fps)	√
	1280 x 1024 (15fps)	√
	1280 x 720 (15fps)	-
	1024 x 768 (15fps)	-
1280 x 1024 (30fps)	800 x 600 (30fps)	-
	720 x 480 (30fps)	√
	640 x 480 (30fps)	√
	352 x 240 (30fps)	√
	1280 x 720 (30fps)	√
	1024 x 768 (30fps)	-
1200 v 720 (20fma)	800 x 600 (30fps)	-
1280 x 720 (30fps)	720 x 480 (30fps)	√
	640 x 480 (30fps)	√
	352 x 240 (30fps)	V
	1024 x 768 (30fps)	√
	800 x 600 (30fps)	-
1024 x 768 (30fps)	720 x 480 (30fps)	√
	640 x 480 (30fps)	V
	352 x 240 (30fps)	V
	800 x 600 (30fps)	V
800 x 600 (30fps)	720 x 480 (30fps)	\checkmark
800 x 800 (301ps)	640 x 480 (30fps)	\checkmark
	352 x 240 (30fps)	V
	720 x 480 (30fps)	V
720 x 480 (30fps)	640 x 480 (30fps)	V
	352 x 240 (30fps)	V
640 x 480 (30fps)	640 x 480 (30fps)	V
0 10 A 400 (001p0)	352 x 240 (30fps)	√

352 x 240 (30fps)	352 x 240 (30fps)	-				
	MJPEG Only					
	MJPEG BNC SUPPOR					
	1920 x 1080 (15fps)	\checkmark				
	1280 x 1024 (30fps)	\checkmark				
	1280 x 720 (30fps)	\checkmark				
	1024 x 768 (30fps)	√				
	800 x 600 (30fps)	V				
	720 x 480 (30fps)	V				
	640 x 480 (30fps)					
	352 x 240 (30fps)					
	H.264 Only					
	H.264	BNC SUPPORT				
	1920 x 1080 (15fps)	\checkmark				
	1280 x 1024 (30fps)	V				
	1280 x 720 (30fps)	√				
	1024 x 768 (30fps)	V				
	800 x 600 (30fps)					
	720 x 480 (30fps)					
	V					
352 x 240 (30fps) -						

^(*) Default

Click on <Save> to confirm the setting.

2M Real-time Model

Video Format

Under Video Resolution section, select a preferred resolution setting. The available Video Resolution for MJPEG & H.264 format includes:

H.264 + H.264				
H.264-1	H.264-2	BNC SUPPORT		
	720 x 480 (30fps)*	√		
1920 x 1080 (30fps)	640 x 480 (30fps)	√		
	352 x 240 (30fps)	√		
	1920 x 1080 (15fps)	√		
	1280 x 1024 (30fps)	-		
1920 x 1080 (15fps)	1280 x 720 (30fps)	-		
	1024 x 768 (30fps)	-		
	800 x 600 (30fps)	-		
	1280 x 1024 (15fps)	√		
	1280 x 720 (30fps)	-		
	1024 x 768 (30fps)	-		
1280 x 1024 (30fps)	800 x 600 (30fps)	-		
	720 x 480 (30fps)	√		
	640 x 480 (30fps)	√		
	352 x 240 (30fps)	√		
	1280 x 720 (30fps)	√		
	1024 x 768 (30fps)	-		
4000 ·· 700 (00fr -)	800 x 600 (30fps)	-		
1280 x 720 (30fps)	720 x 480 (30fps)	√		
	640 x 480 (30fps)	√		
	352 x 240 (30fps)	√		
	1024 x 768 (30fps)	√		
	800 x 600 (30fps)	-		
1024 x 768 (30fps)	720 x 480 (30fps)	√		
	640 x 480 (30fps)	√		
	352 x 240 (30fps)	√		
	800 x 600 (30fps)	√		
000 v 000 /20f==\	720 x 480 (30fps)	√		
800 x 600 (30fps)	640 x 480 (30fps)	√		
	352 x 240 (30fps)	√		

	720 x 480 (30fps)	√
720 x 480 (30fps)	640 x 480 (30fps)	√
	352 x 240 (30fps)	√
	640 x 480 (30fps)	√
640 x 480 (30fps)	352 x 240 (30fps)	√
352 x 240 (30fps)	352 x 240 (30fps)	-
	H.264 + MJPEG	
H.264	MJPEG	BNC SUPPORT
	720 x 480 (30fps)	V
1920 x 1080 (30fps)	640 x 480 (30fps)	V
	352 x 240 (30fps)	V
	1920 x 1080 (15fps)	V
	1280 x 1024 (30fps)	-
1920 x 1080 (15fps)	1280 x 720 (30fps)	-
	1024 x 768 (30fps)	-
	800 x 600 (30fps)	-
	1280 x 1024 (15fps)	√
	1280 x 720 (30fps)	-
	1024 x 768 (30fps)	-
1280 x 1024 (30fps)	800 x 600 (30fps)	-
	720 x 480 (30fps)	√
	640 x 480 (30fps)	√
	352 x 240 (30fps)	√
	1280 x 720 (30fps)	V
	1024 x 768 (30fps)	-
1280 x 720 (30fps)	800 x 600 (30fps)	-
1200 x 720 (301ps)	720 x 480 (30fps)	V
	640 x 480 (30fps)	V
	352 x 240 (30fps)	√
	1024 x 768 (30fps)	V
	800 x 600 (30fps)	-
1024 x 768 (30fps)	720 x 480 (30fps)	√
	640 x 480 (30fps)	√
	352 x 240 (30fps)	√

	800 x 600 (30fps)	V
200 v 600 (20fpg)	720 x 480 (30fps)	√
800 x 600 (30fps)	640 x 480 (30fps)	√
	352 x 240 (30fps)	V
	720 x 480 (30fps)	√
720 x 480 (30fps)	640 x 480 (30fps)	V
	352 x 240 (30fps)	V
640 x 480 (20fpc)	640 x 480 (30fps)	V
640 x 480 (30fps)	352 x 240 (30fps)	V
352 x 240 (30fps)	352 x 240 (30fps)	-
	MJPEG Only	
	MJPEG	BNC SUPPORT
1	920 x 1080 (30fps)	V
1	280 x 1024 (30fps)	V
	1280 x 720 (30fps)	V
	1024 x 768 (30fps)	V
	800 x 600 (30fps)	V
	720 x 480 (30fps)	V
	640 x 480 (30fps)	V
	-	
	H.264 Only	
	H.264	BNC SUPPORT
1	920 x 1080 (30fps)	V
1	V	
	V	
	V	
	V	
	V	
	V	
	352 x 240 (30fps)	-

^(*) Default

Click on <Save> to confirm the setting.

6. Configuration Files Export/ Import

To export/ import configuration files, users can access the Maintenance page on the user-friendly browser-based configuration interface.

The Maintenance setting can be found under this path: **System> Maintenance**.

Users can export configuration files to a specified location and retrieve data by uploading an existing configuration file to the IP Camera. It is especially convenient to make multiple cameras having the same configuration.

Export

Users can save the system settings by exporting the configuration file (.bin) to a specified location for future use. Click on the <Export> button, and the popup File Download window will come out. Click on <Save> and specify a desired location for saving the configuration file.

Upload

To copy an existing configuration file to the IP Camera, please first click on <Browse> to select the configuration file, and then click on the <Upload> button for uploading.

Appendix A: Technical Specifications

Camera		2M	2M Real-time
Image Sensor		1/2.7" Progr	ressive CMOS
Effective Pixels		1920(H) x 1080(V)	
Minimum	Color	0.:	2 lux
Illumination	B/W	0.0	02 lux
Shutter Speed	1	1~ 1/10	0000 sec.
White Balance		Manual /	AWB/ ATW
Lens			
Lens Type	Vari-focal/ Motorized lens	F1.2/ f	=3-9 mm
FOV (16:9 resolut	ion)	103.5(W) ~ 34.3(T)
Operation			
Video Compression	on	H.264/	/ MJPEG
		Simultaneous	Simultaneous
		H.264 1080p (13/15 fps) +	H.264 1080p (25/30 fps) +
\ <i>i</i> ''.\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \		MJPEG 720p (25/30 fps)	MJPEG D1 (25/30 fps)
Video Streaming		Simultaneous	Simultaneous
		H.264 1080p (13/15 fps) +	H.264 1080p (25/30 fps) +
		H.264 720p (25/30 fps)	H.264 D1 (25/30 fps)
H.264		Full HD 1080p/ \$VCA/ HD 720p/ VCA/ \$VCA/ D1/ VCA/ CIE	
Resolution	MJPEG	Full HD 1080p/ SXGA/ HD 720p/ XGA/ SVGA/ D1/ VGA	
	Brightness	Manual	
	Exposure	Auto/Manual	
	Sharpness	Manual	
	Contrast	Manual	
	White Balance	Auto/Manual	
	Saturation	Manual	
	Hue	Manual	
Imaga Catting	Backlight Compensation	Or	n/Off
Image Setting	Digital Zoom	Su	pport
	WDR	On/Off	
	3D Noise Reduction	On/Off	
	Motion detection	On/Off	
	Privacy Mask	On/Off	
	Privacy Mask Type	C	olor
	ICR *	Auto/On/Off	
	Tampering Alarm	On/Off	

Audio	Two-way Audio		Line out, Line in/ mic in	
Audio	Compression		G.711/G.726	
Alorm	Input		5V 10kΩ pull up	
Alarm	Output		Photo Relay Output 300V DC/AC	
Event Notification	1		HTTP, FTP, SMTP	
NA Ich I			English, French, German, Italian, Korean, Simplified Chinese,	
Multiple Languag	es		Traditional Chinese, Russian	
Network				
Interface			10/100Mbps Ethernet (RJ-45)	
Destand			IPv4/ v6, TCP/IP, UDP, RTP, RTSP, HTTP, HTTPS, ICMP,FTP, SMTP,	
Protocol			DHCP, PPPoE, UPnP, IGMP, SNMP, QoS, and ONVIF	
Password Levels			User and Administrator	
Security			HTTPS, IP Filter, IEEE 802.1X	
Internet Browser			Internet Explorer (6.0+), Chrome, Firefox, Safari	
User Account			20	
Mechanical				
Duilt in ID	Working distance		Up to 25m	
Built-in IR	Wavelength		850nm	
Illuminator*	Number of LEDs		24	
	Power		3 pins terminal block	
	Ethernet		RJ-45	
0	Micro SD		Micro SDHC 32GB support	
Connectors	Audio		4 pins terminal block	
	Alarm In/ Out		4 pins terminal block	
	Analog Video		1.0 Vp-p / 75 Ω, BNC	
LED Indicator			Power, Link, ACT	
General				
			-10°C ~ 50°C (14°F ~122°F)	
Operating Tempe	, roturo		w/ Heater & Fan, powered by DC12V: -30°C \sim 50°C (-22° \sim 122° F)	
Operating Temperature		w/ Heater & Fan, powered by AC24V: -35°C ~ 50°C (-31° ~ 122° F)		
		Humidity: 10% to 90%, no condensation		
Power Source			DC12V/ AC24V/ PoE	
Power Consumption			System: 5W	
		(Hea	tter: +6W, Fan: +1W, Built-in IR Illuminator: +3W, Motorized Lens: +3.6W)	
Weatherproof Standard			IP66	
Regulatory			CE, FCC, RoHS Compliant	
Dimension Indoor			∅ 151 x 130 mm (∅ 5.9 x 5.1 in.)	
	ı			

	Outdoor	∅ 170 x 210 mm (∅ 6.7 x 8.3 in.)
Weight	Indoor	0.8 kg (1.8 lb)
	Outdoor	1.3 kg (2.9 lb)

^(*) Optional

Appendix B: Delete the Existing DC Viewer

For users who have installed the DC Viewer in the PC previously, please first remove the existing DC Viewer from the PC before accessing to the IP Camera.

Deleting the DC Viewer

In the Windows <Start Menu>, activate <Control Panel>, and then double click on <Add or Remove Programs>. In the <Currently installed programs> list, select <DCViewer> and click on the button <Remove> to uninstall the existing DC Viewer.

Deleting Temporary Internet Files

To improve browser performance, it is suggested to clean up the all the files in the Temporary Internet Files.

The procedure is as follows:

- **Step 1:** Click on the <Tools> tab on the menu bar and select <Internet Options>.
- **Step 2:** Click on the <Delete> button under <Browsing history> section. Then click on the <Delete Files> button under the <Temporary Internet files> section.
- **Step 3:** A confirmation window will pop up. Click on <Yes> to start deleting the files.

Appendix C: Setup Internet Security

If ActiveX control installation is blocked, please either set Internet security level to default or change ActiveX controls and plug-ins settings.

Internet Security Level: Default

- **Step 1:** Start the Internet Explorer (IE).
- **Step 2:** Click on the <Tools> tab on the menu bar and select <Internet Options>.
- **Step 3:** Click on the <Security> tab, and select <Internet> zone.
- **Step 4:** Down the page, click on the <Default Level> button and click on <OK> to confirm the setting. Close the browser window, and restart a new one later to access the IP Camera.

ActiveX Controls and Plug-ins Settings

- **Step 1:** Repeat **Steps 1~3** of the previous section above.
- **Step 2:** Down the page, click on the <Custom Level> button to change ActiveX controls and plug-ins settings. The Security Settings window will pop up.
- **Step 3:** Under <ActiveX controls and plug-ins>, set **ALL** items (as listed below) to <Enable> or <Prompt>. Please note that the items vary by IE version.

ActiveX controls and plug-ins settings:

- 1. Allow previously unused ActiveX controls to run without prompt.
- 2. Allow Scriptlets.
- 3. Automatic prompting for ActiveX controls.
- 4. Binary and script behaviors.
- 5. Display video and animation on a webpage that does not use external media player.
- 6. Download signed ActiveX controls.
- 7. Download unsigned ActiveX controls.
- 8. Initialize and script ActiveX controls not marked as safe for scripting.
- 9. Run ActiveX controls and plug-ins.
- 10. Script ActiveX controls marked safe for scripting.
- **Step 4:** Click on <OK> to accept the settings and close the Security Settings window.
- **Step 5:** Click on <OK> to close the Internet Options screen.
- **Step 6:** Close the browser window, and restart a new one later to access the IP Camera.



CE-Declaration of Conformity

Germering, March 17, 2012

For the following equipment:

Full HD Multiple Streaming IP Fixed Dome Camera ALL2295V2



The safety advice in the documentation accompanying the products shall be obeyed. The conformity to the above directive is indicated by the CE sign on the device.

The ALLNET ALL2295V2 conforms to the Council Directives of 2004/108/EC EMC.

This equipment meets the following conformance standards:

EMI: EMS:

AS/NZS CISPR 22:2006 AS/NZS CISPR 24:2006

EN55022 CLASS A:2006+A1:2007 EN50130-4:1995+A1:1998+A2:2003

EN61000-3-2:2006+A:2009 IEC61000-4-2:1995

EN61000-3-3:2008 IEC61000-4-3:1996

IEC61000-4-5:1995

IEC61000-4-4:1995

IEC61000-4-6:1996

IEC61000-4-8:1996

IEC61000-4-11:1994

This equipment is intended to be operated in all countries.

This declaration is made by

ALLNET Computersysteme GmbH

Maistraße 2

82110 Germering

Germany

Germering, 17.03.2012

Wolfgang Marcus Bauer

25