

# Quick Installation Guide



## ALL-MC202P-SFP1

### Dip-Switch Function:



|                                                  | ON                        | OFF                        |
|--------------------------------------------------|---------------------------|----------------------------|
| Dip Switch 4<br>LFP<br>(Link Fault Pass-Through) | LFP enabled               | LFP disabled               |
| Dip Switch 3<br>Autonegotiation                  | 10 Mbit forced for copper | 10/100/100 Mbit for copper |
| Dip Switch 2                                     | No function               | No function                |
| Dip Switch 1                                     | No function               | No function                |

### LED Indicator:

|                     | LED-Status | Description                                              |
|---------------------|------------|----------------------------------------------------------|
| PWR                 | On         | Working                                                  |
|                     | Off        | Power off                                                |
| Link/ACT            | On         | Connected Device                                         |
|                     | Blink      | Data transmitting                                        |
|                     | Off        | Not connected device                                     |
| SPD<br>(Link-Speed) | On         | 1000Mbps Link                                            |
|                     | Off        | 10/100Mbps Link                                          |
| PoE                 | On         | Connected PoE device                                     |
|                     | Blink      | Not connected to PoE device or current overload (max30W) |
|                     | Off        | Not connected to PoE device                              |

## Safety Warnings

For your safety, be sure to read and follow all warning notices and instructions.

- Do not open the device. Opening or removing the device cover can expose you to dangerous high voltage points or other risks. Only qualified service personnel can service the device. Please contact your vendor for further information.
- Do not use your device during a thunderstorm. There may be a risk of electric shock brought about by lightning.
- Do not expose your device to dust or corrosive liquids.
- Do not use this product near water sources.
- Make sure to connect the cables to the correct ports.
- Do not obstruct the ventilation slots on the device.

**Please use only the provided power supply unit!**  
**(52V / 1.25A, Input 100-240V max 1.5A)**

Hiermit erklärt ALLNET GmbH Computersysteme, dass sich das Gerät **ALL-MC202P-SFP1** in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 2004/108/EC befindet. Die Konformitätserklärung kann unter folgender Adresse gefunden werden:  
[www.allnet.de/downloads.html](http://www.allnet.de/downloads.html)

ALLNET GmbH Computersysteme declares that the device **ALL-MC202P-SFP1** is in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC. The Declaration of conformity can be found under this link:  
[www.allnet.de/downloads.html](http://www.allnet.de/downloads.html)