


# Quick Installation Guide



## ALL-MC202P-SFP1-PoE

### Dip-Switch Function:

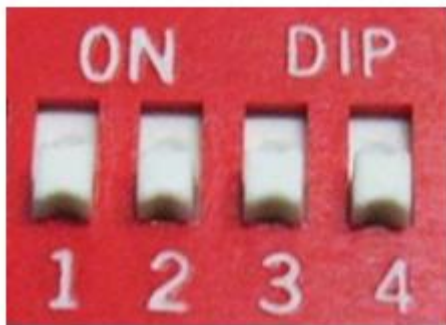

	ON	OFF
Dip Switch 1 LFP (Link Fault Pass-Through)	LFP enabled	LFP disabled
Dip Switch 2	No function	No function
Dip Switch 3 Autonegotiation	10 Mbit forced for copper	10/100/100 Mbit for copper
Dip Switch 4	No function	No function

### LED Indicator:

	LED-Status	Description
PWR	On	Working
	Off	Power off
Link/ACT	On	Connected Device
	Blink	Data transmitting
	Off	Not connected device
SPD (Link-Speed)	On	1000Mbps Link
	Off	10/100Mbps Link
PoE	On	Connected PoE device
	Off	Not connected to PoE device
SD	On	SFP-Port recieves optical signal
	Off	SFP-Port recieves no optical signal

# Safety Warnings

For your safety, be sure to read and follow all warning notices and instructions.

- Do not open the device. Opening or removing the device cover can expose you to dangerous high voltage points or other risks. Only qualified service personnel can service the device. Please contact your vendor for further information.
- Do not use your device during a thunderstorm. There may be a risk of electric shock brought about by lightning.
- Do not expose your device to dust or corrosive liquids.
- Do not use this product near water sources.
- Make sure to connect the cables to the correct ports.
- Do not obstruct the ventilation slots on the device.

ALLNET GmbH Computersysteme declares that the device **ALL-MC202P-SFP1-PoE** is in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC. The Declaration of conformity can be found under this link:  
[www.allnet.de/downloads.html](http://www.allnet.de/downloads.html)