

ALL7000 Load balancing Router with / mit DMZ

Deutsch	Seite 3
English	Page 10

Hardware Beschreibung





WAN 1 Port: Dieser Port dient zum Anschluss des ersten Routers, DSL Modems, oder TV-Kabel Modems.

WAN 2 Port: Dieser Port dient zum Anschluss des zweiten Routers, DSL Modems, oder TV-Kabel Modems.

LAN Port: Hier wird das interne LAN angeschlossen.

DMZ Port: Hier werden die Server angeschlossen, die eine direkte Verbindung zum öffentlichen Internet benötigen (FTP, SNMP, HTTP, DNS).

Reset: Mit der Reset-Taste stellen Sie den ursprünglichen Auslieferzustand des ALL7000 her.

DC Power: Hier wird das mitgelieferte Steckernetzteil angeschlossen.

Installationsbeispiel:



ALL7000:

LAN Port = 192.168.1.1 (internes LAN)

WAN 1 Port = **61.11.11.11 (zugeteilt von Ihrem Internet Service Provider)**

WAN 2 Port = 211.22.22.22 (zugeteilt von Ihrem ISP)

DMZ Port = 61.11.11.11 (Transparenter Betrieb, "<u>De-M</u>ilitarisierte <u>Zone</u>", DMZ)

Konfigurationsbeispiel

Schritt 1:

Verbinden Sie den PC des Administrators und den LAN Port des ALL7000 mit einem Hub oder Switch. Kontrollieren Sie das blinkende Licht an Hub oder Switch, um Sicher zu stellen, dass eine Verbindung besteht (link). Der ALL7000 verfügt über einen eingebauten (embedded) Web Server für Management und Konfiguration. Verwenden Sie einen Web Browser, z.B. Internet Explorer 4 (oder höher) oder Netscape 4.0 (oder höher) mit vollständigem Java Script Support. Die Standard IP Adresse des ALL7000 ist **192.168.1.1**, die Subnet Maske ist **255.255.255.0**. Die IP Adresse des Administrator PCs muss deshalb im Bereich von 192.168.1.2 /24 bis 192.168.1.254/24 liegen.

Falls die IP Adresse des internen LANs kein Subnet von 192.168.1.0 ist, (z.B. LAN IP Adresse ist 172.16.0.1) muss die IP Adresse des PC des Administrators angepasst werden. Starten Sie den PC neu, wenn nötig.

Standardmäßig ist der DHCP-Server des ALL7000 eingeschaltet. Das bedeutet, dass Client Computer im internen LAN einschließlich des Administrator-PC als DHCP Clients konfiguriert werden können und ihre IP Adresse automatisch vom ALL7000 beziehen.

Die folgende Tabelle zeigt eine Liste von privaten IP Adressen. Diese Adressen DÜRFEN NICHT als WAN IP Adressen verwendet werden!

10.0.0 bis 10.255.255.255
172.16.0.0 bis 172.31.255.255
192.168.0.0 bis 192.168.255.255

Schritt 2

Nachdem der Administrator PC eine IP-Adresse des gleichen Netzwerkes erhalten hat, wie der ALL7000, öffnen Sie bitte einen Web Browser und geben Sie in die Adresszeile ein: <u>http://192.168.1.1</u>

Ein Pop-up Fenster wird erscheinen Sie nach dem "username" und "password" fragen. Ohne Passwort haben Sie keinen Zugang zum Webserver des ALL7000. Der voreingestelle Login "username" und das "password" finden Sie hier:

Username: admin

Password: admin

Danach klicken Sie auf das Feld OK

Action canceled		
the met Evolution was upable to link to the Web have you		
equested. The page might be temporarily unavailable.		
	Connect to 192.168.1.1 🛛 🖓 🔯	
lease try the following:	12	
• Click the 🔁 Refresh button, or try again later.	The second s	
 If you have visited this page previously and you w view what has been stored on your computer, click and they did what whether and an your computer, click 	Loudranny Administration Toole	
 For information about offline browsing with Internet 	User name: 🖸 schwin 🕑	
and Index.	Basawardi TTTTT	
	Escientiar ny panavord	
ternet Explorer		
	OK Canol	
l		

Schritt 3:

Nachdem Username und Passwort akzeptiert worden sind, erscheint folgender Bildschirm:

Wählen Sie den Reiter **Interface** im linken Menüfeld aus. Der angezeigte Menübaum wird erscheinen:

Klicken Sie auf **LAN** und geben Sie die gewünschten Netzwerk Setup Informationen ein (Layer 3).

Beispiel:

IP Address NetMask 192.168.1.1 255.255.255.0

System	Interface > LAN		
∃ Interface			
	LAN Interface		
-+WAN	IP Address	192.168.1.1	
L⇒ DMZ	Netmask	255, 255, 255, 0	
Policy Object	The strength		
Policy			
🖸 Anti-Áttack	Enable	E Bing	
🖸 Monitor	LIIADIO	r Filig	
			OK Cancel

		, = : = , = :					WANDARY COMPANY	and the second	N COL	
🖬 System	Interf	ace > WAN								
🗏 Interface		Balance Mo	de Auto							
⊢⇒ LAN ⊢● WAN ∟⇒ DMZ		WAN No.	Connect Mode	IP Address	Saturated Connections	Ping	HTTP	Configure	Priority	
Policy Object		1	Static IP	61.11.11.11	1 🗸	V	1	Modify	1 🔽	
🗵 Policy		2	Static IP	211.22.22.22	1 💌	M	2	Modify	2 🔽	
Anti-Attack										

Wählen Sie nun im Bereich Interface WAN aus und geben Sie de geforderten Informationen (Layer 3) ein.

Klicken Sie auf das Feld **Modify** aus, um WAN1 bzw. 2 zu konfigurieren.

WAN1 Interface	IP address	61.11.11.11		
	NetMask	255.255.255.0		
	Default Gateway	61.11.11.254		
DNS	Server 1 168.95	.1.1		

😨 System	Interface > WAN
⊟ Interface	
L⇒LAN	WAN1 Interface
-+ WAN	Service : DNS Server IP Address : 168.95.1.1 Assist
L _{⇒ DMZ}	Domain name : tw.yahoocom Assist
💶 Policy Object	
🗳 Policy	wait P seconds between sending alive packet. (U - 99, U : means not checking)
🛂 Anti-Attack	
🖬 Monitor	C PPPoE (ADSLUser)
	C Dynamic IP Address (Cable Mudern User)
	IP Address 61.11.11.11
	Netmask 225225250
	Derault Gateway p1.11.11.254
	DNS Server 1 168.95.1.1
	DNS Server 2
	Max. Downstream Bandwidth [2900] Kbps (Max. 25 Mbps)
	Max. Upstream Bandwidth ²⁵⁰⁰⁰ Kbps (Max. 25 Mbps)
	Enaple Mring MHTP
	OK Cancel

Anmerkung: Die hier verwendeten Daten sind nur Beispiele. Geben Sie bitte die Daten ein, die Ihnen Ihr ISP übermittelt hat.

Schritt 4

Wählen Sie den Reiter **Policy** im Funktionsmenü aus. Klicken Sie dann auf **Outgoing** und dann auf das Feld **New Entry**.

Wenn die Option New Entry erscheint, geben Sie folgende Konfiguration ein:

Source Address (Quelle) - wählen Sie "Inside_Any"

Destination Address (Ziel) - wählen Sie "Outside_Any"

Service - wählen Sie "ANY"

Action - wählen Sie "Permit" (Erlabunis)

Mit Klick auf OK übernehmen SIe die Änderungen in den Speicher des ALL7000.

🚨 System	Policy > Outgoing	
Interface	Add New Policy	
Policy Object Policy	Source Address	Inside_Any 💌
-+ Outgoing	Destination Address	Out side_Any 💌
-⇒ Incoming	Service	ANY
-⇒ WAN To DMZ	Action, WAN Port	PERMIT ALL
-→ DMZ To WAN	Traffic Log	Enable
L DMZ TO LAN	Statistics	Enable
🖬 Anti-Attack	Content Blocking	Enable
📮 Monitor	Authentication User	None 💌
	Schedule	None 💌
	Tunnel	None 💌
	MAX. Concurrent Sessions	0 (0:means unlimited)
	QoS	None 💌
		OK Cancel

Schritt 5

Wenn Sie nun das Fenster wie unten abgebildet sehen, war die Konfiguration erfolgreich. Sellen Sie sicher, dass alle Computer, die an das LAN angeschlossen sind, als Default Gateway IP Adresse die LAN IP Adresse (z.B. 192.168.1.1) des ALL7000 eingestellt haben. Nun sollten alle Computer im LAN Zugang zum Internet herstellen können. Falls eine Filter-Funktion des ALL7000 verwendet werden soll, ziehen Sie bitte das Kapitel "Policy" im Handbuch zu Rate.

💶 System	Policy >	Outgoing								_
Interface Bolicy Object		Source	Destination	Service	Action	Op	tion	Configure	Move	1
Policy		Inside_Any	Outside_Any	ANY	6			Modify Remove	To 💵	
-+ Outgoing										
-+ Incoming					New	Entry)			
-⇒ WAN To DMZ										
-⇒ LAN To DMZ										
-⇒ DMZ To WAN										
L⇒ DMZ To LAN										
💶 Anti-Attack										
💶 Monitor										

Hardware Description

RESET



WAN 1 Port: Use this port to connect to the external router, DSL modem, or Cable modem.

WAN 2 Port: Use this port to connect to the external router, DSL modem, or Cable modem.

LAN Port: Use this port to connect to the internal network of the office.

DMZ Port: Use this port to connect to the company's server(s), which needs direct connection to the Internet (FTP, SNMP, HTTP, DNS).

Reset: Reset the ALL7000 to the original default settings.

DC Power: connect one end of the power supply to this port, the other end to the electrical wall outlet.

Connecting Example:



ALL7000 :

LAN Port = **192.168.1.1** WAN 1 Port = **61.11.11.11**

WAN 1 Port = 61.11.11.11 (provided by ISP) WAN 2 Port = 211.22.22.22 (provided by ISP)

DMZ Port = 61.11.11.11 (Transparent Mode)

WEBUI Configuration example

Step 1:

Connect both the Administrator's PC and the LAN port of the ALL7000 to a hub or switch. Make sure there is a link light on the hub/switch for both connections. The ALL7000 has an embedded web server used for management and configuration. Use a web browser to display the configurations of the Multi-Homing (such as Internet Explorer 4(or above) or Netscape 4.0(or above) with full java script support). The default IP address of the ALL7000 is **192.168.1.1** with a subnet mask of 255.255.255.0. Therefore, the IP address of the Administrator PC must be in the range between 192.168.1.2 /24– 192.168.1.254/24.

If the company's LAN IP Address is not subnet of 192.168.1.0, (i.e. LAN IP Address is 172.16.0.1) the Administrator must change his/her PC IP address to be within the same range of the LAN subnet (i.e. 172.16.0.0). Reboot the PC if necessary.

By default, the ALL7000 is shipped with its DHCP Server function enabled. This means the client computers on the LAN network including the Administrator PC can set their TCP/IP settings to automatically obtain an IP address from the ALL7000.

The following table is a list of private IP addresses. These addresses may not be used as an WAN IP address.

10.0.0.0 ~ 10.255.255.255
172.16.0.0 ~ 172.31.255.255
192.168.0.0 ~ 192.168.255.255

STEP 2

Once the Administrator PC has an IP address on the same network as the ALL7000, open up an Internet web browser and type <u>http://192.168.1.1</u> into the address bar.

A pop-up screen will appear and prompt for a username and password. A username and password is required in order connect to the ALL7000. Enter the default login username and password of Administrator (see below).

Username: admin

Password: admin

Click OK

Fess 👩 192.166.1.1			👻 🛃 60 💷	kê.
Action canceled Internet Explorer was unable to link to the Web page you requirind. The page might be temperarily unavailable.				
-	Connect lo 19	2.168.1.1		
Please try the following: • Click the PD Refresh button, or try essen later.	1	COLORA C		
 If you have writted this page previously and you w view what has been stored on your computer, olici and than click Work Diffliene. 	Loudinaring Adm	mutration Tools		
 For information about offline browsing with Interne Explorer, dick the Help menu, and then dick Con- and Index. 	User namer Besswordt	🖸 admin 🛛 📉		
Internat Explorer		Bauendar ny paoseord		
		OK Cared		
Action canceled terret Explorer was unable to link to the Web page yo reparted. The page might be temperarily unavailable. Issue try the following: • Club the P Refresh button, or try spain later. • If you have withed this page providually and you when what has been stored on your computer, of and than club Work Offline. • For information should offline browsing with linter Explorer, club, the Help manu, and then club. Co and Index. Hermet Explorer				

Step 3:

After entering the username and password, the ALL7000 WEBUI screen will display. Select the **Interface** tab on the left menu and a sub-function list will be displayed. Click on **LAN** from the sub-function list, and enter proper Layer 3 network setup information. (for example)

LAN interface	IP Address NetMask	192.168.1.1 255.255.255.0	
😨 Sasturn	Interface > LAN		
System	LAN Interface		
–+LAN ⇒™(AN	IP Address	192. 168. 1. 1	
L⇒ DMZ	Netmask	255. 255. 255. 0	
Policy Object		,	
Anti-Attack	Enable		R HTTP
Monitor			м нн н
			OK Cancel

Select the **Interface** tab on the left menu and a sub-function list will be displayed. Click on **WAN** from the sub-function list, and enter proper Layer 3 network setup information.

System	Interface > WAN								
Interface	Delement	de els . Auto	I						
-⇒LAN	Balarice	NOUE. Auto							
-+ WAN	WAN No	Connect Mode	IP Address	Connections	Ping	HTTP	Configure	Priority	
L ⇒ UMZ	1	Static IP	61 11 11 11				Modify		
Policy Object		Static IP	211 22 22 22				Madify		
Anti-Attack	2	Static IP	211.22.22.22		1	6	Modify		
Monitor									

Click Modify to modify WAN1/2 settings. (i.e. WAN1 Interface)

WAN1 Interface	IP add	dress	61.11.11.11				
	NetMas	k	255.255.255.0				
	Default Ga	teway	61.11.11.254				
DNS	Server 1	168.95.	1.1				

😨 System	Interface > WAN									
Interface										
Lolan	WAN1 Interface									
-+ WAN	Service : DNS Server IP Address : 168.95.1.1 Assist									
L⇒ DMZ										
🖬 Policy Object										
🖸 Policy	Wait 2 seconds between sending alive packet. (0 - 99 , 0 : means not checking)									
🖸 Anti-Attack										
🖬 Monitor	C PPPoE (ADSL User)									
	Dynamic IP Address (Cable Modern User)									
	Static IP Address									
	IP Address 61.11.11.11									
	Netmask 255 255 0									
	Default Gateway 61.11.11.234									
	DNS Server 1 168.95.1.1									
	DNS Server 2									
	Max. Downstream Bandwidth 25000 Kbps (Max. 25 Mbps)									
	Max. Upstream Bandwidth 25000 Kbps (Max. 25 Mbps)									
	Enable 🖂 Ping 🖂 HTTP									
	OK Cancel									

Note: The above figures are only examples. Please fill in the appropriate IP address information provided to you by the ISP.

Step 4

Click on the **Policy** tab from the main function menu and then click on **Outgoing** from the sub-function list.

Click on **New Entry** button.

When the New Entry option appears, then enter the following configuration:

Source Address – select "Inside_Any" Destination Address – select "Outside_Any" Service - select "ANY"

Action - select "Permit"

Click on **OK** to apply the changes.

🖬 System	Policy > Outgoing						
Interface	Add New Policy	Add New Policy					
	Source Address	Inside_Any 💌					
-+ Outgoing	Destination Address	Out side_Any 🔽					
-⇒ Incoming	Service	ANY					
→ WAN To DMZ	Action, WAN Port	PERMIT ALL					
→ DMZ To WAN	Traffic Log	🗆 Enable					
L⇒ DMZ To LAN	Statistics	🗆 Enable					
Anti-Attack	Content Blocking	🗆 Enable					
💶 Monitor	Authentication User	None 💌					
	Schedule	None 💌					
	Tunnel	None 🔽					
	MAX. Concurrent Sessions	0 (0:means unlimited)					
	QoS	None 🔽					
		OK Cancel					

Step 5

The configuration is successful if you see the screen below. Make sure that all the computers that are connected to the LAN port have their Default Gateway IP Address set to the ALL7000 LAN IP Address (i.e. 192.168.1.1). At this point, all the computers on the LAN network should gain access to Internet immediately. If an ALL7000 filter function is required, please refer to the Policy section.

💶 System	Policy >	Outgoing										
Interface	Source Destination Service Action Option								Configure	Moye		
Policy Object Policy		Inside_Any	Outside_Any	ANY	2		TT	Т	Modify Remove	То	1 🔻	
-+ Outgoing												
-⇒ Incoming		New Entry										
-⇒ WAN To DMZ												
-⇒ LAN To DMZ												
-⇒ DMZ To WAN												
L⇒ DMZ To LAN												
💶 Anti-Attack												
💶 Monitor												