



ALL-MC115VDSL2



VDSL2 100 Mbit Mini Modem Master / Slave



Foreword: VDSL2 solution

Attention:

Be sure to read this manual carefully before using this product. Especially Legal Disclaimer, Statement of Conditions and Safty Warnings.

ALL-MC115VDSL2 is a VDSL2 single port bridge equipped with two 10/100Mbps Ethernet ports that provide an economical solution for commercial-grade applications. Compliant with ITU-T G.993.2 VDSL2 standard, the ALL-MC115VDSL2 supports a maximum bandwidth of up to 100Mbps symmetric in VDSL2 Profile (30a) solution. The ALL-MC115VDSL2 also supports both central office (CO) and customer-premises equipment (CPE) modes selectable through DIP Switch.

Since VDSL2 has the characteristic of higher bandwidth over shorter distances, the ideal architecture for Telcoms is to use fiber optic lines as the backbone and a VDSL2 line as the last mile into the home or office. With outstanding throughput, the ALL-MC115VDSL2 can complement a fiber network to offer the best solution for delivering Triple play(Video/Voice/Data) or home entertainment services.

Caution:

The ALL-MC115VDSL2 is for **indoor** applications only. This product does not have waterproof protection, please do not use in outdoor applications.



Safety Warnings

For your safety, be sure to read and follow all warning notices and instructions before using the device.

- ◆ **DO NOT** open the device or unit. Opening or removing covers can expose you to dangerous high voltage points or other risks. ONLY qualified service personnel can service the device. Please contact your vendor for further information.
- ◆ **Use ONLY** the dedicated power supply for your device. Connect the power to the right supply voltage (110V AC used for North America and 230V AC used for Europe).
- ◆ **Place** connecting cables carefully so that no one will step on them or stumble over them. **DO NOT** allow anything to rest on the power cord and do **NOT** locate the product where anyone can work on the power cord.
- ◆ **DO NOT** install nor use your device during a thunderstorm. There may be a remote risk of electric shock from lightning.
- ◆ **DO NOT** expose your device to dampness, dust or corrosive liquids.
- ◆ **DO NOT** use this product near water, for example, in a wet basement or near a swimming pool.
- ◆ **Connect ONLY** suitable accessories to the device.
- ◆ **Make sure** to connect the cables to the correct ports.
- ◆ **DO NOT** obstruct the device ventilation slots, as insufficient air flow may harm your device.
- ◆ **DO NOT** place items on the device.
- ◆ **DO NOT** use the device for outdoor applications, and make sure all the connections are indoors or have waterproof protection place.
- ◆ **Be careful** when unplugging the power, because may produce sparks.
- ◆ **Keep** the device and all its parts and accessories out of children's reach.
- ◆ **Clean** the device using a soft and dry cloth rather than liquid or atomizers. Power off the equipment before cleaning it.
- ◆ This product is **recyclable**. Dispose of it properly.



TABLE OF CONTENTS

FOREWORD: VDSL2 SOLUTION	1
SAFETY WARNINGS.....	2
CHAPTER 1. UNPACKING INFORMATION	5
1.1 Check List	5
CHAPTER 2. INSTALLING THE BRIDGE	6
2.1 Hardware Installation.....	6
2.2 Pre-installation Requirements	6
2.3 General Rules	7
2.4 Connecting the Bridge.....	7
2.5 Connecting the RJ-11 / RJ-45 Ports	8
2.6 VDSL2 bridge Application.....	10
CHAPTER 3. HARDWARE DESCRIPTION	11



3.1 Front Panel.....	12
3.2 Front Indicators	12
3.3 Rear Panel	15
APPENDIX A: CABLE REQUIREMENTS	24
APPENDIX B: PRODUCT SPECIFICATION.....	27
APPENDIX C: TROUBLESHOOTING	29
APPENDIX D: COMPLIANCE INFORMATION.....	35
APPENDIX E: PERFORMANCE TABLE	38
WARRANTY.....	41
CE	36







CHAPTER 1. UNPACKING INFORMATION

1.1 Check List

Carefully unpack the package and check its contents against the checklist.

Package Contents:

			
<p>1 x ALL-MC115VDSL2</p>	<p>1 x CD User's Manual</p>	<p>Accessory: 1 x Ethernet Cable, 4 x Rubber Feet , 1 x 12V 1A Adaptor</p>	

Notes:

1. Please inform your dealer immediately for any missing or damaged parts. If possible, retain the carton including the original packing materials. Use them to repack the unit in case there is a need to return for repair.
2. Do not use sub-standard power supply. Before connecting the power supply to the device, be sure to check compliance with specifications. The ALL-MC115VDSL2 of the power supply at least use DC12V/1A.
3. Power supply included in package is commercial-grade. Do not use in industrial-grade applications.



4.If you would like to use the telephone, please purchase a suitable external splitter and install to the line port.

Chapter 2. Installing the Bridge

2.1 Hardware Installation

This chapter describes how to install the bridge and establishes network connections and may install the bridge on any level surface (e.g. a table or shelf or rail). However, please take note of the following minimum site requirements before one begin.

2.2 Pre-installation Requirements

Before you start the actual hardware installation, make sure you can provide the right operating environment, including power requirements, sufficient physical space, and proximity to other network devices that are to be connected.

Verify the following installation requirements:

- Power requirements: **DC 12V power.**
- The bridge should be located in a cool dry place, with at least **10cm/4in** of space at the front and back for ventilation.
- Place the bridge away from direct sunlight, heat sources, or areas with a high amount of electromagnetic interference.
- Check if the network cables and connectors needed for installation are available.
- **Do Not install phone lines strapped together with AC power lines, or telephone office line with voice signal.**
- **Avoid installing this device with radio amplifying station nearby or transformer station nearby.**



2.3 General Rules

Before making any connections to the bridge, please note the following rules:

- **Ethernet Port (RJ-45)**

All network connections to the bridge Ethernet port must be made using Category 5 UTP or above for 100Mbps, Category 3, 4 UTP for 10Mbps.

No more than 100 meters of cabling may be use between the MUX or HUB and an end node.

- **VDSL2 Port (RJ-11)**

All network connections to the RJ-11port must use **24~26** gauge with **twisted pair** phone wiring.

We **do not recommend** the use of the telephone line 28 gauge or above.

2.4 Connecting the Bridge

The bridge has two Ethernet ports which support connection to Ethernet operation. The devices attached to these ports must support auto-negotiation or 10Base-T or 100Base-TX unless they will always operate at half duplex. Use any of the Ethernet ports to connect to devices such as Monitor system, Server, Switch, bridge or router.

Notes:

1. The RJ11 Line port is used to connect to telephone that is connected to VDSL CO and CPE bridge (Point-to-point solution).
2. Slave device(CPE) must connect Master device(CO) through the telephone wire. Slave cannot connect to Slave, and Master cannot connect to Master. Please confirm the **DIP switch status** before the link is established.



2.5 Connecting the RJ-11 / RJ-45 Ports

- ◆ The line port has 2 connectors: RJ-45 and terminal block. It is used to connect from ALL-MC115VDSL2 (CO) using single pair phone cable to ALL-MC115VDSL2 (CPE) bridge side (point to point solution). Take note that ALL-MC115VDSL2 line port cannot be used at the same time. Either RJ-11 port is connected or terminal block is connected using straight connection (Figure 2.4) or cross-over connection (Figure 2.5)

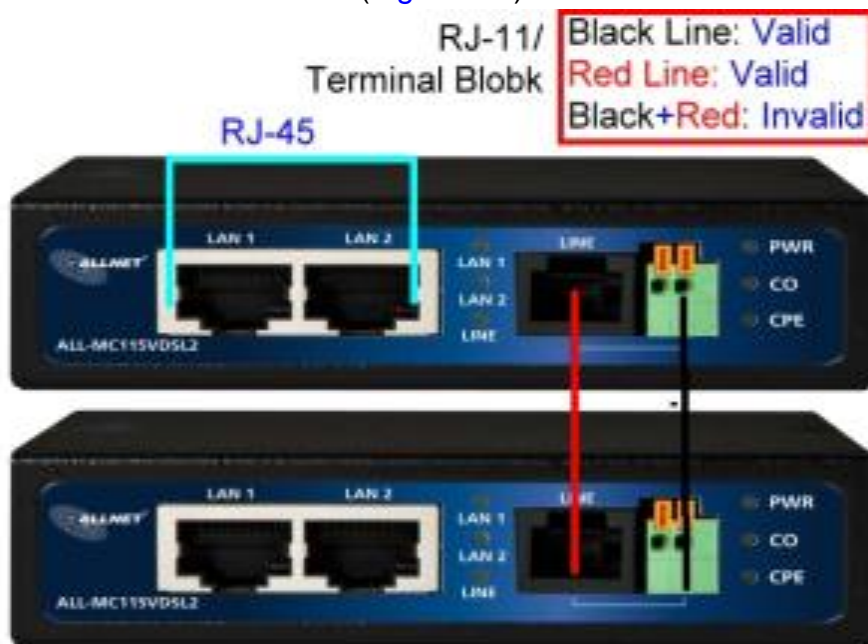


Figure 2.4 ALL-MC115VDSL2 line ports straight connection

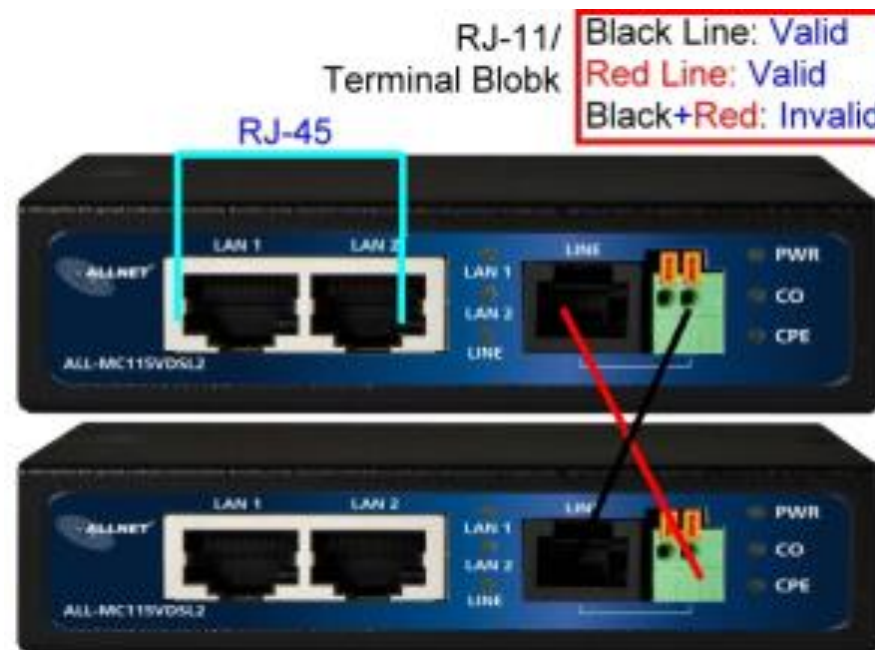


Figure 2.5 ALL-MC115VDSL2 line ports crossover connection



- ◆ When inserting a RJ-11 plug, make sure the tab on the plug clicks into position to ensure that it is properly seated.
- ◆ **Do not** plug a RJ-11 phone jack connector into the Ethernet port (RJ-45 port). This may damage the bridge. Instead, use only twisted-pair cables with RJ-45 connectors that conform to Ethernet standard.

Notes:

1. Be sure each twisted-pair cable (RJ-45 ethernet cable) does not exceed 100 meters (333 feet).
2. We advise using Category 5~7 UTP/STP cables for Cable bridge or Bridge connections to avoid any confusion or inconvenience in the future when you attached to high bandwidth devices.
3. RJ-11(VDSL2 Line port) use **24 ~ 26** gauge with twisted pair phone wiring, we do not recommend 28 gauge or above.
4. Be sure phone wire has been installed before ALL-MC115VDSL2 powered on.



2.6 VDSL2 bridge Application

The bridge's line port supports 100Mbps for data service across existing phone wiring. It is easy-to-use which do not require installation of additional wiring. Every modular phone jack in the home can become a port on the LAN. Networking devices can be installed on a single telephone wire that can be installed within suitable distance (depends on speed) (Figure 2.6)

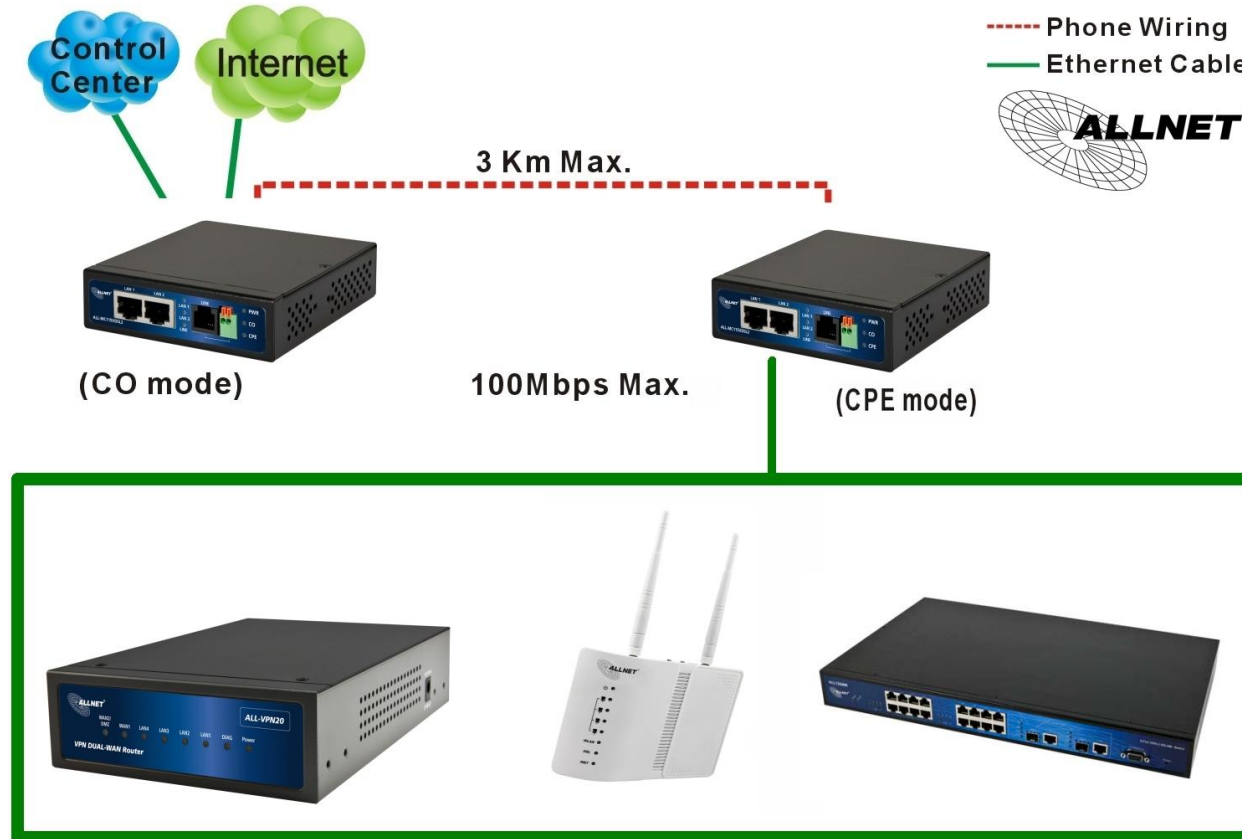


Figure 2.6 ALL-MC115VDSL2 point to point application diagram



Chapter 3. Hardware Description

This section describes the important parts of the bridge. It features the front panel, side panel and rear panel.



ALL-MC115VDSL2 Outward



3.1 Front Panel

The figure shows the front panel. (Figure 3.1)



Figure 3.1 Front Panel

Tip:

At a quick glance of the front panel, it is easy to determine if it has Ethernet signal from its RJ-45 port and if there is vdsl line signal on RJ-11 port.

And the table shows the description. (Table 3-1)

Table 3-1 Description of the bridge front connectors

Connectors	Type	Description
LAN1 / LAN2	RJ-45	For connecting to a Ethernet equipped device.
Line	RJ-11/Terminal Block	For connecting to VDSL2 bridge. (Do not use RJ11 and Terminal Block at the same time.)



3.1 Frontseite



Figure 3.1 Frontseite

Tipp:

Über die LED-Anzeige erkennen Sie, ob ein Ethernet-Signal an den RJ-45-Eingang anliegt, sowie ob die Verbindung für VDSL am RJ-11-Eingang synchron ist.

Connectors	Type	Description
LAN1 / LAN2	RJ-45	Schnittstelle für eine Ethernet-Verbindung.
Line	RJ-11/Terminal Block	Schnittstelle für eine VDSL2-Brücke (ACHTUNG: RJ11-Eingang und Klemmblock nicht gleichzeitig benutzen!!).



3.2 Front Indicators

The bridge has **Eight** LED indicators. The following Table shows the description. (Table 3-2)

Table 3-2 LED Indicators Description and Operation

LED	Color	Status	Descriptions
PWR (Power LED)	Green	On(Steady)	Lights to indicate that the VDSL2 bridge had power
		Off	The device is not ready or has malfunctioned.
LAN 1-2 (Ethernet LED)	Green	On(Steady)	The device has a good Ethernet connection.
		Blinking	The device is sending or receiving data.
		Off	The LAN is not connected.
CO (Local Side) (CO LED)	Green	On(Steady)	Indicate the VDSL2 bridge is running at CO(Master) mode.
CPE (Remote Side) (CPE LED)	Green	On(Steady)	Indicate the VDSL2 bridge is running at CPE(Slave) mode.
LINE (VDSL LINK LED)	Green	On(Steady)	The Internet or network connection is up.
		Blinking slowly	The CO device is auto-detecting CPE device.
		Blinking fastly	1. The CO device has detected a CPE device and ready to connect. 2. The device is sending or receiving data.
		Off	The Internet or network connection is down or has malfunctioned.

Note:

Two Bridges connection may take within 3 minutes is normal, due to ALL-MC115VDSL2 to establish a link mechanism is auto-negotiation, with detects and calculate CO and CPE both PBO and PSD level as well as noise level ...and other argument etc. for getting a better connection.



3.2 Frontanzeigen

Der ALL-MC115VDSL2 besitzt 8 Frontanzeigen, die in der folgenden Tabelle erklärt werden. (Table 3-2)

LED	Color	Status	Descriptions
PWR (Power LED)	Green	On(Steady)	Gerät ist an Stromzufuhr angeschlossen.
		Off	Keine Stromzufuhr oder defekt.
LAN 1-2 (Ethernet LED)	Green	On(Steady)	Stabile Ethernet-Verbindung.
		Blinking	Das Gerät sendet oder empfängt Daten.
		Off	Keine Ethernet-Verbindung.
CO (Local Side) (CO LED)	Green	On(Steady)	Bedeutet das Gerät ist als CO(Master) konfiguriert.
CPE (Remote Side) (CPE LED)	Green	On(Steady)	Bedeutet das Gerät ist als CPE(Slave) konfiguriert.
LINE (VDSL LINK LED)	Green	On(Steady)	Internet oder Netzwerkverbindung ist gegeben.
		Blinking slowly	Das Master-Gerät (CO) versucht eine Verbindung zum Slave (CPE) herzustellen.
		Blinking fastly	1. Das Master-Gerät (CO) hat eine Verbindung zum Slave (CPE) erkannt und stellt eine Verbindung her. 2. Das Gerät sendet oder empfängt Daten.
		Off	Internet- oder Netzwerkfunktion ist nicht vorhanden oder gestört.

Bitte beachten:

Der Verbindungsaufbau zwischen zwei Geräten kann bis zu 3 Minuten benötigen.



3.3 Rear Panel

The following figure shows the rear panel. (Figure 3.2)

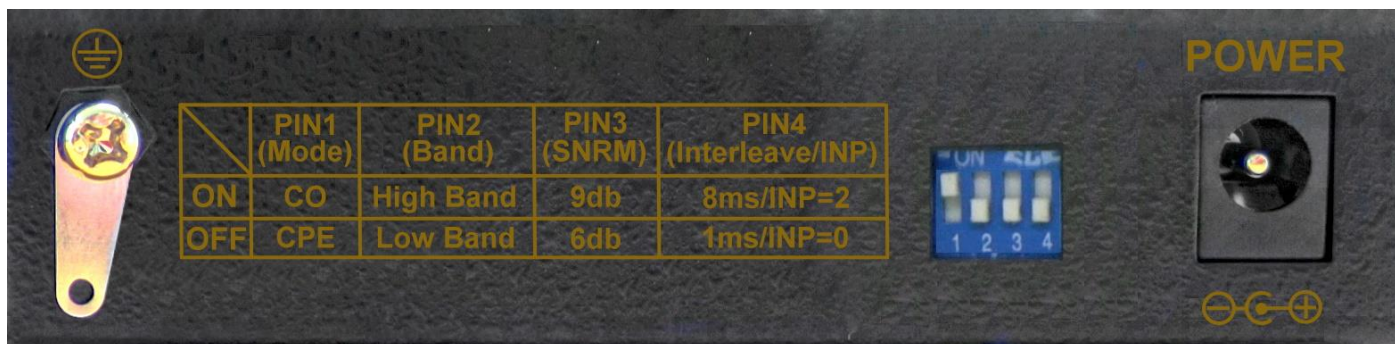



Figure 3.2 Rear Panel

And the table shows the description. (Table 3-3)

Table 3-3 Description of the bridge front connectors

Connectors	Type	Description
Power	DC Power Jack	External Power Adapter: Input: AC 85~240Volts/50~60Hz Output: DC 12V/1A
DIP Switch	4 Pins DIP Switch	Provide 4 selectable transmission modes.
Ground 	Earthing strip	Please connect the ground lug to the earth. To prevent a electric shock when user touches.

3.3 Rückseite

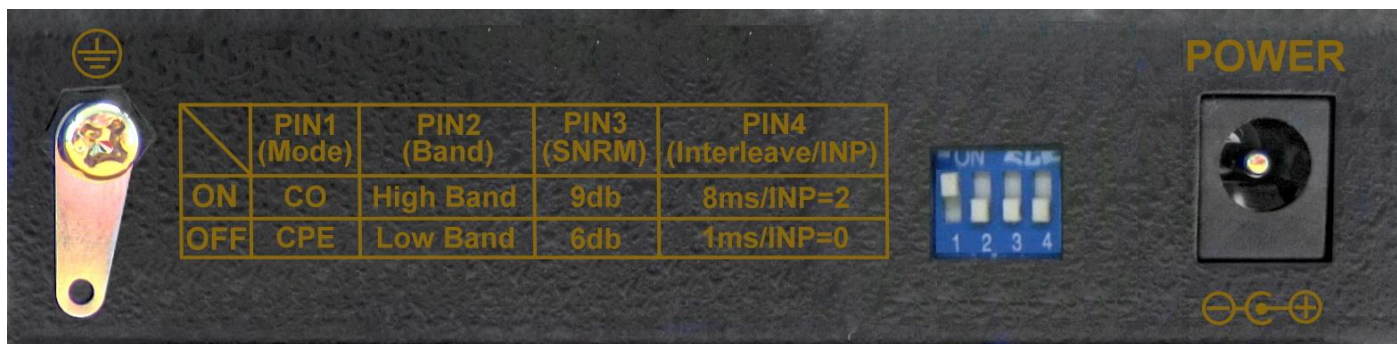



Figure 3.2 Rückseite

Connectors	Type	Description
Power	DC Power Jack	External Power Adapter: Input: AC 85~240Volts/50~60Hz Output: DC 12V/1A
DIP Switch	4 Pins DIP Switch	Bietet 4 verschiedene Einstellungen für die Übertragung.
Ground 	Earthing strip	Erdungsklemme, zum Schutz vor Stromschlag.



The following figure shows the DIP switch connection. By switching the transmission modes, you can obtain a best transmission mode to suit with phone line quality or distance or connectivity. (Figure 3.3)

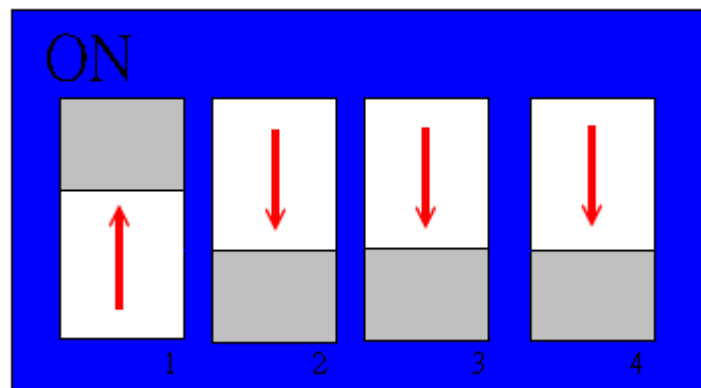


Figure 3.3 DIP switch setting

The following is table of DIP Switch configuration. (Table 3-4)

Table 3-4 DIP Switch Configuration

On/OFF	Pin 1	Pin 2	Pin 3	Pin 4
	CO/CPE Mode	Band	SNRM	Interleave / INP
On	CO Mode	High Band	9db	8ms / INP=2
Off	CPE Mode	Low band	6db	1ms / INP=0

Note:

1. The DIP switch default value are OFF.
2. Please power off ALLMC-115VDSL2, before making any transmission mode configuration.



◆ **PIN1:**

ON: CO(Central Office) Mode or called Local Side, usually the CO device will be located at the data enter of enterprise to link to the backbone.

OFF: CPE(Customer Premises Equipment) Mode or called Remote Side, usually the CPE side will be located at building, monitoring for car parks and train station as the long reach data receiver.

Tip:

When the ALL-MC115VDLS2 operates at **CPE** mode, the DIP switch 2, 3, 4 has **no function**.

◆ **PIN2:**

ON: High Band mode(500KHz to 30MHz), and enable VDSL2 spectrum is 500kHz to 30MHz. It can pass through **ISDN** spectrum(0 ~ 499KHz are empty).

OFF: Low Band Mode(25KHz to 30MHz), the ALL-MC115VDLS2 will auto-detect the cable length and auto choice speed mode. VDSL2 spectrum is 25KHz to 30MHz.

◆ **PIN3:**

When SNR margin is selected, the system provide **6db/9db** SNR margin for across all usable loop length. Please note that the 6db SNR margin is for telecom standard. Generally speaking, the higher SNR value gets better line quality, but lower performance.

◆ **PIN4:**

ON: Interleaved mode has a maximum end to end latency of **8m** sec and **INP=2**. When field environment has heavy noise, in order to obtain high link quality, user can config pin4 to “ON”, but this function will **reduce performance**.

OFF: Interleaved mode provides impulse noise protection for any impulse noise with a duration less than **1ms**.



◆ **PIN1:**

ON: Mit dieser Einstellung ist das Gerät als Master (CO) konfiguriert. Üblicherweise wird der Master am Backbone platziert.

OFF: Mit dieser Einstellung ist das Gerät als Slave (CPE) konfiguriert.

ACHTUNG:

Wenn der ALL-MC-115VDSL2 als **Slave (CPE)** konfiguriert wird, haben die Taster 2, 3, 4 keine Funktion.
Diese Einstellungen werden vom Master (CO) festgelegt.

◆ **PIN2:**

ON: High Band- Modus (500KHz to 30MHz), sendet über **ISDN**-Bandbreite (0 ~ 499KHz sind leer).

OFF: Low Band-Modus (25KHz to 30MHz). Das ALL-MC115VDSL2 wird die Kabellänge automatisch erkennen und die Geschwindigkeit daran anpassen. Die VDSL2-Bandbreite erfasst 25KHz bis 30MHz.

◆ **PIN3:**

Wenn SNRM ausgewählt wird sendet das Gerät mit **6db/9db**. Bitte beachten Sie dass 6db der Telekommunikations-Standard ist. Generell erzielen höhere SNR-Werte bessere Verbindungswerte, aber eine schlechtere Performance.

◆ **PIN4:**

ON:

Interleave-Modus. Diesen Modus können Sie aktivieren, wenn Sie Störungen auf der Leitung haben. Dadurch erzielen Sie eine bessere Verbindungsqualität, allerdings wird die Performance reduziert..

OFF: Deaktivierter Interleave-Modus für eine störungsfreie Leitung.




TIP(Reference Only):

Interleave delay function is used in digital data transmission technology to protect the transmission against noise issue and data error.

If during transit more than a certain amount of data has been lost then the data cannot be correctly decoded. Short bursts of noise on the line can cause these data packets to become corrupt and the bridge has to re-request data which in turn can slow down the overall rate at which data is transmitted.

Interleaving is a method of taking data packets, chopping them up into smaller bits and then rearranging them so that once contiguous data is now spaced further apart into a non continuous stream. Data packets are re-assembled by your bridge.

The diagram below is an example of how interleaved traffic is transmitted.

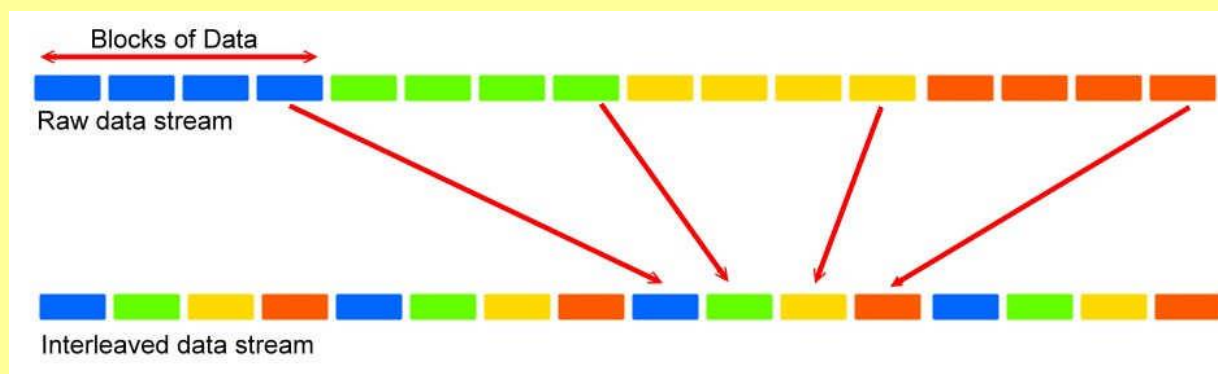

If your line is particularly susceptible to bursts of noise then interleaving should improve your VDSL2 experience simply because if you lose a whole batch of data then this could cause your bridge to loose sync with the exchange.

Using Interleaving, the bridge is able to re-assemble the data or if necessary just re-request the part of the data that it is unable to recover. By increasing the interleave depth of each ports that are susceptible to noise, this will improve error performance and stability of marginal lines.



INP(Impulse Noise Protection): Impulse noise in multicarrier communication systems behaves effectively as a modulating signal that controls the first moment of the background Gaussian noise. The composite noise, which is the aggregate of the Gaussian noise and impulse noise, has a probability density function that is conditionally Gaussian with non-zero average, hence referred to as biased-Gaussian. The BER-equivalent power of the composite noise source is defined as the power of a pure Gaussian noise source that yields the same bit-error rate (BER). The BER-equivalent noise for a biased-Gaussian noise is simply the amplified version of the underlying Gaussian noise source. The amplification factor is derived from the characteristics of the impulse interference. Any bit-loading algorithm designed for Gaussian noise sources is also applicable to biased-Gaussian noise sources provided that the BER-equivalent SNR is used in place of the measured SNR.

SNRM(Signal to Noise Ratio Margin): It's very similar to a conversation at a party and it's dealt with in the same way; we naturally account for both distance from the other person and the amount of background noise. When we do we don't just talk loud enough to be heard, we speak a bit louder waiting for the idiot with the stupid, loud laugh to start up again. We add a bit extra on to make sure we're louder than the average change in background noise.

That ratio is a major factor in determining the connection speed, as the higher the ratio the higher the possible speed. The SNRM is a margin which by which the noise level can rise before connection is lost.

Safety Caution!

- 1. Be sure to disconnect the power when installing(uninstalling) the terminal block and power cable.**
- 2. Please note that the user can use 12VDC power input. Do not exceed DC 12V.**
- 3. Be sure to disconnect the power before installing and/or wiring your ALL-MC115VDLS2 bridge.**
- 4. Please calculate the maximum possible current in each power wire and common wire. Observe all electrical codes dictating the maximum current allowable for each wire size. If the current goes above the maximum ratings, the wiring could overheat, causing serious damage to your equipment.**



Grounding the ALL-MC115VDLS2

ALL-MC115VDLS2 is designed to enhance EMS performance by grounding. ALL-MC115VDLS2 come with for grounding the switches. For optimal EMS performance, connection of the left side of the ALL-MC115VDLS2 rear panel ground lug to the grounding point.

Before user installed power and device, please read and follow these essentials:

- ◆ Use separate paths to route wiring for power and devices. If power wiring and device wiring paths must cross, make sure the wires are perpendicular at the intersection point.

Note:

Do not run signal or communications wiring and power wiring through the same wire conduit. To avoid interference, wires with different signal characteristics should be routed separately.

- ◆ You can use the type of signal transmitted through a wire to determine which wires should be kept separate. The rule of thumb is that wiring sharing similar electrical characteristics can be bundled together.
- ◆ You should separate input wiring from output wiring.
- ◆ We recommend that you mark all equipment in the wiring system.



Appendix A: Cable Requirements

Ethernet Cable

A CAT 3~7 UTP (unshielded twisted pair) cable is typically used to connect the Ethernet device to the bridge. A 10Base-T cable often consists of four pairs of wires, two of which are used for transmission. The connector at the end of the 10Base-T cable is referred to as an RJ-45 connector and it consists of eight pins. The Ethernet standard uses pins 1, 2, 3 and 6 for data transmission purposes. (Table A-1)

Table A-1 RJ-45 Ethernet Connector Pin Assignments

PIN #	MDI		MDI-X	
	Signal	Media Dependant interface	Signal	Media Dependant interface-cross
1	TX+	Transmit Data +	RX+	Receive Data +
2	TX-	Transmit Data -	RX-	Receive Data -
3	RX+	Receive Data +	TX+	Transmit Data +
4	--	Unused	--	Unused
5	--	Unused	--	Unused
6	RX-	Receive Data -	TX-	Transmit Data -
7	--	Unused	--	Unused
8	--	Unused	--	Unused

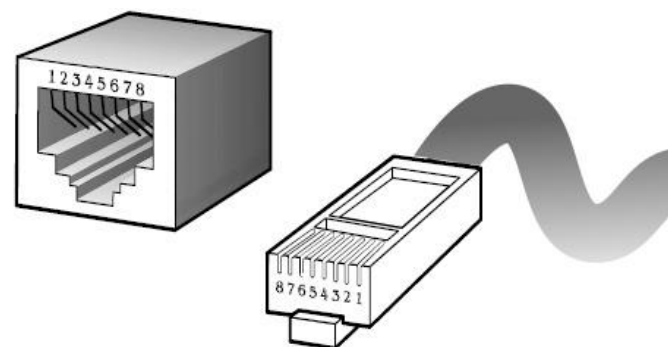


Figure A-1 Standard RJ-45 repeater/connector

Note:

Please make sure your connected cables are with same pin assignment as above table before deploying the cables into your network.

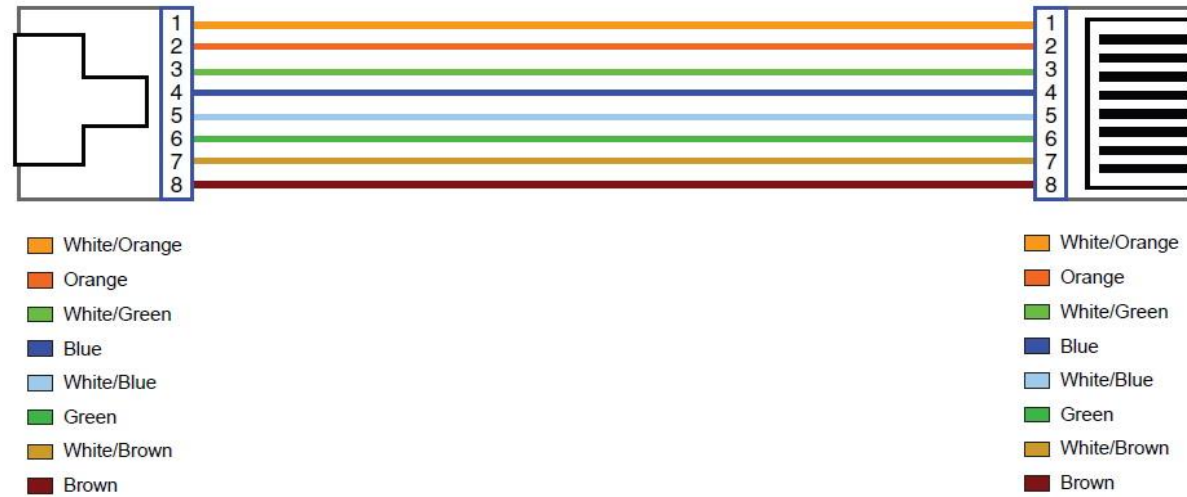


Figure A-2 Pin Assignments and Wiring for an RJ-45 Straight-Through Cable



Figure A-3 Pin Assignments and Wiring for an RJ-45 Crossover Cable



In diesem Bild sehen Sie ein Musterbeispiel für ein verdrehtes VDSL-Kabel

In this picture you can see a paradigm for twisted VDSL cable.



Bitte beachten:

Der Verbindungsaufbau sowie die Performance sind von der Verdrehungsqualität des Kabels abhängig. Unverdrehete Kabel im VDSL2-Übertragungsweg sind unbedingt zu vermeiden, da sonst Reichweite und erzielbare Geschwindigkeit erheblich reduziert werden können.

An der integrierten RJ-11 Buchse (Line) werden für das VDSL2-Signal die mittleren 2 Pins (Pin 2+3) verwendet.



Appendix B: Product Specification

Key Features & Benefits

- Supports RJ-11/Terminal Block combo for Line port.
- Supports high bandwidth up to 100Mbps symmetric over Line ports
- Support long reach mode up to 3 km with 24 gauge phone wire
- Support auto speed for Line port and Interleave mode selectable through CO side DIP switch
- DIP switch with CO and CPE mode selectable
- Supports long packet size up to 1536 bytes
- Supports Surge protection
- Supports wall mounting
- Supports DIN-Rail mount installation (Optional)
- Mini size and metal case design
- Supports point-to-point applications

Product Specification

Standard:	IEEE802.3 / IEEE802.3u standard G993.2 VDSL2 standard
Physical Interface:	2 x RJ-45 10/100Mbps auto-negotiation Ethernet port 1 x RJ-11/Terminal Block connector for VDSL2 line port 1 x DIP Switch



	1 x Power Jack
Cable Connections:	RJ-45 (Ethernet): Category 3~7 UTP/STP RJ-11 (VDSL2): Twisted Pair phone wire
LED Indicators:	1 x Power LED 2 x Link/Active Status for Ethernet port 1 x Link LED for VDSL2 port 1 x CO Mode indicator LED 1 x CPE Mode indicator LED
VDSL2 Line Code:	Discrete multitone (DMT) modulation
VDSL 2Transmission Mode:	Packet Transfer Mode (PTM)
Typical Power Consumption:	5 W
Power Requirement:	Input Voltage: 12VDC / 1A (Commercial-grade Power Adapter)
EMC:	EMI Compliant: FCC class B EMS Compliant: CE mark
Operating Temperature:	0°C ~ 50°C (32°F ~ 122°F) Fanless, free air cooling
Storage Temperature:	-20°C ~ 70°C (-4°F ~158°F)
Humidity:	10% to 90% (non-condensing)
Weight:	About 0.34 kg
Dimensions:	95 x 110 x 27 mm (3.74" x 4.33" x 1.06")



Appendix C: Troubleshooting

Diagnosing the Bridge's Indicators

The bridge can be easily monitored through its comprehensive panel indicators. These indicators assist the network manager in identifying problems the hub may encounter. This section describes common problems you may encounter and possible solutions.

1. Symptom:	POWER indicator does not light up (green) after power on.
Cause:	Defective External power supply
Solution:	Check the power plug by plugging in another that is functioning properly. Check the power cord with another device. If these measures fail to resolve the problem, have the unit power supply replaced by a qualified distributor.
2. Symptom:	Link indicator does not light up (green) after making a connection.
Cause:	Network interface (ex. a network adapter card on the attached device), network cable, or switch port is defective.
Solution:	<ol style="list-style-type: none">2.1 Power off and re-power on the VDSL bridge.2.2 Verify that the bridge and attached device are power on.2.3 Be sure the cable is plugged into both the bridge and corresponding device.2.4 Verify that the proper cable type is used and its length does not exceed specified limits.2.5 Check the bridge on the attached device and cable connections for possible defects.2.6 Make sure the phone wire must be connecting ALL-MC115VDLS2 first, when powered on.2.7 Replace the defective bridge or cable if necessary.



3. Symptom:	VDSL Link cannot be established.
Cause:	VDSL setting failure or phone cable length is over the specification limit.
Solution:	<p>3.1 Please make sure that the phone wire must be connected between ALL-MC115VDLS2 (CO) and ALL-MC115VDLS2 (CPE) when both are power on. ALL-MC115VDLS2 (CO) will do link speed function depending on phone wire length, therefore if ALL-MC115VDLS2 (CO) can't detect ALL-MC115VDLS2 (CPE) over phone wire while both power on, this will cause the link to fail.</p> <p>3.2 Please check the phone wire, we recommend use 24 gauge with twisted pair and without rust, and the length is not over 3 km.</p> <p>3.3 Please check the correct Dip Switch setting. (CO: PIN1 ON, CPE: PIN1 OFF)</p> <p>3.4 Please reinsert power adapter when changing cable length or link time over 3 minutes.</p>
Note:	Phone wire must meet CAT 3 standard or above and without clustering , otherwise will cause more cross talk issue to reduce DSL power driver.

4. Problem:	What is VDSL2?
Answer:	<p>Very-high-speed digital subscriber line 2 (VDSL2) is an access technology that exploits the existing infrastructure of copper wires that were originally deployed for traditional telephone service. It can be deployed from central offices, from fiber-optic connected cabinets located near the customer premises, or within buildings. It was defined in standard ITU-T G.993.2 finalized in 2005.</p> <p>VDSL2 was the newest and most advanced standard of digital subscriber line (DSL) broadband</p>



wireline communications. Designed to support the wide deployment of triple play services such as voice, video, data, high definition television (HDTV) and interactive gaming, VDSL2 was intended to enable operators and carriers to gradually, flexibly, and cost-efficiently upgrade existing xDSL infrastructure.

The protocol was standardized in the International Telecommunication Union telecommunications sector (ITU-T) as Recommendation G.993.2. It was announced as finalized on 27 May 2005,[1] and first published on 17 February 2006. Several corrections and amendments were published in 2007 through 2011.

VDSL2 is an enhancement to very-high-bitrate digital subscriber line (VDSL), Recommendation G.993.1. It permits the transmission of asymmetric and symmetric aggregate data rates up to 200 Mbit/s downstream and upstream on twisted pairs using a bandwidth up to 30 MHz.

VDSL2 deteriorates quickly from a theoretical maximum of 250 Mbit/s at source to 100 Mbit/s at 0.5 km (1,600 ft) and 50 Mbit/s at 1 km (3,300 ft), but degrades at a much slower rate from there, and still outperforms VDSL. Starting from 1.6 km (1 mi) its performance is equal to ADSL2+.

ADSL-like long reach performance is one of the key advantages of VDSL2. LR-VDSL2 enabled systems are capable of supporting speeds of around 1–4 Mbit/s (downstream) over distances of 4–5 km (2.5–3 miles), gradually increasing the bit rate up to symmetric 100 Mbit/s as loop-length shortens. This means that VDSL2-based systems, unlike VDSL1 systems, are not limited to short local loops or MTU/MDUs only, but can also be used for medium range applications.



5. Problem:	What is SNR(Signal-to-Noise)
Answer:	<p>Signal-to-noise ratio (often abbreviated SNR or S/N) is a measure used in science and engineering that compares the level of a desired signal to the level of background noise. It is defined as the ratio of signal power to the noise power. A ratio higher than 1:1 indicates more signal than noise. While SNR is commonly quoted for electrical signals, it can be applied to any form of signal (such as isotope levels in an ice core or biochemical signaling between cells). The ratio is usually measured in decibels(dB)</p> <p>The signal-to-noise ratio, the bandwidth, and the channel capacity of a communication channel are connected by the Shannon–Hartley theorem.</p> <p>In digital communications, the SNR will probably cause a reduction in data speed because of frequent errors that require the source (transmitting) computer or terminal to resend some packets of data. SNR measures the quality of a transmission channel over a network channel. The greater the ratio, the easier it is to identify and subsequently isolate and eliminate the source of noise.</p>
6. Problem:	Connected the Co and CPE within 300 meters RJ-11 phone cable got only less than 10 Mbit/s
Cause:	<ol style="list-style-type: none"> 1. Some testing program which is base on TCP/IP protocol such as FTP, Iperf, NetIQ, the bandwidth of testing outcome will be limited by TCP window size. 2. Some operating system limited the maximum bandwidth, such as windows series OS.
Solution:	We recommend to test VDSL2 bandwidth best by Smartbit equipment(Packet generator), if you don't have Smartbit, we recommend test that by IPERF program, and TCP window size must be setted max. 64k, the parameter as iperf -c server IP address -i 1 -t 50 -w 65535 for client side.



System Diagnostics

Power and Cooling Problems

If the POWER indicator does not turn on when the power cord is plugged in, you may have a problem with the power outlet, power cord, or internal power supply as explained in the previous section. However, if the unit power is off after running for a while, check for loose power connections, power losses or surges at the power outlet. If you still cannot isolate the problem, then the internal power supply may be defective. In this case, please contact your local dealer.

Installation

Verify that all system components have been properly installed. If one or more components appear to be malfunctioning (e.g. the power cord or network cabling), test them in an alternate environment where you are sure that all the other components are functioning properly.

Transmission Mode

The default method of selecting the transmission mode for RJ-45 ports is 10/100 Mbps ETHERNET, for RJ-11 port are auto-negotiation VDSL. Therefore, if the Link signal is disrupted (e.g. by unplugging the network cable and plugging it back in again, or by resetting the power), the port will try to reestablish communications with the attached device via auto-negotiation. If auto-negotiation fails, then communications are set to half duplex by default. Based on this type of industry-standard connection policy, if you are using a full-duplex device that does not support auto-negotiation, communications can be easily lost (i.e. reset to the wrong mode) whenever the attached device is reset or experiences a power fluctuation. The best way to resolve this problem is to upgrade these devices to a version that support Ethernet and VDSL.



Physical Configuration

If problems occur after altering the network configuration, restore the original connections, and try to track the problem down by implementing the new changes, one step at a time. Ensure that cable distances and other physical aspects of the installation do not exceed recommendations.

System Integrity

As a last resort verify the switch integrity with a power-on reset. Turn the power to the switch off and then on several times. If the problem still persists and you have completed all the preceding diagnoses, then contact your dealer.



Appendix D: Compliance Information

FCC Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a computing device, pursuant to Part 15 of FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. The equipment and the receiver should be connected to outlets on separate circuits.
4. Consult the dealer or an experienced radio/television technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If this telephone equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the



proper functioning of your equipment. If they do, you will be notified in advance in order for you to make necessary modifications to maintain uninterrupted service.

This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs.

FCC Warning



This equipment has been tested to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment can generate, use, and radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at owner's expense.

CE Mark Warning



This is a class B product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.



WEEE Warning



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.



Appendix E: Performance Table

Master	Slave	Configuration	Speed in Mbps
ALL126AM2	ALL-MC115VDSL2	17a / Annex C / Filter Off / B43	93 / 40
ALL126AM2	ALL-MC115VDSL2	17a / Annex C / Filter Off / V43	93 / 40
ALL126AM2	ALL-MC115VDSL2	30a / Annex A M1_EU32 / Filter Off / V43	94 / 85
ALL126AM2	ALL-MC115VDSL2	30a / Annex A M1_EU32 / Filter Off / B43	90,5 / 94
ALL126AM2	ALL-MC115VDSL2	17a / Annex B998-M1x-B (B08)/ Filter Off / B43	90,5 / 37
ALL-MC115VDSL2	ALL-MC115VDSL2	Master: Pin 1 on / Pin 2 3 4 off	94 / 94
ALL-MC115VDSL2	126AS2	Master: Pin1&2 on Pin 3&4 off Slave: ToneMode A43	94 / 50,5

**Test Environment:**

Test Items	Descriptions
VDSL2 Bridge CO Mode x 1	ALL-MC115VDLS2 CO Mode
VDSL2 Bridge CPE Mode x 1	ALL-MC115VDLS2 CPE Mode
Operation System	Windows XP
Ethernet Cable	Cat 5e. UTP RJ-45 8P8C Ethernet Cable
Phone Wire	24 AWG simulator card
Room temperature	26 degree C

Test Conditions:

Test Items	Descriptions
Noise injection	None
Spectrum: 25K~30MHz	VDSL 2 Low Band Mode / Config CO side pin2 OFF via DIP Switch
Spectrum: 500K~30MHz	VDSL 2 High Band Mode / Config CO side pin2 ON via DIP Switch



(A). Spectrum: **25K~30MHz** (US: Up Stream / DS: Down Stream)

Cable Length (meters)	US [Mbps]	DS [Mbps]	Cable Length (meters)	US [Mbps]	DS [Mbps]	Cable Length (meters)	US [Mbps]	DS [Mbps]
100	100	100	800	28.58	26.87	2000	2.50	14.92
200	100	100	900	24.12	25.45	2200	2.05	13.36
300	100	100	1000	23.04	22.03	2400	1.94	11.52
400	72.91	73.3	1200	16.81	16.82	2600	1.80	9.01
500	57.09	55.79	1400	12.33	16.53	2800	1.73	7.14
600	46.99	44.25	1600	5.72	15.9	3000	1.65	5.43
700	39.40	32.06	1800	4.65	15.08			

(B). Spectrum: **500k~30MHz** (US: Up Stream / DS: Down Stream)

Cable Length (meters)	US [Mbps]	DS [Mbps]	Cable Length (meters)	US [Mbps]	DS [Mbps]	Cable Length (meters)	US [Mbps]	DS [Mbps]
100	100	100	800	24.60	29.97	2000	8.34	6.07
200	100	100	900	24.12	28.58	2200	5.48	5.72
300	100	90.41	1000	19.14	27.39	2400	3.39	5.27
400	74.06	75.61	1200	14.34	18.51	2600	1.72	4.78
500	52.19	62.39	1400	14.3	13.78	2800	0.71	4.42
600	42.18	44.17	1600	11.11	7.98			
700	37.25	29.76	1800	8.74	7.12			

Note:

The performance data above is for reference only, the actual data rate will vary on the quality of the copper wire and environment factors.



Warranty

The original product that the owner delivered in this package will be free from defects in material and workmanship for one year parts after purchase.

There will be a minimal charge to replace consumable components, such as fuses, power transformers, and mechanical cooling devices. The warranty will not apply to any products which have been subjected to any misuse, neglect or accidental damage, or which contain defects which are in any way attributable to improper installation or to alteration or repairs made or performed by any person not under control of the original owner.

The above warranty is in lieu of any other warranty, whether express, implied, or statutory, including but not limited to any warranty of merchantability, fitness for a particular purpose or any warranty arising out of any proposal, specification or sample. We shall not be liable for incidental or consequential damages. We neither assume nor authorize any person to assume for it any other liability.



WARNING:
DO NOT TEAR OFF OR REMOVE THE WARRANTY STICKER AS SHOWN, OR THE WARRANTY IS VOID.



CE-Declaration of Conformity

For the following equipment:

Germering, 30th of August, 2013

VDSL2 100Mbit Mini Modem Master/Slave

ALL-MC115VDSL2



The safety advice in the documentation accompanying the products shall be obeyed. The conformity to the above directive is indicated by the CE sign on the device.

The Allnet ALL-MC115VDSL2 conforms to the Council Directives of 2004/108/EC.

This equipment meets the following conformance standards:

EN55022:2010, Class A

EN55024:2010

EN61000-3-2:2006+A1:2009+A2:2009

IEC61000-4-2:2008

EN61000-3-3:2008

IEC61000-4-3:2006+A1:2007+A2:2010

IEC61000-4-4:2004+A1:2010

IEC61000-4-5:2005

IEC61000-4-6:2008

IEC61000-4-8:2009

IEC61000-4-11:2004

This equipment is intended to be operated in all countries.



This declaration is made by
ALLNET Computersysteme GmbH
Maistraße 2
82110 Germering
Germany

Germering, 30.08.2013



Wolfgang Marcus Bauer
CEO