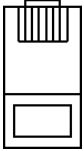



Quick Installation Guide


G.Fast SFP Module

G.Fast Interface Pin Assignments (RJ-45)


The G.Fast interface is a standard eight-pin modular jack. The table below displays the pin out assignment.

Pin Number	Description	Top View
1	Not Used	
2	Not Used	
3	Not Used	
4	Analog Input	
5	Analog Input	
6	Not Used	Front View
7	Not Used	
8	Not Used	

LED1 (Orange)
Indicator

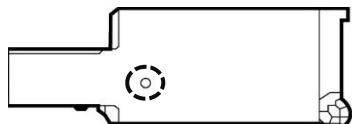

LED2 (Green):
DSL Link Status Indicator

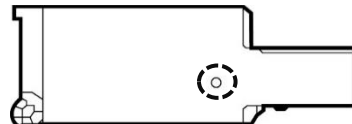

<Quick Installation>

STEP 1:

Insert G.Fast SFP Module to host device. LED1 turns orange when device is powered. Check for physical connection with the COE (IP DSLAM/MSAN) - You shall see LED 2 flashing green slowly as soon as you insert the device.

STEP 2:

Link time takes about 60 secs. Fast flashing Green LED2 indicates DSL training. LED2 on G.Fast SFP Module stays Green when devices link up.

CAUTION! The device gets hot while operating, do not touch it directly with your hands.

LEDs display behaviors

LED	Color	Active	Description
LED1	Orange	Off	Device has no power
		On	Device has power
LED2	Green	Off	No DSL connection
		Blinking	DSL trying to train
		On	DSL link is on

CE

ALLNET GmbH Computersysteme declares that the device **ALL4783-G.fast-SFP** is in compliance with the essential requirements and other relevant provisions of Directive 2014/30/EU. The Declaration of conformity can be found under this link: <http://ce.allnet.de/>

ALLNET GmbH Computersysteme
Maistrasse 2
82110 Germering

Tel.: +49 (0)89 894 222 - 22

Fax: +49 (0)89 894 222 - 33

Email: info@allnet.de