



Quick Installation Guide ALL0238RD

Package Contents



ALL0238RD



Original CD



 
Quick Installation Guide



Ethernet Cable (RJ45)


STEP 1 Installation

- Plug in the ALL0238RD repeater to the power outlet.
- Connect the ethernet cable to the ALL0238RD repeater and to the computer.

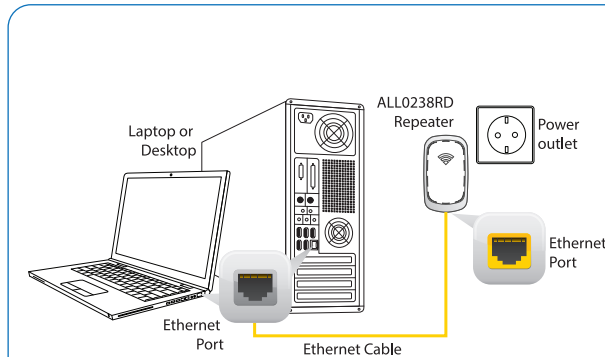


Step 2 Connecting the ALL0238RD to the Wireless Network

 - Launch the internet browser from your computer. Open the webinterface with IP: 192.168. 1. 1
User name: „admin“ password: „admin“

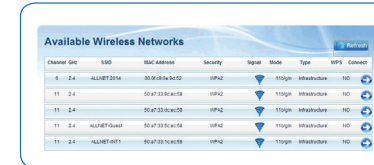

 - Choose SSID (Wireless Network Name) from the list and click ➔ to connect.

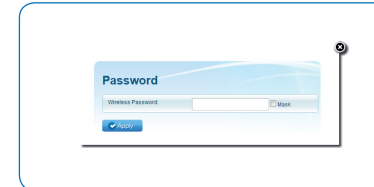

- Input the Wireless Password for the network and click on Apply.

Step 3 Place the ALL0238RD Repeater Between Wireless Router and the Blind Spot

The ALL0238RD repeater will connect to the wireless network and will redirect to the user interface with the following status.



- Disconnect the ethernet cable from the computer and the ALL0238RD repeater.
- Place the ALL0238RD repeater between the wireless router and the blind spot.

Assess and identify the areas in your house where the wireless reception from your main router is weak or no wireless signal. Place the ALL0238RD repeater between the wireless router and the point of weak wireless signal. It is ideal for the ALL0238RD repeater to be placed in a location, where it can receive good wireless signal from the wireless router.



Step 4 Connect Your Wireless Devices to the Repeater

- Connect your wireless devices to the ALL0238RD repeater's wireless network.



Throughput vs Wireless Coverage



Wireless reception and throughput may vary according to the number of wireless clients that are in use at the same time, other nearby wireless devices, structure type, building materials and other interference present.