


* Windows 2000/XP/2003 Server/Vista/WIN7:

I. Install the Driver and Utility


The following installation operates under Windows XP. Procedures are similar for Windows 2000/2003 Server/Vista/WIN7.

Please do not install the adapter into your computer before installing the software program from the CD.

A. Insert the Installation CD to your CD-ROM Drive. Execute the "setup" program.

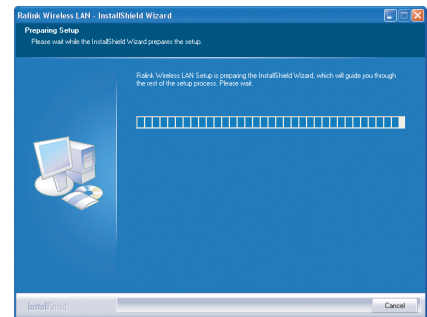


B. Click "I accept the terms of the license agreement" and click "Next" button to continue.

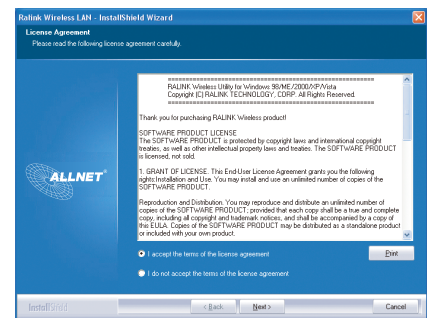


1


C. There are 2 selections in this page, please choose " Install driver and Ralink WLAN Utility" to install the driver and utility.

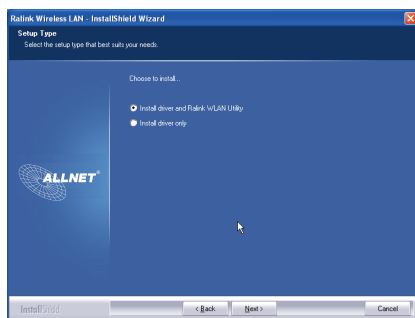


D. In Windows XP, you can choose install "Ralink Configuration Tool" or " Microsoft Zero Configuration Tool". Suggest to install the Ralink Configuration Tool as default.

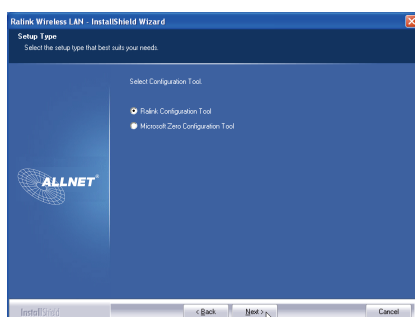

E. The system starts to install the software of the adapter. Please follow the instructions of the program to plug in the adapter into the USB port of your computer. And the system will automatically detect the adapter.

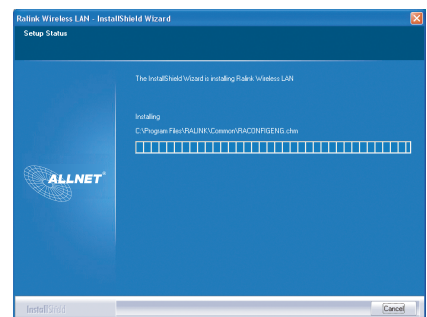


F. Please click "Finish" to complete the installation.

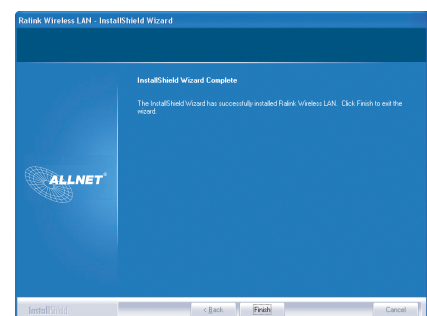

II. Use the Ralink Configuration Utility

When the adapter is installed, the Ralink configuration utility will be displayed automatically. This adapter will auto connect to wireless device which has better signal strength and no wireless security setting.

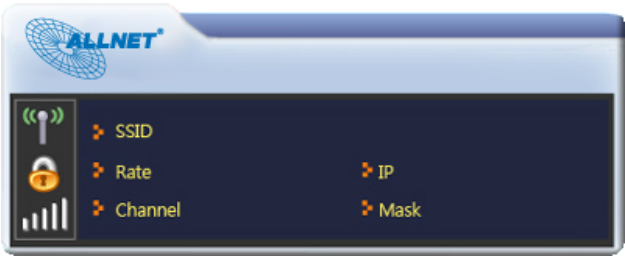


There will be an icon displayed in the system tray. You can double click the icon in the system tray to open the Ralink configuration utility.



In Windows XP, there is a "Windows Zero Configuration Tool" for you to setup wireless clients. If you want to switch to use Ralink configuration utility, please follow one of the ways as below.

4


C. Uncheck "Use Windows to configure my wireless network settings" to enable the utility for the adapter.

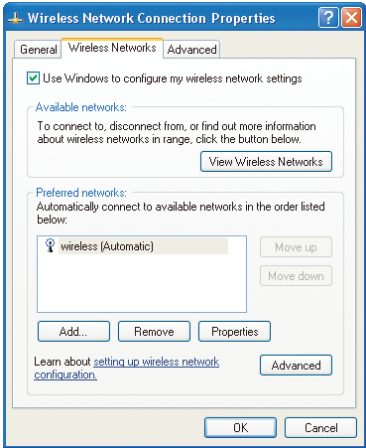

Note: If "Wireless Zero Configuration" is enabled, you can only configure the advance setting or check the link status and statistics from the configuration utility of the adapter.

First Way

Right click the icon in the system tray and select "Use RaConfig as Configuration utility".




Second Way

A. Right-click the icon and select "View Available Wireless Networks".



B. Click "Advanced".

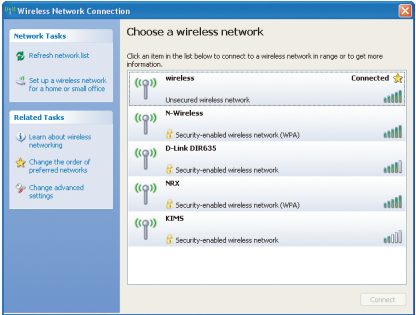

5

