



User Manual



ALL-HS02530

Hotspot in a Printer

Default-IP:

10.59.1.1

Username: admin

Password: admin

Disclaimer

We shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from furnishing this material, or the performance or use of this product. We reserve the right to change the product specification without notice. Information in this document may change without notice.

Trademarks

Microsoft Win98, Windows 2000, WinXP, Win Vista and Win7 are registered trademarks of Microsoft Corporation.

General: All other brand and product names mentioned herein may be registered trademarks of their respective owners. Customers should ensure that their use of this product does not infringe upon any patent rights. Trademarks mentioned in this publication are used for identification purposes only and are properties of their respective companies.

Contents

1	Introduction	4
1-1	Package Contents.....	5
1-2	Features	5
1-3	Precautions	6
1-4	Outlook	6
1-4-1	Printing a test page	8
1-4-2	How to load paper rolls.....	9
1-5	Technical Specifications	10
1-5-1	Hardware Specifications	10
1-5-2	Software Specifications.....	11
2	Installation	14
2-1	Connecting the Antennas	14
2-2	Installation Requirements.....	14
2-3	Getting Start.....	16
3	Configuring the ALL-HS02530	18
3-1	Setting Wizard.....	18
3-2	Advanced Setup	28
3-2-1	AUTHENTICATION	29
3-2-1-1	Authentication	29
3-2-1-2	RADIUS	31
3-2-2	BILLING	33
3-2-2-1	Billing.....	33
3-2-2-2	Accounting	36
3-2-3	MANAGEMENT.....	44
3-2-3-1	Syslog.....	44
3-2-3-2	Session Trace.....	50
3-2-3-3	Bandwidth	53
3-2-3-4	SNMP	54
3-2-4	SECURITY	55
3-2-4-1	Pass Through	55
3-2-4-2	Filtering	57
3-2-4-3	Secure Remote	59
3-2-5	SYSTEM.....	60
3-2-5-1	System	60

3-2-5-2	WAN/LAN	63
3-2-5-3	Server	67
3-2-5-4	Customization	70
3-2-5-5	Portal Page	79
3-2-5-6	Advertisement.....	80
3-2-5-7	Walled Garden	81
3-2-5-8	DDNS	82
3-2-5-9	Wireless.....	85
3-3	System Status.....	88
3-3-1	System.....	89
3-3-2	Account List.....	90
3-3-3	Account Log.....	92
3-3-4	Current User.....	93
3-3-5	DHCP Clients	94
3-3-6	Session List	94
3-4	System Tools	95
3-4-1	Configuration	96
3-4-2	Firmware Upgrade	98
3-4-3	Boot Code.....	100
3-4-4	Controller Board Firmware	100
3-4-5	System Account.....	101
3-4-6	SSL Certificate	105
3-4-7	Ping Command	106
3-4-8	Restart.....	106
3-4-9	Logout	106
4	QR Code Service	107
4-1	QR code setting.....	107
4-2	Additional information for QR code use.....	108
4-3	Use QR code to access the Internet.....	109
5	Personal ID Recognition	113
5-1	Personal ID Recognition Setting.....	114
	Appendix A Signal Connection Arrangements	118
	Appendix B Regulations/EMI Compliance	119
	LIMITED WARRANTY	120
	ALLNET GPL Code Statement	131

1 Introduction

The ALL-HS02530 is a compact intelligent gateway. It provides Plug' Play Internet access, advanced security and network management.

The ALL-HS02530 is designed for service providers, system integrator or hotspot venue operator without backend-RADIUS-Server to have integrated solution for rapid deployment, which can start hotspot service quickly and easily and enhance service performance.

The ALL-HS02530 is an ideal solution for hotel lobbies, coffee bars, airport lounges, conference facilities and other sites that commonly host business travelers, and offers instant high-speed Internet connections. With its IP Plug and Play technology, it accepts any client configuration login, when client open browser the ALL-HS02530 immediately recognizes new end-user and redirects their browser to customized Web pages. There's no need for end-user to change any of their default network (Static IP), e-mail (SMTP Server behind firewall), or browser settings (HTTP Proxy) or load any special software to access hotspot service. It's completely Plug' Play with any browser.

The ALL-HS02530 provides QR code service. You can install any QR code APP to your mobile device, and then scan QR code on the ticket to get access of the Internet! You could save the time to key the account and the password.

1-1 Package Contents

Please inspect your package. The following items should be included:

ALL-HS02530

- One ALL-HS02530
- One Thermal papers (50 meter)
- One Power Adapter
- One Ethernet Cable (1.5 meter)
- One Quick Installation Guide
- Two Detachable Antenna
- One Product CD

If any of the above items are damaged or missing, please contact your dealer immediately.

1-2 Features

- Wireless data rates up to 300 Mbps
- Supports up to 30 simultaneous Users
- IP Plug and Play (iPnP)
- Comprehensive security
 - 64/128-bit WEP encryption
 - WPA encryption
 - WPA2 Encryption
 - IP/URL filtering
- Intelligent Management
- Built-in AAA (Authentication/Accounting/Authorization) and Billing mechanism
- Internet access via QR code scanning

Note: The "PnP" Function only can be used with TCP/IP-based Network.

1-3 Precautions

- Never remove or open the cover. You may suffer serious injury if you touch these parts.
- Never install the system in the wet locations.
- Use only the original fitting AC power adapter otherwise there is a danger of severe electrical shock.
- Avoid exposing the ALL-HS02530 to direct sunlight or another heat source.
- Choose a well-ventilated area to position your ALL-HS02530.

1-4 Outlook



Figure 1-4-1 ALL-HS02530

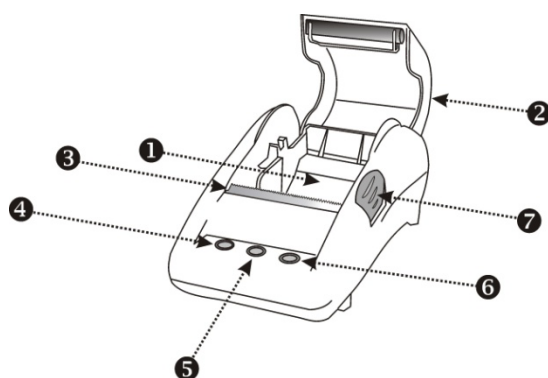


Figure 1-4-2 Front Panel

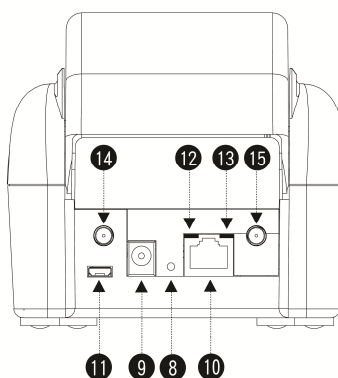


Figure 1-4-3 Rear Panel

1. Paper roll housing
2. Printer Cover
3. Tear Bar, for paper cutting
4. Button A
5. Button B
6. Button C
7. Push Button, for printer cover opening
8. Reset Button
9. DC power supply connector
10. RJ45 port
11. Micro USB connector
12. WLAN LED (Green)
13. UPLINK LED (Yellow)
14. SMA connector
15. SMA connector

● **WLAN LED:**

Off: The wireless is not ready.

Green light: The ALL-HS02530 has established a valid wireless connection.

Green Blinking: The wireless connection is active.

- **UPLINK LED:**
Off: A port has not established any network connection.
Yellow light: A port has established a valid 10/100 Mbps network connection.
Yellow Blinking: 10/100 Mbps traffic is traversing the port.
- **Reset Button:** The ALL-HS02530 has a reset button at the rear panel of the device. Use this function to reset the system back to factory defaults.
➔ **PRESS THE BUTTON 30 SECONDS TO RESET.**
- **Power Jack:** Used to connect the external power supply with the ALL-HS02530.

1-4-1 Printing a test page

After you have installed your printer, you should print a test page to make sure the printer is functioning properly. To do this act as follows:

1. Turn the printer off.
2. Hold down the button A for approximately five seconds, and then turn the printer on.
3. The printer will print a test page.

1-4-2 How to load paper rolls

Please follow the steps to correctly load paper rolls.

1



2



3



4



Figure 1-4-4 Paper rolls loading

1-5 Technical Specifications

1-5-1 Hardware Specifications

Network Specification

- IEEE802.3 10BaseT Ethernet
- IEEE802.3u 100BaseTX Fast Ethernet
- IEEE802.11b/g/n Wireless LAN
- ANSI/IEEE 802.3 NWay auto-negotiation
- Wi-Fi Compatible

Connectors

- One WAN Port (10BaseT/100BaseTX Auto cross-over)
- One Micro USB connector

Encryption

- WEP (Wired Equivalent Privacy) 64/128-bit RC4
- WPA (Wi-Fi Protected Access)
- WPA2 (Wi-Fi Protected Access)

External Antenna Type

- Dual detachable diversity antenna with reverse SMA

LED Indicators

- One POWER LED
- One WAN 10/100M Link/Activity LED
- One Wireless Link/Activity LED
- One System LED

Power Requirement

- External Power Adapter
- Input: 100-240 VAC, 50/60 Hz
- Output: 12V, 1.5A

Environment Conditions

- Operating Temperature: 0 to 50°C
- Storage Temperature: -10 to 60°C
- Operating Humidity: 20~80% non-condensing
- Storage Humidity: 20% to 90% non-condensing

Certifications

- FCC part 15 Class B, CE , C-Tick , VCCI

Dimension

- Size: 109×155×90 (W×D×H)mm
- Weight: About 340g (Net)

Printer Tray

- Push button: push to open printer cover
- Tear bar: cuts receipt paper
- Button A: flashing when printer cover is opened
- Paper roll housing: put paper roll here

Paper Roll and Printing

- Paper width: 58 (+0/-1)mm
- Paper length: 50M (max.)
- Paper thickness: 65 um
- Paper roll outside diameter: 63 (+2/-2) mm
- Paper roll inside diameter: 12 (+0.5/-0) mm
- Paper Detection: Photo interrupter
- Printing width: 48 mm
- Printing Method: Direct thermal
- Printing Speed: 25.4 mm/ sec
- Dot resolution (dots/ mm): 8 (203 dpi)
- Thermal head service life: 1 pulses or 50Km

1-5-2 Software Specifications

Networking

- IEEE802.3 10BaseT Ethernet
- IEEE802.3u 100BaseTX Fast Ethernet
- IEEE802.11b Wireless LAN
- IEEE802.11g Wireless LAN

- IEEE802.11n Wireless LAN
- Supports 30 Simultaneous Users
- IP Plug and Play (iPnP)
- HTTP Proxy Support
- WEP64/128bit
- WPA-PSK (TKIP)
- WPA2-PSK(AES)
- WPA/WPA2 Mix mode
- SMTP Server Redirection
- DHCP Server(RFC 2131)
- DHCP Relay(RFC 1542)
- Static IP WAN Client
- DHCP WAN Client
- PPPoE WAN Client(RFC 2516)
- PPTP WAN Client
- NAT(RFC 1631)
- IP Routing
- NTP (Network Time Protocol) Support
- Local Account: 256
- Max Session Number: up to 16384

Marketing Cooperation

- Advertisement URL link
- Walled garden
- Customizable log-on and log-off pages
- Portal Page

User Accounting and Authentication

- Built-in Authentication
- Web-based Authentication
- RADIUS AAA Support (RFC 2865, 2866)
- Secondary RADIUS
- User Authentication and Accounting
- Logout Window Timer Control

Security and Firewall

- Layer 2 Isolation Security

- SSL User Login page/ Configuration Page
- SSL Administration
- VPN Pass through (IPSec/PPTP)
- Customize SSL Certificate
- Pass Through IP/MAC/URL Address
- Restricted Destination Filtering IP/URL
- VPN (IPSec/PPTP) Pass through
- PPTP VPN Client
- WEP
- WPA
- WPA2
- WPA/WPA2 Mix mode

Management

- Web-based Management Tool
- Firmware Upgrade via HTTP/TFTP
- Wizard setup for step-by-step Configuration
- Backup/Restore/Factory Default Setting
- Remote Authorized Management
- Real-time Session List
- Syslog (System/Subscriber/LAN device)
- E-mail logs
- SNMP v1/v2 (MIB II, Private MIB)
- System Information Table
- Status Report (Daily/Monthly/System/Network)
- SSL certificate upload

2 Installation

2-1 Connecting the Antennas

The ALL-HS02530 provides two antenna connectors on the rear of the unit.

2-2 Installation Requirements

Before installing the ALL-HS02530, make sure your network meets the following requirements.

System Requirements

The ALL-HS02530 requires one of the following types of software:

- Windows 98 Second Edition/NT/2000/XP/Vista
- Red Hat Linux 7.3 or later version
- MAC OS X 10.2.4 or later version
- Any TCP/IP-enabled systems like Mac OS and UNIX (TCP/IP protocol installed)
- Standard phone line for xDSL modem Or Coaxial cable for Cable modem
- Web Browser Software (Microsoft I.E 5.0 or later version or Netscape Navigator 5.0 or later version)
- One computer with an installed 10Mbps, 100Mbps or 10/100Mbps Ethernet card
- UTP network Cable with a RJ-45 connection (Package contents)

Note: Prepare twisted-pair cables with RJ-45 plugs. Use Cat.5 cable for all connections. Make sure each cable not exceed 328 feet (Approximately 100 meters).

ISP Requirements

Verify whether your ISP use fixed or dynamic IP. If it is a fixed IP, be sure to get the IP

from your ISP. For dynamic IP, which is mostly used, the PC will get the IP automatically whenever it hooks up on the modem.

Dynamic IP

- Dynamic IP Setting

Fixed IP

- Your fixed IP address for the ALL-HS02530
- Your subnet mask for the ALL-HS02530
- Your default gateway IP address
- Your DNS IP address

PPPoE

- Your user name and password from your ISP

PPTP

- PPTP Server IP Address from your ISP
- PPTP Local IP address from your ISP.
- PPTP Local IP subnet mask from your ISP.
- Your user name from your ISP
- Your password from your ISP
- Your PC Requirements

The Static IP settings for the PC

- Your PC's fixed IP address
- Your PC's subnet mask
- Your PC's default gateway IP address
- Your PC's primary DNS IP address

Note:

1. The gateway's default IP address setting is "10.59.1.1".
2. The gateway's default subnet mask setting is "255.255.255.0".

The Dynamic IP settings for the PC

We recommend that you leave your IP settings as automatically assigned. By default, the ALL-HS02530 is a DHCP server, and it will give your PC the necessary IP settings.

2-3 Getting Start

ALL-HS02530 Connection

1. Connect the DC power adapter to the ALL-HS02530 and plug it into a power socket.
2. Connect ALL-HS02530 and xDSL modem with an Ethernet Cable.

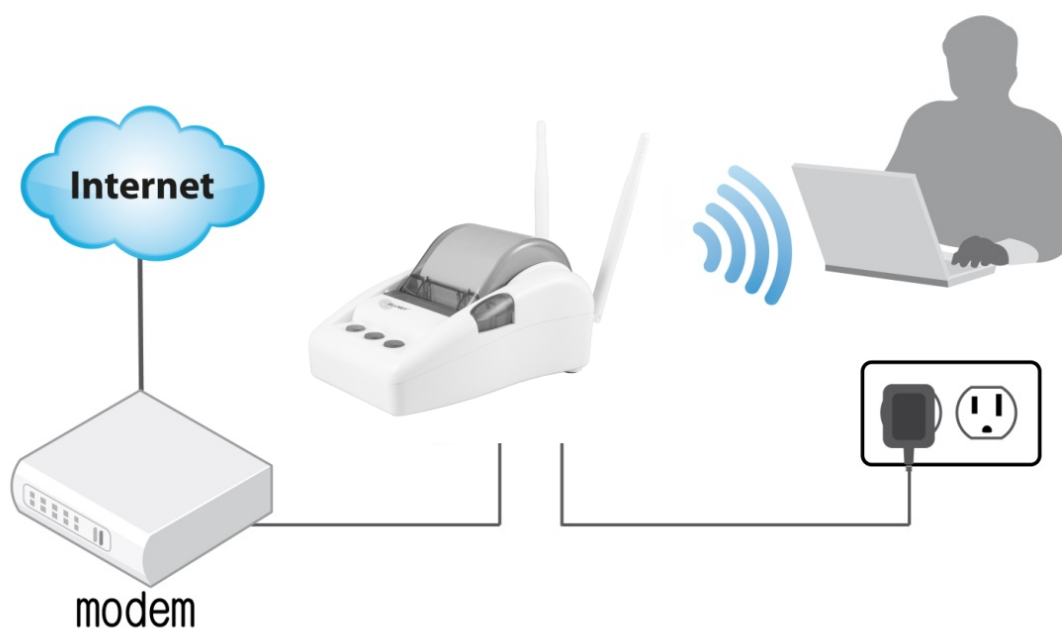


Figure 2-3-1 ALL-HS02530 Connection

Configure TCP/IP of your computer

For Windows user,

1. Click Start > Control Panel, click Switch to Classic View and double click on Network Connections.
2. Right click on the Local Area Connection and click Properties.
3. Double click Internet Protocol (TCP/IP).
4. Choose Obtain an IP address automatically.
5. Click OK to close the Internet Protocol (TCP/IP) Properties and click OK again to close the Local Area Connection.

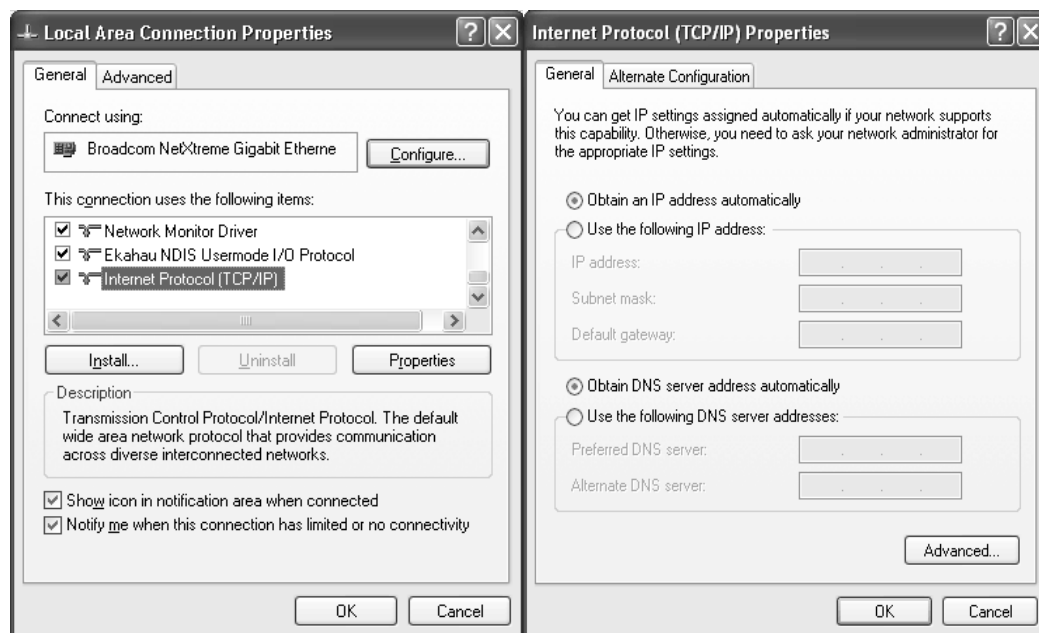


Figure 2-3-2 TCP/IP Setting

3 Configuring the ALL-HS02530

3-1 Setting Wizard

Step 1: The ESSID's name by default is “**ALL-HS02530**”

Please search ESSID “ **ALL-HS02530** ” and connect it with Default-WLAN-Password: **11111111**

Step 2: Start your browser, and then enter the factory default IP address **10.59.1.1** in your browser's location box. Press **Enter**.

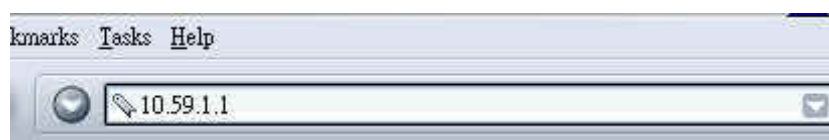


Figure 3-1-1 Web Browser Location Field (Factory Default)

Step 3: The ALL-HS02530 configuration tools menu will appear. In the Username and Password field, type the factory default user name **admin** and password **admin** and click **Login**. If you are first time setting the system, the wizard setup screen will appear. You will be guided, step-by-step, through a basic setup procedure.

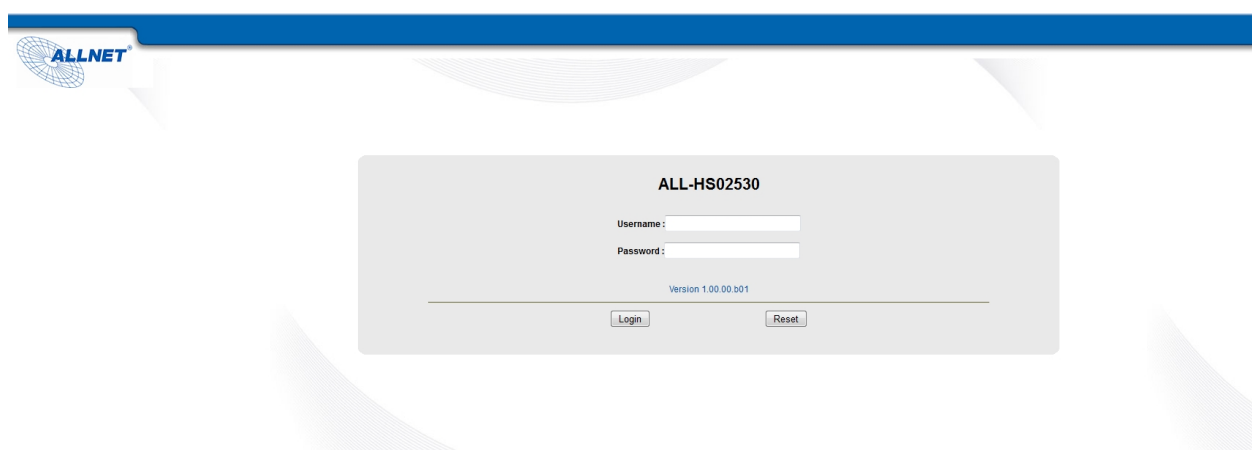


Figure 3-1-2 Configuration Tools Menu

Figure 3-1-3 Wizard Setup Screen

SYSTEM		
Display the detailed system information refresh		
Service	Internet Connection	OK
	Wireless Service	OK
System	System Name	ALL-HS02530
	Firmware Version	1.00.00.b01
	Wireless Version	2.7.1.5
	Bootrom Version	1.00.01.b01
	Controller Firmware Version	1.00.00.b04
	WAN MAC Address	00:90:0E:03:D1:2B
	LAN MAC Address	C0:00:00:00:00:41
	WLAN MAC Address	00:90:0E:03:D1:08
	System Time	2014/2/28 10:17:51
	System Up Time	09D:22H:44M:56S
LAN IP	IP Address	10.59.1.1
	Subnet Mask	255.255.255.0
WAN IP	WAN Port Mode	Static IP
	IP Address	10.20.73.22
	Subnet Mask	255.0.0.0
	Gateway IP address	10.20.30.251
DNS		

Figure 3-1-4 System Quick View

Note:

1. This Web agent is best viewed with IE 5.0 or Netscape 6.0 and above browsers.
2. Username and Password can consist of up to 20 alphanumeric characters and are case sensitive.
3. If for some reason your password is lost or you cannot gain access to the ALL-HS02530 Configuration Program, please press the reset button to load the device to manufacturer defaults.
4. If the ALL-HS02530 doesn't send packet in 5 minutes (default), the ALL-HS02530 wills logout automatically.
5. Proxy needs to set disable first when administrator accesses admin UI.

Step 4: Internet Connection Setting

Select the appropriate Internet connection type to connect to your ISP.

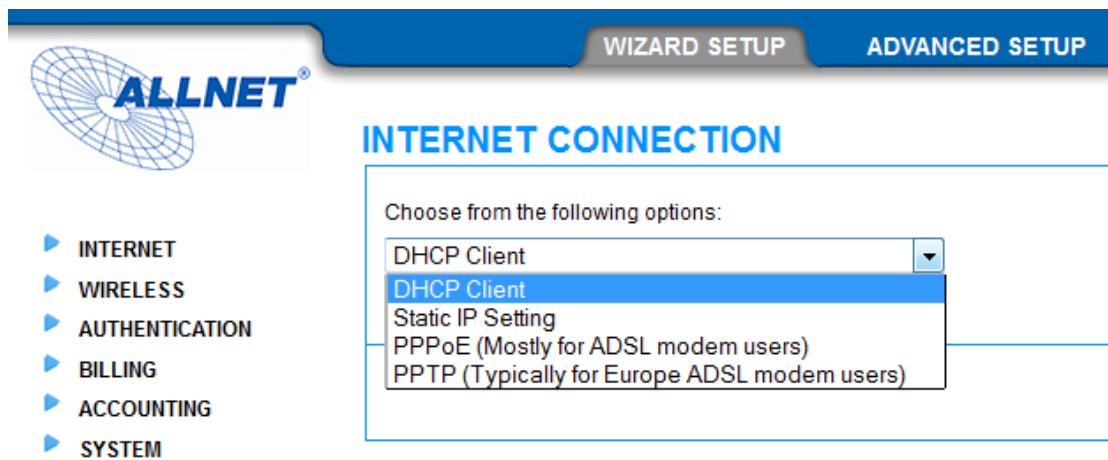


Figure 3-1-5 Internet Connection Setting Screen

DHCP Client

The device can work as a DHCP client. This allows the device to obtain the IP address and other TCP/IP settings from your ISP. If your xDSL/Cable comes with this feature, please enable Use DHCP Client.

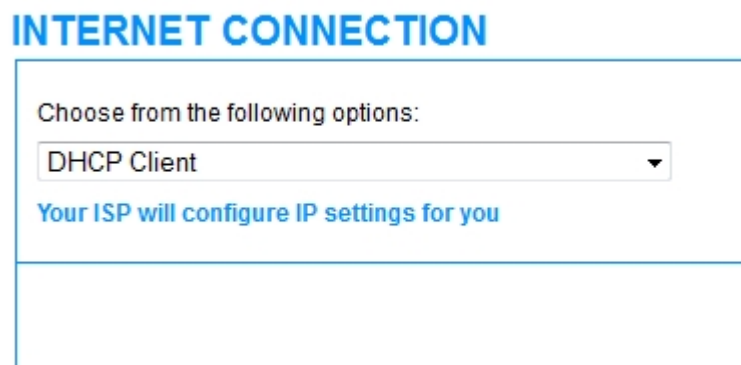


Figure 3-1-6 Internet Connection Setting Screen

Static IP Setting

If **Static IP Setting** is selected, then this screen will appear. Enter the IP address information provided by your ISP.

Choose one from the following selections:

Static IP Setting

Enter static IP information from your ISP:

IP Address: 0.0.0.0

Subnet Mask: 0.0.0.0

Gateway IP address: 0.0.0.0

Primary DNS Server:

Secondary DNS Server:

Next >

Figure 3-1-7 Internet Connection Setting Screen—Static IP Setting

Item	Default	Description
IP Address	0.0.0.0	Enter the IP address provided by your ISP.
Subnet Mask	0.0.0.0	Enter the subnet mask for the IP address.
Gateway IP Address	0.0.0.0	Enter the Gateway IP Address provided by your ISP.
Primary DNS Server	Empty	Enter the primary DNS server IP address for the xDSL/Cable connection (provided by your ISP).
Secondary DNS Server	Empty	Enter the secondary DNS server IP address for the xDSL/Cable connection (provided by your ISP). If the primary DNS Server IP were not available, meanwhile, Secondary DNS Server IP would start in the same time.

PPPoE (Point-to-Point Protocol over Ethernet)

If “PPPoE” is selected, then this screen will appear. Enter the username, password and other major fields.

Choose from the following selections:

PPPoE (Mostly for ADSL modem users) ▼

Enter your username and password from your ISP:

Username:

Password:

PPP MTU Setting:

TCP MSS Setting:

Service Name:

☒ **Connect on Demand** Max Idle Time: Min.

☐ **Keep alive** Redial Period: Sec.

Next >

Figure 3-1-8 Internet Connection Setting Screen—PPPoE Setting

Item	Default	Description
Username	Empty	Enter the user name provided by your ISP. The user name can consist of up to 80 alphanumeric characters and is case sensitive.
Password	Empty	Enter the user password provided by your ISP. The password can consist of up to 80 alphanumeric characters and is case sensitive.
PPP MTU Setting	1492	MTU (Maximum Transfer Unit) specifies maximum transmission unit size.
TCP MSS Setting	1452	MSS (Maximum Segment Size) specifies maximum segment size.
Service Name	Empty	Enter the service name provided by your ISP. The service name can consist of up to 64 alphanumeric characters and is case sensitive.
Connect on Demand and Max Idle Time		
Connect on	Enable	You can configure your ALL-HS02530 to cut your connection with your ISP

ALL-HS02530 Hotspot in a Printer

Demand		after a specified period of time (Max Idle Time). If you have been disconnected due to inactivity, Connect on Demand enables your ALL-HS02530 to automatically re-establish your connection as soon as you attempt to access the Internet again. If you wish to activate Connect on Demand, click the radio button. If you want your Internet connection to remain, click the radio button of keep alive. The Max Idle Time maximum value is 65535 minutes.
Max Idle Time	10 Minutes	
Keep alive and Redial Period		
Keep alive	Disable	This option keeps your PPPoE enabled Internet access connected indefinitely, even when it sits idle. The Redial Period maximum value is 65535 seconds.
Redial Period	30 Seconds	

PPTP Client (Point-to-Point Tunneling Protocol)

If PPTP Setting is selected, then this screen will appear. Please enter the IP address, Username and Password provided by your ISP.

Choose from the following selections:

PPTP (Typically for Europe ADSL modem users) ▼

Enter your username, password, and PPTP settings from your ISP:

My IP Address:

My Subnet Mask:

Gateway IP address:

PPTP Server IP Address:

Username:

Password:

PPP MTU Setting:

TCP MSS Setting:

Connection ID/Name:

☒ **Connect on Demand** Max Idle Time: Min.

☐ **Keep alive** Redial Period: Sec.

Next >

Figure 3-1-9 Internet Connection Setting Screen—PPPoE Setting


Item	Default	Description
Username	Empty	Enter the user name provided by your ISP. The user name can consist of up to 80 alphanumeric characters and is case sensitive.
Password	Empty	Enter the user password provided by your ISP. The password can consist of up to 80 alphanumeric characters and is case sensitive.
PPP MTU Setting	1492	MTU (Maximum Transfer Unit) specifies maximum transmission unit size.
TCP MSS Setting	1452	MSS (Maximum Segment Size) specifies maximum segment size.
Service Name	Empty	Enter the service name provided by your ISP. The service name can consist of up to 64 alphanumeric characters and is case sensitive.

ALL-HS02530 Hotspot in a Printer

Connect on Demand and Max Idle Time		
Connect on Demand	Enable	You can configure your ALL-HS02530 to cut your connection with your ISP after a specified period of time (Max Idle Time). If you have been disconnected due to inactivity, Connect on Demand enables your ALL-HS02530 to automatically re-establish your connection as soon as you attempt to access the Internet again. If you wish to activate Connect on Demand, click the radio button. If you want your Internet connection to remain, click the radio button of keep alive. The Max Idle Time maximum value is 65535 minutes.
Max Idle Time	10 Minutes	
Keep alive and Redial Period		
Keep alive	Disable	This option keeps your PPPoE enabled Internet access connected indefinitely, even when it sits idle. The Redial Period maximum value is 65535 seconds.
Redial Period	30 Seconds	

Step 5: Wireless Setting

Wireless Setting: This page allows you to Channel ID and 802.11 Mode for wireless connection.



- ▶ INTERNET
- ▶ WIRELESS
- ▶ AUTHENTICATION
- ▶ BILLING
- ▶ ACCOUNTING
- ▶ SYSTEM

WIZARD SETUP

ADVANCED SETUP

SYSTEM STATUS

SYS

WIRELESS SETTINGS

Country:	ETSI ▾
Channel:	6 ▾ (Leave default if you don't know how to choose)
802.11 Mode:	802.11n + 802.11g + 802.11b ▾

Figure 3-1-10 Wireless Setting Screen

Item	Default	Description
Channel	6	Enter the channel ID for wireless connection.
802.11 Mode	802. 11n + 802.11g + 802.11b	Enter the 802.11 Mode for wireless connection.

Step 6: System Setting

System Setting: ALL-HS02530 allows to change the administrator's Username and Password, and an NTP server setting.

Figure 3-1-11 System Setting Screen

Item	Default	Description
Username	admin	Enter the user name. The user name can consist of up to 80 alphanumeric characters and is case sensitive.
Password	admin	Enter the user password. The password can consist of up to 80 alphanumeric characters and is case sensitive.
Time Zone	GMT	Enter the Time Zone for the system.
Manual Setting	YYYY/MM/DD HH:MM:SS	Click Manual Setting to set the system date and time.
NTP Setting		Click Update button to correct the system date and time.
Secure Administrator IP Address	All	This function allows remote user to management the device. You can specify one or any IP addresses for remote control the system.

Click **FINISH** button to save the settings then the system will restart.

3-2 Advanced Setup

The Advanced Setting enables you to configure advanced settings related to accessing the Internet, including,

AUTHENTICATION

- AUTHENTICATION
- RADIUS

BILLING

- BILLING
- ACCOUNTING
- CREDIT CARD

MANAGEMENT

- SYSLOG
- SESSION TRACE
- BANDWIDTH
- SNMP

SECURITY

- PASS THROUGH
- FILTERING
- SECURE REMOTE

SYSTEM

- SYSTEM
- WAN / LAN
- SERVER
- CUSTOMIZATION
- PORTAL PAGE
- ADVERTISEMENT
- WALLED GARDEN
- DDNS
- WIRELESS

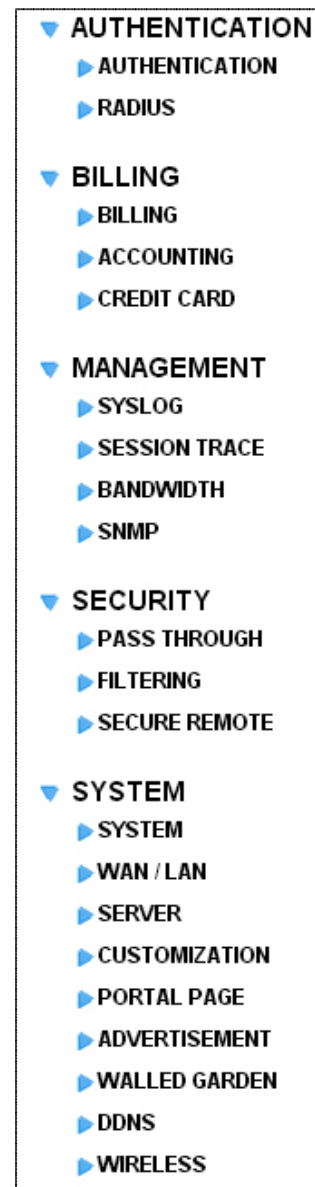


Figure 3-2-1 Advanced Setting Item

Note: After change the settings of device, please click **Apply** button to save the new settings.

3-2-1 AUTHENTICATION

3-2-1-1 Authentication

AUTHENTICATION

Authentication Type	<input checked="" type="radio"/> No Authentication <input type="radio"/> Built-in Authentication <input type="radio"/> User Agreement <input type="radio"/> Redirect URL Link: <input type="text"/> Code <input type="radio"/> Standard User Agreement page Assign To: <input type="text" value="ESSID 1"/>
Current User Information Backup	<input type="text" value="1"/> Min(s) (1 - 1440)
SSL Login Page	<input checked="" type="radio"/> Disable <input type="radio"/> Enable
User Idle Time Out	<input type="text" value="5"/> Min(s) (1 - 1440) <small>(Not function on "Time to Finish" billing mode)</small>
<input type="button" value="Apply"/>	

Figure 3-2-2 Authentication

Item	Default	Description
Authentication Type	No Authentication	<p>Option: No Authentication, Built-in Authentication or User Agreement.</p> <p>No Authentication</p> <p>Subscriber can direct access the Internet without enter username and password.</p> <p>Built-in Authentication</p> <p>ALL-HS02530 provides "Built-in Authentication" for service provider to build up an Internet service without any extra authentication software. If "Built-in Authentication" is selected, service provider can generate the subscriber account inside the device, and the system will authenticate the subscriber login according to the generated account.</p> <p>User Agreement</p> <p>Subscriber must accept the service usage agreement before they can access the Internet.</p>
Redirect Login Page URL	Empty	The input format can be http://www.yahoo.com. The maximum character of the URL Link is 200.
Code	Copy and paste the following HTML Code into your home page to produce redirect subscriber login page.	

Copy and paste the following HTML Code into your home page to produce user agreement login page.

Redirect Login Page Code
<pre> <html> <body style="font-family: Arial" bgcolor="#FFFFFF"> <form method="post" action="http://1.1.1.1/login.cgi" name="apply"> <div align="center"> <table cellSpacing="0" borderColorDark="#FFFFFF" cellPadding="4" width="50%" bgColor="#F7F7F7" borderColorLight="#9dcda0" border="1"> <tr> <td align="center" width="100%" bgColor="#d7f0d7" colSpan="2"> Welcome </td> </tr> </pre>

Figure 3-2-3 Preview Redirect Login Page Code

Item	Default	Description
Current User Information Backup	1 Min(s)	The system provides automatically backup account information and unused account to flash ROM. This function allow administrator to adjust the backup time. The default value is 1 minute. The Current User Information Backup valid range is 1 to 1440.
SSL Login Page	Disable	Enables or disables SSL security of login page.
User Idle Time Out	5 Minutes	The user idle time out valid range is 1-1440.

Click **Apply** button to save the new settings.

3-2-1-2 RADIUS

RADIUS

☒ Disable
☐ Enable

☒ Time to Finish

The subscriber can access the Internet only for a single session. After the subscriber logs in, Internet access is available until the session ends or time runs out, whichever comes first.

☐ Accumulation

The subscriber can access the Internet multiple times with one account. The system accumulates the time of each session until the purchased time limit is reached.

Primary RADIUS Server

Server IP:
Authentication Port:
Accounting Port:
Shared Secret Key:

Secondary RADIUS Server

Server IP:
Authentication Port:
Accounting Port:
Shared Secret Key:

Retry times when Primary fails:

Retry Frequency: seconds (3~75)

Accounting Service

☐ Enable
☒ Disable
Interim Update Time: (Minute)

Authentication Method

WISPr Smart Client

☐ Enable

Login Mode

☒ Directly Reply
☐ Proxy Reply with "Redirect Login Page" URL
☐ Proxy Reply with Specific URL:

Apply

Figure 3-2-4 Authentication Setting Screen

Item	Default	Description
RADIUS Authentication	Disable	<p>Option: No Authentication or RADIUS Server.</p> <p>Disable (No Authentication)</p> <p>Subscriber can direct access the Internet without enter username and password.</p> <p>Enable (RADIUS Authentication)</p> <p>ALL-HS02530 provides “RADIUS Authentication” for service provider to build up an Internet service with RADIUS server. If RADIUS Authentication is enabled, all subscribers’ authentication will send to RADIUS Server by RADIUS protocol (RFC 2865, 2866).</p>
Time to Finish/ Accumulation	Enable	Service provider provides two different accounting calculate for the Internet service.
Primary RADIUS Server		
Server IP	Empty	Enter the IP address of RADIUS server.
Authentication Port	1812	Enter the authentication port number; the authentication port number must match with the RADIUS server setting. The allowed numbers

ALL-HS02530 Hotspot in a Printer

		are from 0 to 65535.
Accounting Port	1813	Enter the accounting port number; the accounting port number must match with the RADIUS server setting. The allowed numbers are from 0 to 65535.
Share Secret Key	Empty	The share secret key, the key number also has to match with the Server setting. Up to 64 characters are allowed.
Secondary RADIUS Server		
Server IP	Empty	Enter the IP address of RADIUS server.
Authentication Port	1812	Enter the authentication port number; the authentication port number must match with the secondary RADIUS server setting. The allowed numbers are from 0 to 65535.
Accounting Port	1813	Enter the accounting port number; the accounting port number must match with the secondary RADIUS server setting. The allowed numbers are from 0 to 65535.
Share Secret Key	Empty	The share secret key, the key number also has to match with the secondary RADIUS Server setting. Up to 64 characters are allowed.
Retry times when Primary fail	1	Specify the retry times when primary fail.
Retry Frequency ~ Seconds	3	The field default value is 3 seconds.
Accounting Service	Disable	Enables or disables the accounting service.
Interim Update Time	5 Minutes	Specify the interim update time.
Authentication Method	CHAP	CHAP Enter the authentication method of RADIUS server.
WISPr Smart Client		
Enable	Disable	Enables or disables WISPr Smart Client roaming function.
Login Mode	Directly Reply	Options: Directly Reply, Proxy Reply with "Redirect Login Page" URL and Proxy Reply with Specific URL. The login mode information for the IPASS GIS connection. (Provided by your ISP).

3-2-2 BILLING

3-2-2-1 Billing

The function is used to setup a billing profile. A billing profile is a description of how you want to charge *your customer*.

BILLING

Pre-Paid
The subscribers can access Internet with pre-defined usage time.
☐ Enable Credit Card Service WG-500P

Time to Finish
The subscriber can access Internet only one time with one account. Once subscriber login, the pre-defined usage time will start until run out even the subscriber stop to access the Internet before run out.

Accumulation
The subscriber can access Internet several times with one account. The system can keep and accumulate every single usage time until the pre-defined usage time run out.

Billing Profile

Currency: * \$ ☐ \$ ☒ Number of decimals places:)

☐ Tax Percentage: %

No.	Active	Name (max. 12 characters)	Account Usage Time	Charge
01	<input checked="" type="checkbox"/>	30 minutes	30 minutes	1.00
02	<input checked="" type="checkbox"/>	1 hour	1 hours	2.00
03	<input checked="" type="checkbox"/>	2 hours	2 hours	3.00
04	<input type="checkbox"/>	3 hours	3 hours	4.00
05	<input type="checkbox"/>	5 hours	5 hours	5.00
06	<input type="checkbox"/>	10 hours	10 hours	6.00
07	<input type="checkbox"/>	1 day	1 days	10.00
08	<input type="checkbox"/>	2 days	2 days	20.00
09	<input type="checkbox"/>	7 days	7 days	50.00
10	<input type="checkbox"/>	30 days	30 days	200.00

[Apply](#)

Figure 3-2-5 Billing Setting Screen

Item	Default	Description
Enable Credit Card Service	Disable	Enables or disables the credit card service. Before you enable credit card service, make sure that your credit service is configured to work and the currency is American dollars. You must be converting all prices on your billing page into American dollars (U.S. dollars). For details, see section 3-2-2-3 Credit Card. The credit card function only supports the American dollars.
Time to Finish	Enable	The subscriber can access Internet only one time with one account. Once subscriber login, the pre-defined usage time will start until run out even the subscriber stop to access the Internet before run out.
Accumulation		

ALL-HS02530 Hotspot in a Printer

Accumulation	Disable	The subscriber can access Internet many times with one account. The system can keep and accumulate every single usage time until the pre-defined usage time run out.
Idle Time Out	5 Min(s)	The idle time out valid range is 1-1440. If the idle time out is set as 5 minutes, it means if the account doesn't send packet in 5 minutes, the account will logout automatically.
Billing Profile		
Currency	\$	Enter the appropriate currency unit or currency symbol.
Number of decimals places	2	Enter the number. The field maximum value is 3.
Tax Percentage	Disable	This check box is used to indicate the taxable status of the account.
	5%	Enter the tax rate (i.e. a 5% sales tax is entered as 5).
Active	-	Click on check box, active or inactive the billing profile.
Name	-	It is the name of billing profile. The maximum allowed characters length is 12.
Account Usage time	-	The duration of the billing period. When this period expires, user account will be discontinued.
Charge	-	Enter the unit rate amount (i.e. 35.00) that most of your accounts are charged for one day of service.

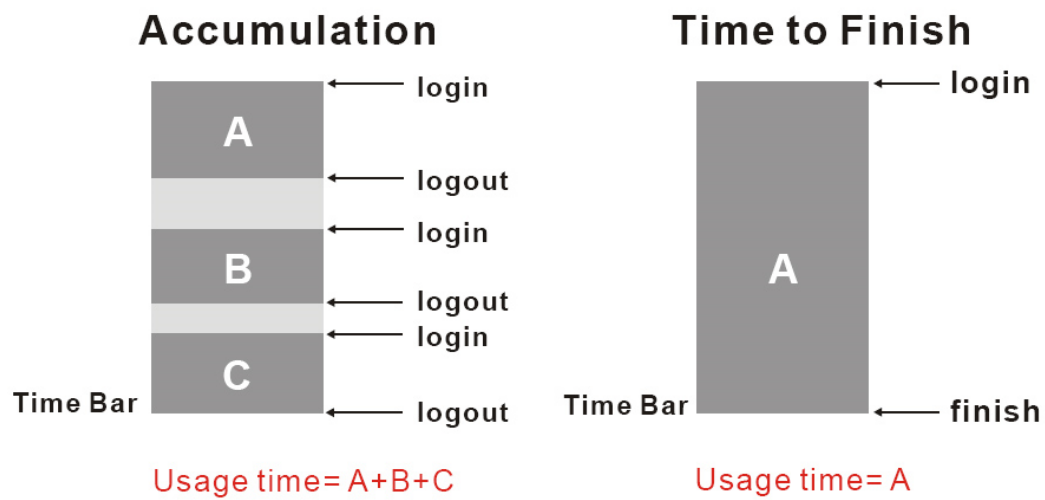


Figure 3-2-6 Accumulation and Time to Finish

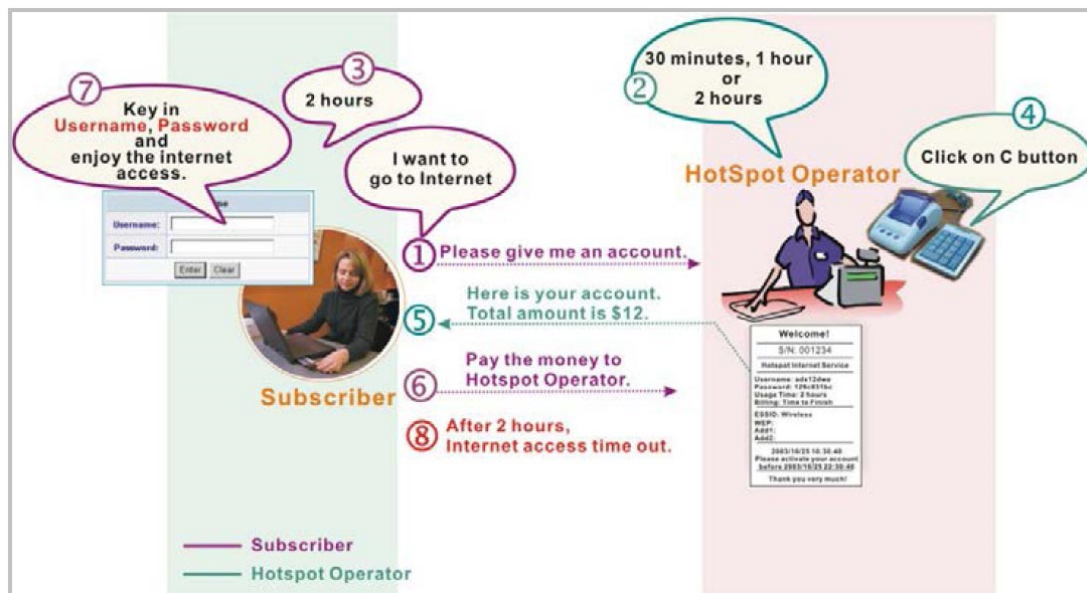


Figure 3-2-7 Pre-paid Procedure Diagram

3-2-2-2 Accounting

This function allow service provider to generate the subscriber accounts.

ACCOUNTING

Expiration	Delete unused accounts automatically after <input type="text" value="12"/> hours (1~30)
	Delete accumulation accounts after last logged out <input type="text" value="3"/> months (1~30)
Printout	Number of copies to print: <input type="text" value="1"/>
Top UP	<input type="checkbox"/> Can be replenished by subscriber

Three- Button Printer / Web-based Account Generator Panel Preview/Operate

Button A	(01) 30 minutes , 30 minutes , \$1.00
Button B	(01) 30 minutes , 30 minutes , \$1.00
Button C	(01) 30 minutes , 30 minutes , \$1.00

Print to... ☒ Account Generator Printer ☐ Connected Printer

Use ☒ Button A ☐ for Discount Price Plan based on "Button Presses": (only valid for Three-Button Printer)

Discount Price Plan based on "Button Presses" ☒ Charge by levels

Level	Conditions	Button Presses	Unit Price
01	when > =	1	same as base charge
02	when > =	<input type="text" value="0"/>	<input type="text"/>
03	when > =	<input type="text" value="0"/>	<input type="text"/>
04	when > =	<input type="text" value="0"/>	<input type="text"/>
05	when > =	<input type="text" value="0"/>	<input type="text"/>
06	when > =	<input type="text" value="0"/>	<input type="text"/>
07	when > =	<input type="text" value="0"/>	<input type="text"/>
08	when > =	<input type="text" value="0"/>	<input type="text"/>
09	when > =	<input type="text" value="0"/>	<input type="text"/>
10	when > =	<input type="text" value="0"/>	<input type="text"/>

Apply

Figure 3-2-8 Accounting Setting Screen

Item	Default	Description
Expiration		
Un-used account will be deleted after ~hours automatically	24 hours	Enter the number of hours/minutes/days. The field maximum value is 30 hours/minutes/days.
Accumulation account will be deleted after last logged in ~	3 months	Enter the number and select time unit from list box. The field maximum value is 30 month/ days/ hours.
Printout		
Number of copies to print	1	The system allows you to print all your bills. Select one number of copies by clicking in the list box.
Can be Top Up by subscriber		Click the check box to enable the Top Up function.

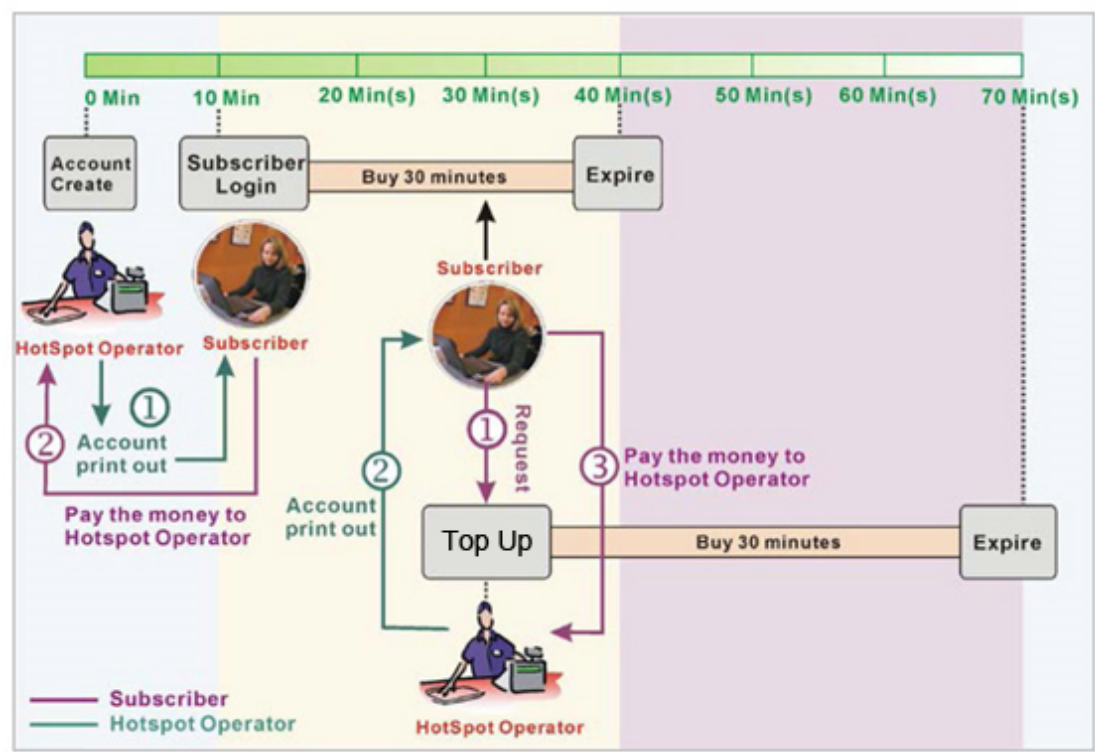


Figure 3-2-9 Account Process DiagramCan be replenished by subscriber=Enable

Item	Default	Description
Button A~C		Define each button's billing profile. Select one billing profile by clicking in the list box.
Print to...	Account Generator Printer	Select a printer to print out your account.
Use ~ for Discount Price Plan based on "Button Presses"	Button A, Disable	Select one button (A~C) by clicking in the list box to assign the base charge and select enable to active the discount price plan.

Click **Preview/Operate** button to preview and operate account generator panel.

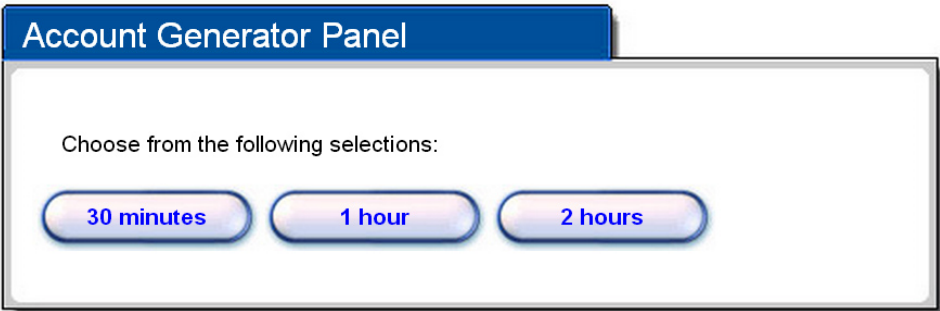


Figure 3-2-10 Account Generator Panel

```
Herzlich willkommen!  
-----  
ALLNET Internet Zugang  
-----  
Username: vtri  
Passwort: j58h  
Aktiv: 1 hour  
Verfügbar: 01H:00M  
WIFI Name: ALL-HS02530  
-----  
03/03/2014 11:50:22  
S/N: 000001  
Nutzung beginnen bis  
spätestens:  
04/03/2014 11:50:22  
-----  
ALLNET GmbH  
Maistr. 2  
82110 Germering  
Vielen Dank !  
Login mit QR-Code:
```



Figure 3-2-11 Account Generator Printer (Time to Finish)

```
Herzlich willkommen!  
-----  
ALLNET Internet Zugang  
-----  
Username: yz2k  
Passwort: p82h  
Abrechnung: Akkumulation  
Aktiv: 1 Day  
Verfügbar: 24H:00M  
Netto: € 5.00  
MwSt: € 0.95  
Gesamt: € 5.95  
WIFI Name: ALL-HS02530  
-----  
03/03/2014 20:59:06  
S/N: 000012  
Nutzung beginnen bis  
spätestens:  
04/03/2014 20:59:06  
Das Guthaben verfällt 3  
Monate nach dem letzten  
Login!  
-----  
ALLNET GmbH  
Maistr. 2  
82110 Germering  
Vielen Dank !  
Login mit QR-Code:
```



Figure 3-2-12 Account Generator Printer (Accumulation)

Note: Before configuring the accounting, you have to setting the billing profile of Web-based account generator panel.

Example: If press 7 times

- Discount Price Plan based on "Button Presses" is disabled.

Three-Button Printer / Web-based Account Generator Panel		Preview/Operate
Button A	[(01) 30 minutes , 30 minutes , \$1.00 ▼]	
Button B	[(02) 1 hour , 1 hours , \$2.00 ▼]	
Button C	[(01) 30 minutes , 30 minutes , \$1.00 ▼]	
Print to... <input checked="" type="radio"/> Account Generator Printer <input type="radio"/> Connected Printer		
Use Button B ▼ for Discount Price Plan based on "Button Presses": Enable ▼ (only valid for Three-Button Printer)		

Figure 3-2-13 Example 1

Amount: 7 x \$2.00= \$14.00

```

Herzlich willkommen!
-----
ALLNET Internet Zugang
-----
Username: nn5a
Passwort: uc57
Abrechnung: Zeit bis Nut
zungsende:
Aktiv: 1 hour
Verfügbar: 01H:00M
Netto: € 2.00
MwSt: € 0.38
Gesamt: € 2.38
WIFI Name: ALL-HS02530
-----
03/03/2014 20:53:43
S/N: 000010
Nutzung beginnen bis
spätestens:
04/03/2014 20:53:43
-----
ALLNET GmbH
Maistr. 2
82110 Germering
Vielen Dank !
Login mit QR-Code:

```




Figure 3-2-14 Account Printout

- Discount Price Plan based on “Button Presses” is enabled.
- The Charge by level is disabled.

Three-Button Printer / Web-based Account Generator Panel
Preview/Operate

Button A

(01) 30 minutes , 30 minutes , \$1.00 ▼

Button B

(02) 1 hour , 1 hours , \$2.00 ▼

Button C

(01) 30 minutes , 30 minutes , \$1.00 ▼

Print to... ☒ Account Generator Printer ☐ Connected Printer

Use Button B ▼ **for Discount Price Plan based on "Button Presses":** Enable ▼ (only valid for Three-Button Printer)

Discount Price Plan based on "Button Presses" ☒ Charge by levels

Level	Conditions	Button Presses	Unit Price
01	when > =	1	same as base charge
02	when > =	<input style="width: 80px;" type="text" value="3"/>	<input style="width: 80px;" type="text" value="1.5"/>
03	when > =	<input style="width: 80px;" type="text" value="7"/>	<input style="width: 80px;" type="text" value="1"/>
04	when > =	<input style="width: 80px;" type="text" value="0"/>	<input style="width: 80px;" type="text"/>
05	when > =	<input style="width: 80px;" type="text" value="0"/>	<input style="width: 80px;" type="text"/>
06	when > =	<input style="width: 80px;" type="text" value="0"/>	<input style="width: 80px;" type="text"/>
07	when > =	<input style="width: 80px;" type="text" value="0"/>	<input style="width: 80px;" type="text"/>

Figure 3-2-15 Example 2

Amount: 7 x \$ 1 = \$ 7.00


Below is an example of the account printout.

ALL-HS02530 Hotspot in a Printer

```

Welcome!
-----
Hotspot Internet Service
-----
Username: 4n27
Password: 7ndx
Billing: Time to Finish
Service: 1 hour
Unit: 7
Usage Time: 07:00:00
Total: USD 11.00
ESSID: ALL-HS02530
WPA/WPA2: 1234567890
-----

2013/08/12 17:57:34
S/N: 000206
Please activate your account before
2013/08/13 17:57:34
-----

Thank you very much !


```

Figure 3-2-16 Account Printout

- Discount Price Plan based on “Button Presses” is enabled.
- Charge by level is enabled.

Three- Button Printer / Web-based Account Generator Panel

Preview/Operate

Button A

(01) 30 minutes , 30 minutes , \$1.00

Button B

(02) 1 hour , 1 hours , \$2.00

Button C

(01) 30 minutes , 30 minutes , \$1.00

Print to...

☒ Account Generator Printer
 ☐ Connected Printer

Use

Button B

for Discount Price Plan based on "Button Presses":

Enable

(only valid for Three-Button Printer)

Discount Price Plan based on "Button Presses"

☒ Charge by levels

Figure 3-2-17 Example 3

Amount: 2 x \$2.00 + 4 x\$ 1.50+1x\$1= \$11.00

Below is an example of the account printout.

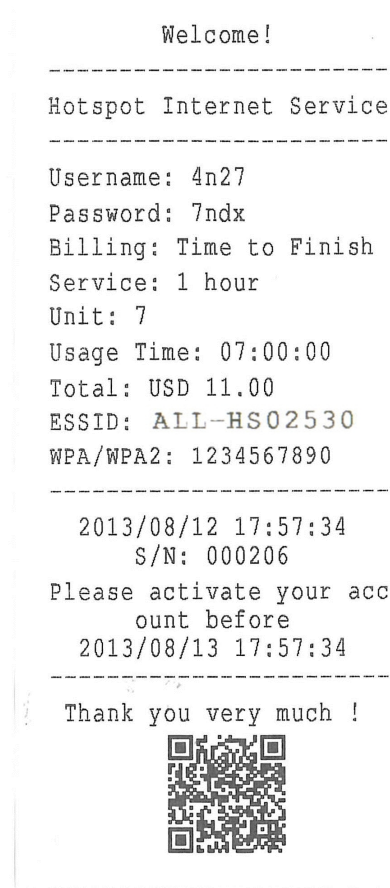


Figure 3-2-18 Account Printout

- Discount Price Plan based on “Button Presses”

Discount Price Plan based on "Button Presses" <input checked="" type="checkbox"/> Charge by levels			
Level	Conditions	Button Presses	Unit Price
01	when > =	1	same as base charge
02	when > =	<input type="text" value="0"/>	<input type="text"/>
03	when > =	<input type="text" value="0"/>	<input type="text"/>
04	when > =	<input type="text" value="0"/>	<input type="text"/>
05	when > =	<input type="text" value="0"/>	<input type="text"/>
06	when > =	<input type="text" value="0"/>	<input type="text"/>
07	when > =	<input type="text" value="0"/>	<input type="text"/>
08	when > =	<input type="text" value="0"/>	<input type="text"/>
09	when > =	<input type="text" value="0"/>	<input type="text"/>
10	when > =	<input type="text" value="0"/>	<input type="text"/>

Figure 3-2-19 Discount Price Plan Setting Screen

Item	Default	Description
Charge by levels	Enable	Enables or disables the charge by levels function.
Level	1-10	This field displays the level number of charge rate.
Conditions	When>=	The discount condition
Button Presses	-	Enter the times of pressing button
Unit Price	-	Enter the amount of charge level

Click **Apply** button to save the new settings and the success dialog box appears. Click on **Back** to return to Accounting setting screen.

3-2-3 MANAGEMENT

3-2-3-1 Syslog

The function allows the device to transmit event messages to your syslog server or your email address for monitoring and troubleshooting.

Syslog Setting

Syslog

Syslog

Log Settings

Send to Syslog Server

☒ Disable
 ☐ Enable

☐ Syslog Server on LAN :

Server IP Address :

Server MAC Address :

☐ Syslog Server on WAN :

Server 1 IP Address :

Server 2 IP Address :

Send to Email

☒ Disable
 ☐ Enable

Email Server :

IP Address or Domain Name :

SMTP Port :

☐ E-mail (SMTP) server account :

Username :

Password :

Email From :

Name :

Email address :

Email To :

Email address 1 :

Email address 2 :

Apply

Figure 3-2-20 Syslog Setting Screen

Item	Default	Description
Send to Syslog Server	Disable	Enables or disables the syslog server function.
Syslog on LAN		
Server IP Address	Empty	Enter syslog server's IP address. The ALL-HS02530 will send all of its logs to the specified syslog server.
Server MAC Address	Empty	Enter the syslog server's MAC address. The ALL-HS02530 will send all of its logs to the specified syslog server.

Item	Default	Description
Syslog on WAN		
Server 1 IP Address	Empty	Enter IP address of first syslog server.
Server 2 IP Address	Empty	Enter IP address of second syslog server.
Send to Email	Disable	Enables or disables the send to e-mail function.
E-mail Server		
IP Address or Domain Name	Empty	Enter the SMTP server IP address or domain name. The maximum allowed characters length is 50.
SMTP Port	25	The SMTP port allowed range is 25 or 2500 to 2599.
E-mail (SMTP) Server needs to check my account	Disable	If your SMTP server requires authentication before accepting e-mail, click on check box. These values (username and password) are supplied by your network administrator, SMTP server provider or ISP.
Username	Empty	Enter the username for the SMTP server. The maximum allowed characters length is 64.
Password	Empty	Enter the password for the SMTP server
Email From		
Name	Empty	Enter the name you would like to appear in the "message from" field of your outgoing message. The maximum allowed characters length is 20.
Email Address	Empty	Enter your e-mail address. This is the address others will use to send email to Email Address 1/Email Address 2.
Email To		
Email Address 1	Empty	Enter your first e-mail address to receive the logs.
Email Address 2	Empty	Enter your second e-mail address to receive the logs.

Click **Apply** button to save the new settings and the success dialog box appears. Click on **Back** to return to Syslog setting screen.

ATTENTION: Up to Firmware-Version 1.00.00 only Port 25 & 2500-2599 is ENABLED. Also SSL / TLS / STARTTLS email traffic is NOT ENABLED.

ACHTUNG: Mit Firmware-Version 1.00.00 ist NUR Port 25 & 2500-2599 möglich. Ebenfalls ist keine Email-Verschlüsselung über SSL / TLS / STARTTLS möglich.

Log Categories

SYSLOG

Syslog
Log Settings

System

Syslog	Email	Log Name	Description	Sending Time
<input type="checkbox"/>	<input type="checkbox"/>	Device Information	Device information updated at specified interval time	10 minute(s) (5-60)
<input type="checkbox"/>	<input type="checkbox"/>	System Up Notice	Updated when system is rebooted or restarted	At system reboot or restart
<input type="checkbox"/>	<input type="checkbox"/>	System Account Activity Information	Updated when system manager (Administrator) logs in or out from the device	At system manager login or logout
<input type="checkbox"/>	<input type="checkbox"/>	Firmware Update Notice	Updated at completion of firmware update	At firmware update completion
<input type="checkbox"/>	<input type="checkbox"/>	Wireless Association information	Updated with wireless user information at specified interval time	10 minute(s) (5-60)

User

Syslog	Email	Log Name	Description	Sending Time
<input type="checkbox"/>	<input type="checkbox"/>	User Login	Updated with user login events	At user login
<input type="checkbox"/>	<input type="checkbox"/>	User Logout	Updated with user logout events	At user logout
<input type="checkbox"/>	<input type="checkbox"/>	Current User List	Updated with current user information at specified interval time	10 minute(s) (5-60)

Accounting And Billing

Syslog	Email	Log Name	Description	Sending Time
<input type="checkbox"/>	<input type="checkbox"/>	Account information	Updated when an account is created	At account creation
<input type="checkbox"/>	<input type="checkbox"/>	Billing Amount	Updated when payment is received	At receipt of payment

Apply

Figure 3-2-21 Log Settings Screen

Item	Default	Description
System		
Device Information	Every 10 minute(s)	<p>The range is 5~60 minutes. The log included system information would be sent according to specified interval time.</p> <p>Format :</p> <p>PRODUCT= ALL-HS02530:VER=2.00.00;LOGNAME=DVI;</p> <p>DATE=07Mar26;TIME=11:30:00;</p> <p>WANMAC=09-00-0e-00-00-01;LANMAC=09-00-0e-00-00-02;</p> <p>WLANMAC=09-00-0e-00-00-03;</p> <p>IP_ADDRESS=210.66.37.21;</p> <p>SYS_UP_TIME=14D23H34M21S;WANTXOK=99999;</p> <p>WANRXOK=99999;WANTXERROR=99999;WANRXERROR=99999;</p> <p>LANTXOK=99999;LANRXOK=99999;LANTXERROR=99999;</p> <p>LANRXERROR=99999;WIRELESSTXOK=99999;WIRELESSRXOK=99999;</p> <p>WIRELESSTXERROR=99999;WIRELESSRXERROR=99999;</p>

		WAN_QUALITY=5;
System Up Notice	When system rebooted or restarted	<p>If device have been rebooted or restarted, the log would be sent.</p> <p>Format :</p> <p>PRODUCT=W ALL-HS02530 ;VER=2.00.00;LOGNAME=SUN; DATE=07Mar26;TIME=15:23:32; WANMAC=09-00-0e-00-00-01;LANMAC=09-00-0e-00-00-02; WLANMAC=09-00-0e-00-00-03; IP_ADDRESS=210.66.37.21; SYS_NAME=Cafehotspot;LOCATION=East;CITY=Taipei; COUNTRY=Taiwan; FIRMWARE=v1.01.02;MESSAGE=System_Up; Message = System_Reboot</p>
System Account Activity Information	When system manager login orlogout	<p>A log will be sent if system manager (Administrator) login to or logout from the device</p> <p>Format:</p> <p>PRODUCT= ALL-HS02530;VER=2.00.00;LOGNAME=SUN; DATE=07Mar26;TIME=15:23:32; WANMAC=09-00-0e-00-00-01;LANMAC=09-00-0e-00-00-02; WLANMAC=09-00-0e-00-00-03; IP_ADDRESS=210.66.37.21; SYS_NAME=Cafehotspot;LOCATION=East;CITY=Taipei; COUNTRY=Taiwan; FIRMWARE=v1.01.02;MESSAGE=System_Up; Account Name = Admin Supervisor Operator Status= Login Logout Idle_Time_Out</p>
Firmware Update Notice	When firmware update completed	<p>A log will be sent if firmware update completed</p> <p>Format:</p> <p>PRODUCT= ALL-HS02530;VER=2.00.00;LOGNAME=FUN; DATE=07Mar26;TIME=15:23:32; WANMAC=09-00-0e-00-00-01;LANMAC=09-00-0e-00-00-02; WLANMAC=09-00-0e-00-00-03; IP_ADDRESS=210.66.37.21; MESSAGE=Success;OLD_FRIMWARE=v1.00.01; NEW_FIRMWARE=v1.00.02 Message = Success Fail</p>
Wireless Association Information	Every 10 minute(s)	The range is range 5~60 minutes. A log including wireless users information will be sent according to specified interval time.

ALL-HS02530 Hotspot in a Printer

		Format: PRODUCT= ALL-HS02530;VER=2.00.00;LOGNAME=WAI; DATE=07Mar26;TIME=15:23:32; WANMAC=09-00-0e-00-00-01;LANMAC=09-00-0e-00-00-02; WLANMAC=09-00-0e-00-00-03; IP_ADDRESS=210.66.37.21; USER_NUM=15;SEQ=1-5;USER_MAC=02-34-3e-01-00;
User		
User Login	When user logged-in	A log including users information will be sent when user logged-in Format: PRODUCT= ALL-HS02530;VER=2.00.00;LOGNAME=ULI;DATE=07Mar26; TIME=15:23:32;WANMAC=09-00-0e-00-00-01; LANMAC=09-00-0e-00-00-02; WLANMAC=09-00-0e-00-00-03; IP_ADDRESS=210.66.37.21;USER_NAME=asdfg12;USER_IP=10.59.1.1; USER_MAC=02-34-3e-01-00;INTERFACE=Ethernet; USER_TYPE=Dynamic; User Type = Dynamic / Super / User Agreement / Radius / No-Auth
		When User Replenish login format: PRODUCT= ALL-HS02530;VER=2.00.00;LOGNAME=URP;DATE=07Mar26; TIME=15:23:32; WANMAC=09-00-0e-00-00-01; LANMAC=09-00-0e-00-00-02; WLANMAC=09-00-0e-00-00-03; IP_ADDRESS=210.66.37.21;USER_NAME=asdfg12; REP_USER_NAME=kifm2fs3;USER_IP=10.59.1.1; USER_MAC=02-34-3e-01-00; INTERFACE=Ethernet; USER_TYPE=Dynamic; USED_TIME=24:00:00;TIME_LEFT=24:00:00 User Type = Dynamic / Radius
User Logout	When user logged-out	A log including users information will be sent when user logged-out Format: PRODUCT= ALL-HS02530;VER=2.00.00;LOGNAME=ULO;DATE=07Mar26; TIME=15:23:32;WANMAC=09-00-0e-00-00-01; LANMAC=09-00-0e-00-00-02; WLANMAC=09-00-0e-00-00-03;

		<p>IP_ADDRESS=210.66.37.21;USER_NAME=asdfg12;USER_IP=10.59.1.1;</p> <p>USER_MAC=02-34-3e-01-00;INTERFACE=Ethernet;</p> <p>USER_TYPE=Dynamic;RXDATA=1234; TXDATA=1234;</p> <p>USED_TIME=24:00:00;LOGOUT_TYPE=Time_Up;TIME_LEFT=24:00:00</p> <p>User Type = Dynamic / Super / User Agreement / Radius / No-Auth</p>
Current User List	Every 10 minute(s)	<p>The range is Range 5~60 minutes. A log including logged-in users information will be sent according to specified interval time</p> <p>Format:</p> <p>PRODUCT=</p> <p>ALL-HS02530;VER=2.00.00;LOGNAME=CUL;DATE=07Mar26;</p> <p>TIME=15:23:32;WANMAC=09-00-0e-00-00-01;</p> <p>LANMAC=09-00-0e-00-00-02; WLANMAC=09-00-0e-00-00-03;</p> <p>IP_ADDRESS=210.66.37.21;USER_NUM=0;SEQ=1-5;</p> <p>USER_NAME=asdfg12,USER_IP=10.59.1.2,USER_MAC=02-34-3e-01-00,</p> <p>INTERFACE=Ethernet,USER_TYPE=Dynamic,RXDATA=1234,</p> <p>TXDATA=1234,USED_TIME=24:00:00,SESSION=100,WLAN_SIG=N/A;</p> <p>USER_NAME=dk6uf2eg,USER_IP=10.59.1.3,USER_MAC=02-34-3e-01-02,</p> <p>INTERFACE=Wireless,USER_TYPE=Dynamic,RXDATA=1234,</p> <p>TXDATA=1234,USED_TIME=24:00:00,SESSION=100,WLAN_SIG=100 %;</p> <p>User Type = Dynamic / Super / User Agreement / Radius / No-Auth</p> <p>User Name = If the type of user is Super/User Agreement/No-Auth , the username=****</p>
Account and Billing		
Account Information	When an account is created	<p>A log will be sent when an account is created</p> <p>Format:</p> <p>PRODUCT=</p> <p>ALL-HS02530;VER=2.00.00;LOGNAME=ACI;DATE=07Mar26;</p> <p>TIME=15:23:32;WANMAC=09-00-0e-00-00-01;</p> <p>LANMAC=09-00-0e-00-00-02; WLANMAC=09-00-0e-00-00-03;</p> <p>IP_ADDRESS=210.66.37.21;USER_NAME=asdfg12;</p> <p>ACCOUNT_TYPE=TimetoFinish; ACCOUNT_SERIAL=000002;</p>

		ACCOUNT_PRICE= USD20.00; ACCOUNT_USAGE_TIME=10:59:59; BILLING_INDEX=1;BILLING_UNIT=2; Account Type = TimeToFinish / Accumulation / PostPaid Account Price = Currencyxx.xx Currency = AUD CHF EUR GBP JPY RIY USD
Billing Amount	When received amount	A log will be sent when received amount Format: PRODUCT= ALL-HS02530;VER=2.00.00;LOGNAME=BLA; DATE=07Mar26; TIME=15:23:32;WANMAC=09-00-0e-00-00-01; LANMAC=09-00-0e-00-00-02; WLANMAC=09-00-0e-00-00-03; IP_ADDRESS=210.66.37.21;USER_NAME=username; BILL_TYPE=Cash, BILL_AMOUNT= USD50.00 Billing Type = Cash Credit_Card; Billing Amount = xx.xx Currency = AUD CHF EUR GBP JPY RIY USD.....

Click **Apply** button to save the new settings and the success dialog box appears. Click on **Back** to return to Logs setting screen.

3-2-3-2 Session Trace

Session Trace is an intelligent function to help service provider to trace every user's access behavior. When "session trace" is enable , the system will collect information such like destination IP, destination port, source IP, source MAC, source port by every user and send the collected information in text format file to specified TFTP server or Email Server.

SESSION TRACE

Session Trace :

TFTP Server	<input type="checkbox"/> Enable Primary TFTP Server IP Address <input type="text"/> Secondary TFTP Server IP Address <input type="text"/>	
E-mail Server	<input type="checkbox"/> Enable <div style="border: 1px solid black; padding: 5px;"> <div style="display: flex; justify-content: space-between;"> <div>Email Server :</div> <div> IP Address or Domain Name : <input type="text"/> SMTP Port : <input type="text" value="25"/> <input type="checkbox"/> E-mail (SMTP) server account : Username : <input type="text"/> Password : <input type="text"/> </div> </div> <div style="display: flex; justify-content: space-between;"> <div>Email From :</div> <div> Name : <input type="text"/> Email address : <input type="text"/> </div> </div> <div style="display: flex; justify-content: space-between;"> <div>Email To :</div> <div> Email address 1 : <input type="text"/> Email address 2 : <input type="text"/> </div> </div> </div>	

Send Session Trace log file every minutes. (5~1440)
 (Note: Session Trace log file will also be sent also when 50 logs are collected)

Figure 3-2-22 Session Trace Setting Screen

Item	Default	Description
TFTP Server		
Session Trace	Disable	Disables or enables session trace function.
Primary TFTP Server IP Address	Empty	Enter the IP address of the primary TFTP server.
Secondary TFTP Server IP Address	Empty	Enter the IP address of the second TFTP server.
Send Session Trace log file every~ minutes.	10 minutes	The field means to send the session trace log file every interval minutes. The value range is 5 to 1440 (minutes).
Send to Email	Disable	Enables or disables the send to e-mail function.
E-mail Server		
IP Address or Domain Name	Empty	Enter the SMTP server IP address or domain name. The maximum allowed characters length is 50.
SMTP Port	Empty	The SMTP port allowed range is 25 or 2500 to 2599.
E-mail (SMTP) Server needs to check my account	Disable	If your SMTP server requires authentication before accepting e-mail, click on check box. These values (username and password) are supplied by your network administrator, SMTP server provider or ISP.
Username	Empty	Enter the username for the SMTP server. The maximum allowed characters length is 64.

ALL-HS02530 Hotspot in a Printer

Password	Empty	Enter the password for the SMTP server
Email From		
Name	Empty	Enter the name you would like to appear in the "message from" field of your outgoing message. The maximum allowed characters length is 20.
Email Address	Empty	Enter your e-mail address. This is the address others will use to send email to Email Address 1/Email Address 2.
Email To		
Email Address 1	Empty	Enter your first e-mail address to receive the logs.
Email Address 2	Empty	Enter your second e-mail address to receive the logs.

3-2-3-3 Bandwidth

The function enables administrator to limit bandwidth usage on a per user basis (MAC address). That prevents users from consuming a disproportionately large amount of bandwidth so every user gets a fair share of the available bandwidth.

BANDWIDTH

Bandwidth Management: Enable

Limit bandwidth usage on a per user (MAC address) basis. Prevent individual users from consuming a disproportionately large amount of bandwidth. Distribute bandwidth more fairly across all users.

Specify maximum Upstream/Downstream bandwidth:

Maximum Upstream

64 Kbps

Kbps (64~5120)

Maximum Downstream

128 Kbps

Kbps (64~5120)

Apply

Figure 3-2-23 Bandwidth Setting Screen

Item	Default	Description
Bandwidth	Disable	Enables or disables Bandwidth Management.
Maximum Upstream	64Kbps	Specify the amount of upstream bandwidth.
Maximum Downstream	128Kbps	Specify the amount of downstream bandwidth.

3-2-3-4 SNMP

The SNMP Agent Configuration screen enables you to access to your device via Simple Network Management Protocol. If you are not familiar with SNMP, please consult your Network Administrator or consult SNMP reference material. You must first enable SNMP on the SNMP Agent Configuration screen.

SNMP

SNMP:

SNMP Port: (161 or 16100 ~ 16199)

Trap Port: (162 or 16200 ~ 16299)

No	Community Name	NMS Address	Privileges	Status
01	<input type="text" value="public"/>	<input type="text" value="ANY"/>	<input type="button" value="Read"/>	<input type="button" value="Invalid"/>
02	<input type="text"/>	<input type="text"/>	<input type="button" value="Read"/>	<input type="button" value="Invalid"/>
03	<input type="text"/>	<input type="text"/>	<input type="button" value="Read"/>	<input type="button" value="Invalid"/>
04	<input type="text"/>	<input type="text"/>	<input type="button" value="Read"/>	<input type="button" value="Invalid"/>
05	<input type="text"/>	<input type="text"/>	<input type="button" value="Read"/>	<input type="button" value="Invalid"/>

Figure 3-2-24 SNMP Setting Screen

Item	Default	Description
SNMP	Disable	Disables or enables the SNMP management.
SNMP Port	161	If the SNMP enables, also allowed to specific the SNMP port number via NAT. The allowed SNMP port numbers are 161(default), 16100-16199 and Trap port numbers are 162 (default), 16200-16299. This Port setting is useful for remote control via NAT network.
Trap Port	162	
Configuration		
Community Name	public/private	Every unit with SNMP enable must be configured to recognize one or more community names up to 20 characters. The default setting for the community of entry 1 is “public” and for the entry 2 is “private” and others are empty.
NMS Address	ANY	The address of the NMS. The default settings for the NMS Networking are “ANY”.
Privileges	Read/Write	Choose “Read”, “Write”, “Trap Recipients” and “All” for different privileges. The default setting of the entry 2 is “write” and others are “read”.
Status	Valid/Invalid	Chosen “Valid” or “Invalid”. The default setting of entry 1, 2 are valid and

		others are invalid.
--	--	---------------------

3-2-4 SECURITY

3-2-4-1 Pass Through

This function allow administrator to set some special devices pass through the ALL-HS02530 system. Because some network devices might be constructed under the ALL-HS02530. However these devices needn't be checked and authorized. The ALL-HS02530 provides a pass through list and the administrator can control which devices can be pass through with authentication.

PASS THROUGH

Pass Through: Enable

Pass Through Destination allows the subscribers to access specified Internet websites without authentication, which is useful to promote selected services. Pass Through Subscriber is useful for VIP users without authentication. Pass Through LAN device is also useful for devices that do not have a web browser (cash registers, for example) or that are connected with LAN port (wireless access points, for example).

Enter new pass through for destination (up to 20 entries)

☒ URL or Website:

☐ Start / End IP Address: ~

Enter new pass through for subscribers or LAN devices (up to 20 entries)

☐ Start / End IP Address: ~

☐ IP Address: Subnet Mask:

☐ MAC address: Mask: FF-FF-FF-FF-FF-FF

Add to list

Pass Through List

No.	Active	Address List	Type	Description	Delete
Delete All					

Apply

Figure 3-2-25 Pass through Setting Screen

Item	Default	Description
Pass Through	Disable	Enables or disables the pass through function.
Destination URL/IP Address Pass Through		
URL or Website	Empty	Enter the URL Page; please use this format such like "http://www.yahoo.com". The maximum character of the URL Page is 50. Note: 1. Please add www.apple.com into PASS THROUGH list in ALL-HS02530. (iOS 6 device and later is required.)

		2. Please add go.redirectingat.com for certain QR code apps.
Start / End IP Address	Empty	Enter the start / end IP address of you wants pass through.
Subscriber IP/MAC Address or LAN Device Pass Through		
Start / End IP Address	Empty	Enter the start / end IP address of you wants pass through.
IP Address	Empty	Enter the IP address of you wants pass through.
Subnet Mask	Empty	Enter the subnet mask of you wants pass through.
MAC Address	Empty	Enter the MAC address of you wants pass through.
Mask	Empty	Enter the subnet mask of you wants pass through.
Pass Through List	Display the pass through Information of ALL-HS02530.	
No.	-	The index number of pass through address.
Active	Disable	Click on check box, active or inactive the pass through address.
Address List	-	Display the pass through address(s).
Type	-	Display the type of pass through address.
Delete	Disable	Select the check boxes and click 'Delete' to delete the pass through address(s).

Click **Add to List** button to add a new entry. Click **Apply** button to save the new settings. Click **Delete All & Apply** button to delete all entries.

Note: The priority of "pass through" is higher than "Filtering".

3-2-4-2 Filtering

Filtering allows the system administrator to have a list of restricted destinations, which is useful to block specified Internet websites or Intranet areas.

FILTERING

Filtering: Enable

List of restricted destinations, usually for blocking specified Internet websites or Intranet areas.

HTTP Message to display when a website is blocked

This Web Site is blocked by System

Enter new restricted destination: (up to 20 entries)

☒ URL or Website:

☐ Start / End IP Address: ~

☐ IP Address: Subnet Mask:
Add to list

Restricted Destination List

No.	Active	Address List	Delete
Delete All			

Apply

Figure 3-2-26 Filtering Setting Screen

Item	Default	Description
Filtering	Disable	Enables or disables filtering function.
HTTP Message to display when a website is blocked	The Web Site is blocked by System	Enter the http message. The maximum character of the HTTP message is 200.
Restrict Destination		
URL or Website	Empty	Enter the URL Page of you wants to filter; please use this format such like "http://www.yahoo.com". The maximum character of the URL Page is 50.
Start IP Address	Empty	Enter the start IP address of you wants to filter.
IP Address	Empty	Enter the destination IP address of you wants to filter.
Subnet Mask	Empty	Enter the destination subnet mask.

No	-	The index number of filtering address.
Active	Disable	Click on check box, active or inactive the filtering address.
Address List	-	Display the filtering address(s).
Delete	Disable	Select the check boxes and click ' Delete ' to delete the filtering address(s).

Click **Add to List** button to add a new entry.

Click **Apply** button to save the new settings.

Click **Delete All & Apply** button to delete all entries.

3-2-4-3 Secure Remote

This feature allows you to create a secure connection to a remote site or back end system with VPN PPTP Client. If “Secure Remote” is enabled, the RADIUS packet/syslog will be transferred to this secure connection.

SECURE REMOTE

Secure Remote:

Disable

Create a secure connection to a remote site or back end system with VPN PPTP Client. When enabled, the RADIUS packet/syslog/HTTP/session trace will be transferred to this secure connection.

PPTP Client

☐ Auto-connect at Start-up (Always connect)

PPTP Server IP address :

Username :

Password :

start/stop connection

Status

refresh

VPN Tunnel : Online/Offline/Connecting

Client IP : 192.168.1.1

Apply

Figure 3-2-27 Secure Remote Setting Screen

Item	Default	Description
Auto-connect at Start-up (Always connect)	Disable	Enable the check box to automatically establish the PPTP connection.
PPTP Server IP address	Empty	Enter the PPTP server IP address provided by your ISP.
Username	Empty	Enter the user name provided by your ISP. The user name can consist of up to 80 alphanumeric characters and is case sensitive.
Password	Empty	Enter the user password provided by your ISP. The password can consist of up to 80 alphanumeric characters and is case sensitive.
start / stop connection	Click on Start/Stop connection button to start/stop PPTP connection.	
VPN Tunnel	Display the status.	
Client IP	Display the IP address.	

ALL-HS02530 Hotspot in a Printer

Click **refresh** button to delete all entries.

3-2-5 SYSTEM

3-2-5-1 System

Define the ALL-HS02530 System configuration.

SYSTEM

System Host Name	<input type="text"/>																														
Domain Name	<input type="text"/>																														
Location Information	<table><tr><td>Location Name:</td><td><input type="text"/></td><td>(Max=50)</td></tr><tr><td>Address:</td><td><input type="text"/></td><td>(Max=200)</td></tr><tr><td>City:</td><td><input type="text"/></td><td>(Max=50)</td></tr><tr><td>State / Province:</td><td><input type="text"/></td><td>(Max=50)</td></tr><tr><td>Zip / Postal Code:</td><td><input type="text"/></td><td>(Max=10)</td></tr><tr><td>Country:</td><td><input type="text"/></td><td>(Max=50)</td></tr><tr><td>Contact Name:</td><td><input type="text"/></td><td>(Max=50)</td></tr><tr><td>Contact Telephone:</td><td><input type="text"/></td><td>(Max=50)</td></tr><tr><td>Contact FAX:</td><td><input type="text"/></td><td>(Max=50)</td></tr><tr><td>Contact Email:</td><td><input type="text"/></td><td>(Max=50)</td></tr></table>	Location Name:	<input type="text"/>	(Max=50)	Address:	<input type="text"/>	(Max=200)	City:	<input type="text"/>	(Max=50)	State / Province:	<input type="text"/>	(Max=50)	Zip / Postal Code:	<input type="text"/>	(Max=10)	Country:	<input type="text"/>	(Max=50)	Contact Name:	<input type="text"/>	(Max=50)	Contact Telephone:	<input type="text"/>	(Max=50)	Contact FAX:	<input type="text"/>	(Max=50)	Contact Email:	<input type="text"/>	(Max=50)
Location Name:	<input type="text"/>	(Max=50)																													
Address:	<input type="text"/>	(Max=200)																													
City:	<input type="text"/>	(Max=50)																													
State / Province:	<input type="text"/>	(Max=50)																													
Zip / Postal Code:	<input type="text"/>	(Max=10)																													
Country:	<input type="text"/>	(Max=50)																													
Contact Name:	<input type="text"/>	(Max=50)																													
Contact Telephone:	<input type="text"/>	(Max=50)																													
Contact FAX:	<input type="text"/>	(Max=50)																													
Contact Email:	<input type="text"/>	(Max=50)																													
Date/Time	<table><tr><td colspan="2">Time Zone: GMT</td></tr><tr><td colspan="2"><input type="radio"/> Manual Setting</td></tr><tr><td colspan="2">Date: 2011 / 1 / 1 (Year/Month/Day)</td></tr><tr><td colspan="2">Time: 00 : 00 : 00 (Hour : Minute : Second)</td></tr><tr><td colspan="2"><input checked="" type="radio"/> NTP Setting</td></tr><tr><td colspan="2">Date: 2004/7/2 Time: 16:06:02 <input type="button" value="Update Now"/></td></tr><tr><td>Server IP/Domain Name 1:</td><td>time.nist.gov</td></tr><tr><td>Server IP/Domain Name 2:</td><td>www.nist.gov</td></tr><tr><td>Update Time</td><td>24 hours</td></tr><tr><td><input type="checkbox"/> Daylight Saving Time</td><td>Start Date: 4 Month / 1 Day End Date: 10 Month / 31 Day</td></tr></table>	Time Zone: GMT		<input type="radio"/> Manual Setting		Date: 2011 / 1 / 1 (Year/Month/Day)		Time: 00 : 00 : 00 (Hour : Minute : Second)		<input checked="" type="radio"/> NTP Setting		Date: 2004/7/2 Time: 16:06:02 <input type="button" value="Update Now"/>		Server IP/Domain Name 1:	time.nist.gov	Server IP/Domain Name 2:	www.nist.gov	Update Time	24 hours	<input type="checkbox"/> Daylight Saving Time	Start Date: 4 Month / 1 Day End Date: 10 Month / 31 Day										
Time Zone: GMT																															
<input type="radio"/> Manual Setting																															
Date: 2011 / 1 / 1 (Year/Month/Day)																															
Time: 00 : 00 : 00 (Hour : Minute : Second)																															
<input checked="" type="radio"/> NTP Setting																															
Date: 2004/7/2 Time: 16:06:02 <input type="button" value="Update Now"/>																															
Server IP/Domain Name 1:	time.nist.gov																														
Server IP/Domain Name 2:	www.nist.gov																														
Update Time	24 hours																														
<input type="checkbox"/> Daylight Saving Time	Start Date: 4 Month / 1 Day End Date: 10 Month / 31 Day																														
NAT (Network Address Translation)	<input checked="" type="radio"/> Enable <input checked="" type="checkbox"/> Plug and Play Internet access <input type="radio"/> Disable																														
User Session Limited	<input checked="" type="radio"/> Enable 300 (1~1024) <input type="radio"/> Disable																														
Layer 2 Isolation Security	<input checked="" type="radio"/> Enable <input type="radio"/> Disable																														
Secure administrator IP addresses	<input checked="" type="radio"/> Any <input type="radio"/> Specify <table><tr><td>1</td><td><input type="text"/></td><td>~</td><td><input type="text"/></td></tr><tr><td>2</td><td><input type="text"/></td><td>~</td><td><input type="text"/></td></tr><tr><td>3</td><td><input type="text"/></td><td>~</td><td><input type="text"/></td></tr><tr><td>4</td><td><input type="text"/></td><td>~</td><td><input type="text"/></td></tr><tr><td>5</td><td><input type="text"/></td><td>~</td><td><input type="text"/></td></tr></table>	1	<input type="text"/>	~	<input type="text"/>	2	<input type="text"/>	~	<input type="text"/>	3	<input type="text"/>	~	<input type="text"/>	4	<input type="text"/>	~	<input type="text"/>	5	<input type="text"/>	~	<input type="text"/>										
1	<input type="text"/>	~	<input type="text"/>																												
2	<input type="text"/>	~	<input type="text"/>																												
3	<input type="text"/>	~	<input type="text"/>																												
4	<input type="text"/>	~	<input type="text"/>																												
5	<input type="text"/>	~	<input type="text"/>																												
Multicast passthrough	<input checked="" type="radio"/> Enable <input type="radio"/> Disable																														
Allow remote user to ping the device	<input checked="" type="radio"/> Enable <input type="radio"/> Disable																														
SSL Certificate	<input type="radio"/> Enable <input type="radio"/> Customer Certificate																														
Personal ID Recognition Mode	<input type="radio"/> Enable <input checked="" type="radio"/> Disable																														

Figure 3-2-28 System Setting Screen

Item	Default	Description
System/Host Name	Empty	The system name can consist of up to 40 alphanumeric characters.
Domain Name	Empty	The Domain name can consist of up to 80 alphanumeric characters.
Location Information	Empty	Enter your location information.
Date/Time		
Time Zone	GMT	Select the appropriate time zone for your location.
Manual Setting	Click Manual Setting to set the system date and time.	
Date	Year/Month/Day	Enter the Date for the system.
Time	Hour:Minute:Second	Enter the Time for the system.
NTP Setting	Enable	Enables or disables NTP (Network Time Protocol) Time Server. Network Time Protocol can be utilized to synchronize the time on devices across a network. A NTP Time Server is utilized to obtain the correct time from a time source and adjust the local time.
Server IP/Domain Name	Empty	Enter the IP address/domain name of NTP server. The maximum allowed characters length is 100.
Update Time	0 hours	Enter the number of hours for update time.
Daylight Saving Time	Disable	Enables or disables Daylight Saving Time (DST).
	Month/Day	Set the Daylight Saving Time (DST) on the ALL-HS02530. Adjust the begin time and end time.
NAT (Network Address Translation)		
NAT	Enable	Enables or disables NAT Address Translation function.
User Session Limited	Enable,300	Enables or disables user session limit function. This feature provides you an ability to control a number of sessions allowed for particulars user(s) at the one time.
IP Plug and Play (iPnP Technology)	Enable	Enables or disables plug & play function. When enabled, the user needn't change their network configuration to access the Internet.
Layer 2 Isolation Security	Enable	If enable plug and play is selected, you can enable Layer 2 Isolation Security function. When the "Layer 2 Isolation Security" enabled, everyone cannot communicate with each other.

ALL-HS02530 Hotspot in a Printer

Secure administrator IP Addresses	Any	Options: Any and Specify. Administrator can specify 5 IP addresses or a range to allow remote control access from network.
Multicast Pass Through	Enable	This function allows for multiple transmissions to specific recipients at same time.
Allow remote user to ping the device	Enable	This function allows remote user to ping the ALL-HS02530 through Internet. Ping is normally used to test the physical connection between two devices, to ensure that everything is working correctly.
SSL Certificate	Enable	Option: default or customize certificate, These are two ways to create a certificate, one is purchase a certificate from a certificate authority (Ex. Verisign or Thawte), and another is creating a self-certificate (For example: Uses OpenSSL tool).
Personal ID Recognition mode	Disable	Some countries or areas will ask WiFi users to offer personal ID recognition according to the law for the Internet crime investigation. If you would like to active PIR function, please refer to the Chapter 5 Personal ID Recognition .

Click **Apply** button to save the new settings.

3-2-5-2 WAN/LAN

WAN / LAN

LAN	Device IP Address and Subnet mask settings IP Address: <input type="text" value="10.59.1.1"/> Subnet Mask: <input type="text" value="255.255.255.0"/>
WAN MAC Address	<input checked="" type="radio"/> Default <input type="radio"/> Change to: <input type="text" value="00"/> : <input type="text" value="00"/> : <input type="text" value="00"/> : <input type="text" value="00"/> : <input type="text" value="00"/>
WAN MTU Setting	Wan Port Maximum Transmission Unit <input type="text" value="1500"/>
WAN Port Mode	<input checked="" type="radio"/> DHCP Client (Mostly for Cable modem users or Local Area Network) <input type="radio"/> Static IP (Mostly for advanced Local Area Network environment) Static IP information (from your ISP) IP Address: <input type="text" value="0.0.0.0"/> Subnet Mask: <input type="text" value="0.0.0.0"/> Gateway IP address: <input type="text" value="0.0.0.0"/> Primary DNS Server: <input type="text"/> Secondary DNS Server: <input type="text"/> <input type="radio"/> PPPoE (Usually for ADSL modem users) Your ISP requires a username and password. Username: <input type="text"/> Password: <input type="text"/> PPP MTU Setting: <input type="text" value="1492"/> TCP MSS Setting: <input type="text" value="1452"/> Service Name: <input type="text"/> <input checked="" type="radio"/> Connect on Demand Max Idle Time: <input type="text" value="10"/> Min. <input type="radio"/> Keep alive Redial Period: <input type="text" value="30"/> Sec. <input type="radio"/> PPTP (Usually for Europe ADSL modem users) Your ISP requires a username, password, and PPTP setting My IP Address: <input type="text"/> My Subnet Mask: <input type="text"/> Gateway IP address: <input type="text"/> PPTP Server IP Address: <input type="text"/> Username: <input type="text"/> Password: <input type="text"/> PPP MTU Setting: <input type="text" value="1460"/> TCP MSS Setting: <input type="text" value="1400"/> Connection ID/Name: <input type="text"/> <input checked="" type="radio"/> Connect on Demand Max Idle Time: <input type="text" value="10"/> Min. <input type="radio"/> Keep alive Redial Period: <input type="text" value="30"/> Sec.
<input type="button" value="Apply"/>	

Figure 3-2-29 WAN/LAN Setting Screen

Item	Default	Description
LAN		
IP Address	10.59.1.1	The internal LAN IP address of your Wireless Subscriber Server Gateway.
Subnet Mask	255.255.255.0	Enter the subnet mask for the IP address.
WAN MAC Address		
IP Address	The default MAC address is set to the WAN physical interface on device.	
DHCP Client	The device can work as a DHCP client. This allows the device to obtain the IP address and other TCP/IP settings from your ISP. If your xDSL/Cable comes with this feature, please enable Use DHCP Client.	
Static IP		
IP Address	Enter the IP address for the xDSL/Cable connection (provided by your ISP).	
Subnet Mask	Enter the subnet mask for the IP address.	
Gateway IP Gateway	Enter the Gateway IP address for the xDSL/Cable connection (provided by your ISP).	
Primary DNS Server	A primary DNS server IP address for the xDSL/Cable connection (provided by your ISP).	
Secondary DNS Server	A secondary DNS server IP address for the xDSL/Cable connection (provided by your ISP). If the primary DNS Server IP were not available, meanwhile, Secondary DNS Server IP would start in the same time.	
PPPoE		
User Name	Empty	Enter your PPPoE account name. The user name can consist of up to 80 alphanumeric characters and is case sensitive.
Password	Empty	Enter your PPPoE password. The password can consist of up to 80 alphanumeric characters and is case sensitive.
PPP MTU Setting	1492	MTU (Maximum Transfer Unit) specifies maximum transmission unit size.
TCP MSS Setting	1452	MSS (Maximum Segment Size) specifies maximum segment size.
Service Name	Empty	Enter the service name provided by your ISP. The service name can consist of up to 64 alphanumeric characters and is case sensitive.
Connect on Demand	Enable	You can configure your ALL-HS02530 to cut your connection with your ISP after a specified period of time (Max Idle Time). If you have been disconnected due to inactivity, Connect on Demand enables your ALL-HS02530 to automatically re-establish your connection as soon as you attempt to access the Internet again. If you wish to activate Connect on Demand, click the radio button. If you want your Internet connection to remain, click the radio button of keep alive. The Max Idle Time
Max Idle Time	10 Minutes	

ALL-HS02530 Hotspot in a Printer

		maximum value is 65535 minutes.
Keep alive	Disable	This option keeps your PPPoE enabled Internet access connected indefinitely, even when it sits idle. The Redial Period maximum value is 65535 seconds.
Redial Period	30 Seconds	

3-2-5-3 Server

Server

SERVER

Server Static DHCP Table

Web Server	<input checked="" type="radio"/> HTTP Port: <input type="text" value="80"/> (80,8010-8060) <input type="radio"/> HTTPS Port: <input type="text" value="443"/> (443,4430-4440) Administrator Idle-Timeout: <input type="text" value="5"/> Min(s) (1 - 1440) Account Manager Idle-Timeout: <input type="text" value="5"/> Min(s) (1 - 1440)
DHCP Server	<input type="radio"/> DHCP Disable <input type="radio"/> DHCP Relay DHCP Server IP Address: <input type="text"/> <input checked="" type="radio"/> DHCP Server IP Pool Starting Address: <input type="text" value="10.59.1.2"/> Pool Size: <input type="text" value="253"/> (Max=253) Lease Time: <input type="text" value="300"/> (Minutes) Primary DNS Server: <input type="text" value="168.95.1.1"/> Secondary DNS Server: <input type="text"/>
Email Server Redirect	IP Address or Domain Name: <input type="text"/> SMTP Port: <input type="text"/> (25, 2500 - 2599)

[Apply](#)

Figure 3-2-30 Server Setting Screen

Item	Default	Description
Web Server		
HTTP Port	80	Enter the HTTP port number. The HTTP port allowed range is 80 or 8010 to 8060. For access the ALL-HS02530 system under NAT, please tab the "http://HTTP Port IP Address: Port Number".
HTTPS Port	443	Enter the HTTPS port number. The HTTPS port allowed range is 443 or 4430 to 4440. For access the ALL-HS02530 system, please tab the "https://HTTPS Port IP Address: Port Number".
Administrator Idle-Timeout	5 Minutes	The idle time out valid range is 1-1440. If the idle time out is set as 5 minutes, it means if the administrator doesn't send packet in 5 minutes, the administrator will logout automatically.
DHCP Server	Enable	There are three types of DHCP Services. DHCP Disable—Disable the DHCP server function.

ALL-HS02530 Hotspot in a Printer

		DHCP Relay—Enable DHCP Relay function. DHCP Server—Enable DHCP server function.
DHCP Relay	To route DHCP through an external server, the administrator needs to enable the DHCP relay and assign a valid DHCP server IP address.	
DHCP Server IP Address	Empty	Enter the IP address of DHCP server.
DHCP Server	The ALL-HS02530 's DHCP server is turned on and running by default when you install it in your network.	
DHCP Pool Starting Address	10.59.1.2	Enter the DHCP Pool Starting IP address.
Pool Size	253	The DHCP pool size range is 1 to 512.
Lease Time	300 Minutes	The DHCP lease time. The DHCP lease time range is 1 to 71582788 minutes.
Primary DNS Server	168.95.1.1	Enter the IP address of the network's primary DNS server.
Secondary DNS Server	Empty	Enter the IP address of a second DNS server on the network.
Email Server Redirect	<p>To prevent some subscriber's original Email server may protect by firewall or NAT network. ALL-HS02530 provides an extra Email server parameter to forward the subscriber's Email. The ALL-HS02530 not only forwards the subscribers' E-mail via other E-mail server but also changes the SMTP header. The recipient of your E-mail sees the message as if you sent it from your local Internet Service Provide, not form the hotel or other place.</p> <p>Note: Before setting this sever, please make sure the e-mail sever relay function is opened. It must not exceed 50 characters.</p>	
IP Address or Domain Name	Empty	Enter the E-mail server IP address or domain name.
SMTP Port	25	Enter the SMTP port number for mail server. The SMTP port allowed range is 25 or 2500 to 2599.

Click **Apply** button to save the new settings.

Static DHCP

This function allows subscriber to assign IP address on the LAN to specific individual computers based on their MAC Address.

SERVER

Server Static DHCP Table

	IP	MAC		IP	MAC
1			26		
2			27		
3			28		
4			29		
5			30		
6			31		
7			32		
8			33		
9			34		
10			35		
11			36		
12			37		
13			38		
14			39		
15			40		
16			41		
17			42		
18			43		
19			44		
20			45		
21			46		
22			47		
23			48		
24			49		
25			50		

Apply

Figure 3-2-31 Server Setting Screen

Item	Default	Description
IP Address	Empty	Enter the IP address that subscriber want to assign to the computer on LAN with the MAC address the subscriber will also specify.
MAC Address	Empty	Enter the MAC address of a computer on your LAN.

Click **Apply** button to save the new settings.

3-2-5-4 Customization

Login Page

The ALL-HS02530 provides three different login page formats, including standard, redirect, advanced and frame format.

CUSTOMIZATION

Login Page	Logo	Information Window	Account Printout	Credit Card	User Agreement Page																				
Choose a login page type:																									
<input type="radio"/> Standard		Custom the message on the standard login page: <table border="1"> <tr> <td><input type="checkbox"/> Logo</td> <td></td> </tr> <tr> <td>Title</td> <td>Welcome (Max. 80 characters)</td> </tr> <tr> <td>Subtitle</td> <td>Wireless Subscriber Gateway (Max. 80 characters)</td> </tr> <tr> <td>Username</td> <td>Username (Max. 20 characters)</td> </tr> <tr> <td>Password</td> <td>Password (Max. 20 characters)</td> </tr> <tr> <td>Enter Button</td> <td>Enter (Max. 20 characters)</td> </tr> <tr> <td>Cancel Button</td> <td>Cancel (Max. 20 characters)</td> </tr> <tr> <td><input type="checkbox"/> Footnote</td> <td>Contact us if you have any q (Max. 240 characters)</td> </tr> <tr> <td><input checked="" type="checkbox"/> Copyright</td> <td>Copyright (c) 2013-2015 All F (Max. 80 characters)</td> </tr> <tr> <td>Background Color</td> <td>FFFFFF View Color Grid</td> </tr> </table>				<input type="checkbox"/> Logo		Title	Welcome (Max. 80 characters)	Subtitle	Wireless Subscriber Gateway (Max. 80 characters)	Username	Username (Max. 20 characters)	Password	Password (Max. 20 characters)	Enter Button	Enter (Max. 20 characters)	Cancel Button	Cancel (Max. 20 characters)	<input type="checkbox"/> Footnote	Contact us if you have any q (Max. 240 characters)	<input checked="" type="checkbox"/> Copyright	Copyright (c) 2013-2015 All F (Max. 80 characters)	Background Color	FFFFFF View Color Grid
<input type="checkbox"/> Logo																									
Title	Welcome (Max. 80 characters)																								
Subtitle	Wireless Subscriber Gateway (Max. 80 characters)																								
Username	Username (Max. 20 characters)																								
Password	Password (Max. 20 characters)																								
Enter Button	Enter (Max. 20 characters)																								
Cancel Button	Cancel (Max. 20 characters)																								
<input type="checkbox"/> Footnote	Contact us if you have any q (Max. 240 characters)																								
<input checked="" type="checkbox"/> Copyright	Copyright (c) 2013-2015 All F (Max. 80 characters)																								
Background Color	FFFFFF View Color Grid																								
		Preview Standard Login Page																							
<input type="radio"/> Redirect		Redirect Login Page URL : <input type="text"/> Code																							
<input type="radio"/> Advanced		<table border="1"> <tr> <td>Welcome Slogan</td> <td><input type="text"/></td> </tr> <tr> <td>Page Background</td> <td> <input type="radio"/> None <input type="radio"/> Background Color ffffff View Color Grid </td> </tr> <tr> <td>Article</td> <td><div></div></td> </tr> <tr> <td>Article Text Color</td> <td>000000 View Color Grid</td> </tr> <tr> <td>Article Background Color</td> <td> <input type="radio"/> None <input type="radio"/> ffffff View Color Grid </td> </tr> <tr> <td>Information</td> <td><input type="text"/></td> </tr> <tr> <td>Comments</td> <td><input type="text"/></td> </tr> </table>				Welcome Slogan	<input type="text"/>	Page Background	<input type="radio"/> None <input type="radio"/> Background Color ffffff View Color Grid	Article	<div></div>	Article Text Color	000000 View Color Grid	Article Background Color	<input type="radio"/> None <input type="radio"/> ffffff View Color Grid	Information	<input type="text"/>	Comments	<input type="text"/>						
Welcome Slogan	<input type="text"/>																								
Page Background	<input type="radio"/> None <input type="radio"/> Background Color ffffff View Color Grid																								
Article	<div></div>																								
Article Text Color	000000 View Color Grid																								
Article Background Color	<input type="radio"/> None <input type="radio"/> ffffff View Color Grid																								
Information	<input type="text"/>																								
Comments	<input type="text"/>																								
<input type="radio"/> Frame		<table border="1"> <tr> <td>Top Frame</td> <td>URL : http:// <input type="text"/></td> </tr> <tr> <td>Bottom Frame</td> <td>This frame will show the standard login page</td> </tr> </table>				Top Frame	URL : http:// <input type="text"/>	Bottom Frame	This frame will show the standard login page																
Top Frame	URL : http:// <input type="text"/>																								
Bottom Frame	This frame will show the standard login page																								
Apply																									

Figure 3-2-32 Customization Setting Screen

Item	Default	Description
Standard		For some service providers, they may hope to have a customize subscriber's login page to the users. This function helps them to realize the ideal. The page elements are including login page title, background color, subtitle etc.
Logo	Disable	Select the check box to display service provider's logo.
Title	Welcome	Enter the title name of subscriber login page. The maximum allowed characters length is 80.

Subtitle	Hot Spot Internet Service	Enter the subtitle name of subscriber login page. The maximum allowed characters length is 80.
Footnote	Disable	Allow the administrator to input the footnote such like "Please Contact to our Customer Service Center, EXT 141". The maximum character of the footnote is 240.
Copyright	Enable	The copyright is allowed the administrator to input a paragraph in the subscriber login page for copyright information. The maximum character of the copyright is 80.
Background Color	FFFFFF	The background text color can be specified color. For the specified text color format please views the color grid. The allowed format is Hexadecimal.

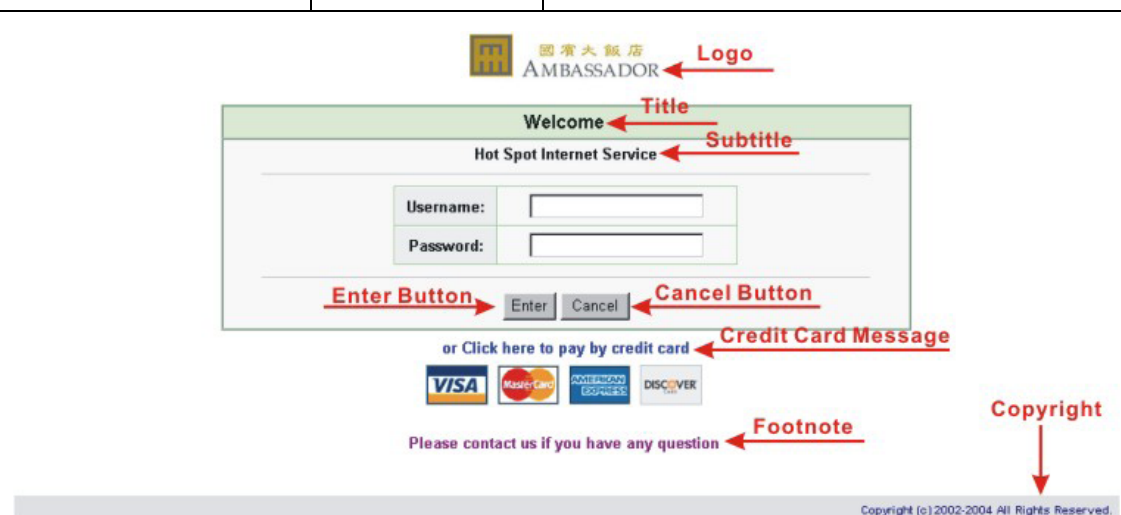


Figure 3-2-33 Login Page Screen

Redirect	This allow service provider to redirect the subscriber's browser to a specified home page.
Copy and paste the following HTML Code into your home page to produce redirect subscriber login page.	

ALL-HS02530 Hotspot in a Printer

Redirect Login Page Code

```

<html>
<body style="font-family: Arial" bgcolor="#FFFFFF">
<form method="post" action="http://1.1.1.1/login.cgi" name="apply">
<div align="center">
<table cellSpacing="0" borderColorDark="#FFFFFF" cellPadding="4" width="50%" bgcolor="#F7F7F7" borderColorLight="#9dcda0" border="1">
<tr>
<td align="center" width="100%" bgcolor="#d7f0d7" colSpan="2">
<font size="2"><b>Welcome</b></font>
</td>
</tr>
<tr>
<td align="right" width="35%" bgcolor="#eaeaea">
<font color="#000080" size="2"><b>Username:</b></font>
</td>
<td width="65%">
<input type="text" name="username" size="25">
</td>
</tr>
<tr>
<td align="right" width="35%" bgcolor="#eaeaea">
<font color="#000080" size="2"><b>Password:</b></font>
</td>
<td width="65%">
<input type="password" name="password" size="25">
</td>
</tr>
<tr>
<td align="center" width="100%" colSpan="2">
<input type="submit" name="apply" value="Enter" style="font-family: Arial">
<input type="reset" name="clear" value="Clear" style="font-family: Arial">
</td>
</tr>
</div>
</div>
</form>
</body>
</html>

```

Figure 3-2-34 Preview Redirect Login Page Code

Advanced	This function allow user to design login page of ALL-HS02530.	
Welcome Slogan	Welcome	The maximum allowed characters length is 80.
Page Background	None	The page background can be none or specified color. For the background color format please views the color grid. The allowed format is Hexadecimal.
Article	Empty	The article is allowed the administrator to input a paragraph in the subscriber login page for advisement or announcement. The maximum character of the article is 1024.
Article Text Color	000000	The article text color can be specified color. For the specified text color format please views the color grid. The allowed format is Hexadecimal.
Article Background Color	None	The article background can be specified color. For the background color format please views the color grid. The allowed format is Hexadecimal.
Information	Empty	Allow the administrator to input the text information such like address, telephone number and fax information. The maximum character of the information is 80.
Comments	Empty	Allow the administrator to input the text comments such like "Please Contact to our Customer Service Center, EXT 141". The maximum character of the comment is 80.
Frame	If "Frame" is selected the subscriber login page will be separate into Top Frame and	

	<p>Bottom Frame.</p> <p>Bottom Frame is a default format for username and password input, Top Frame is allowed to be specified a URL to link.</p>	
Top Frame URL Link	Empty	The input format can be http://www.yahoo.com. The maximum character of the URL Link is 200.
Bottom Frame	-	This frame will show the standard login page.

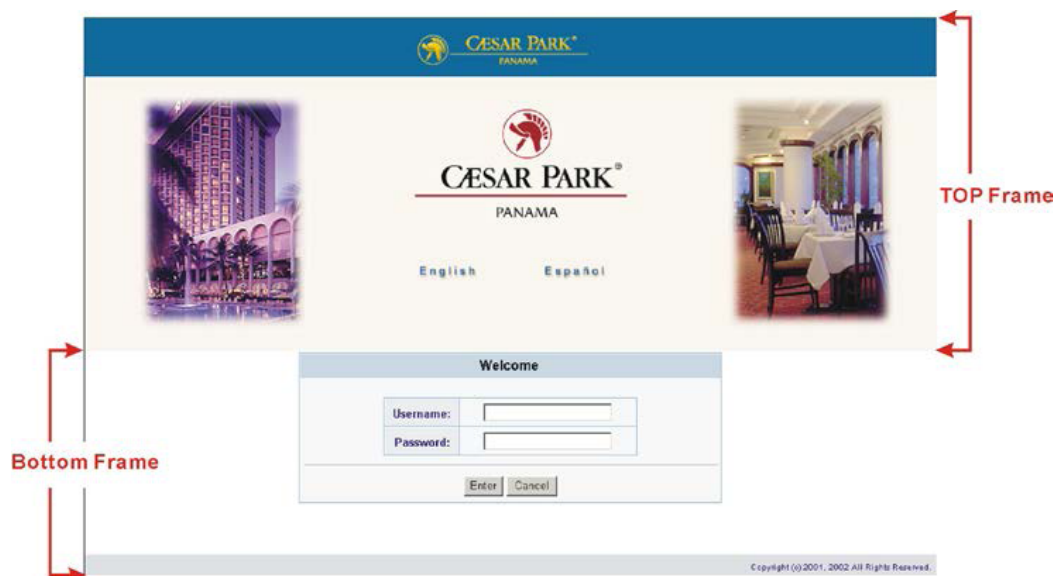


Figure 3-2-35 Example-Login Page Screen

Logo

This function allows service provider to upload the customer’s logo image file which can be shown on the standard login page and account printout of PC-connected printer.

CUSTOMIZATION

Login Page

Logo

Information Window

Account Printout

Credit Card

User Agreement Page

Upload a logo image to be shown on the standard login page and account printout.

Datei auswählen

ALLNET_bl...2dpi.jpg No logo file.

Maximum file size is 60 kbytes. Recommended dimension is approximately 200x50 pixels.

Apply

Figure 3-2-36 Logo Setting Screen

Item	Default	Description
File Path	Empty	Enter the file pathname of the logo file in the File Path field.

Click **Apply** button to save the logo file to system.

Click **Delete** button to delete the logo file.

Information Window

This function allow service provider can decide whether they want an “Information Window” pop-up on subscriber PC when authenticate successful or not and specified text of information window. Subscriber can type “http://1.1.1.1/info” to open the information window again or enter “http://1.1.1.1/logout” to logout immediately if accumulation billing selected.

CUSTOMIZATION

Login Page

Logo

Information Window

Account Printout

Credit Card

User Agreement Page

Customize the pop-up message that appears after successful subscriber login. The subscriber can type http://1.1.1.1/info to open this window again.

☒ Display Information Window after a subscriber logs in successfully

Information Window Type

Redirect

Pop Up

☐ Allow subscriber to close the pop-up window

Information Window Contents

Window Name

Information Window

(Max. 30 character)

Main message

You can use Internet now!

(Max. 30 character)

Message Description

This is an information window to show the usage and notice. You can type http://1.1.1.1/info to open this window again without VPN connection.

(Max. 150 character)

Time count label

Remaining Usage

(Max. 30 character)

☐ Warning/Alarm message

If you don't want to continue using Internet, please remember to logout. Just click the Logout button.

(Max. 150 character)

☐ Notice Message

Notice Text 1

Notice!

(Max. 150 character)

Notice Text 2

If you are going to use VPN connection now, please close the message window before you run VPN connection.

(Max. 150 character)

Notice Text 3

(Max. 150 character)

Preview

Apply

Figure 3-2-37 Example-Login Page Screen



Figure 3-2-38 Information Window

Billing Type=Time to Finish

Can be replenished by subscriber=Enable



Information Window

You can use Internet now!

This is an information window to show the usage and notice. You can type <http://1.1.1.1/info> to open this window again without VPN connection.

Remaining Usage HH:MM:SS

If you don't want to continue using Internet, please remember to logout.
Just click the Logout button.

Notice!
If you are going to use VPN connection now, please close the message window before you run VPN connection.

Replenish

Figure 3-2-39 Information Window

Billing Type=Accumulation

Can be replenished by subscriber=Disable



Information Window

You can use Internet now!

This is an information window to show the usage and notice. You can type <http://1.1.1.1/info> to open this window again without VPN connection.

Remaining Usage HH:MM:SS

If you don't want to continue using Internet, please remember to logout.
Just click the Logout button.

Notice!
If you are going to use VPN connection now, please close the message window before you run VPN connection.

Logout

Figure 3-2-40 Information Window

Billing Type=Accumulation

Can be replenished by subscriber=Enable



Information Window

You can use Internet now!

This is an information window to show the usage and notice. You can type <http://1.1.1.1/info> to open this window again without VPN connection.

Remaining Usage HH:MM:SS

If you don't want to continue using Internet, please remember to logout.
Just click the Logout button.

Notice!
If you are going to use VPN connection now, please close the message window before you run VPN connection.

Replenish Logout

Figure 3-2-41 Information Window

Account Printout

This function allow service provider to specified text of account printout.

CUSTOMIZATION

Login Page | Logo | Information Window | **Account Printout** | Credit Card | User Agreement Page

☒ Logo * Only for connected printer

☒ Title:
 Format 1: (Max=75)
 Format 2: (Max=75)

☒ Subtitle:
 Format 1: (Max=60)
 Format 2: (Max=60)

Username: (Max=24)

Password: (Max=24)

☒ Billing Method:
 Billing: Time to Finish: (Max=24)
 Accumulation: (Max=24)

☒ Billing Profile: (Max=24)

☒ Purchase Unit: (Max=24)

☒ Usage Time: (Max=24)

☒ Price: (Max=24)

☒ Tax: (Max=24) TOTAL: (Max=24)

ESSID: (Max=24)

☒ Wireless Security:
 WPA: (Max=24)
 WPA2: (Max=24)
 MixMode: (Max=24)

☒ Additional Label 1: (Max=24) Value: (Max=24)

☒ Additional Label 2: (Max=24) Value: (Max=24)

☒ Print out Time:
 Format: HH: mm: ss (HH: 24h hh: 12h ll: AM/PM)

☒ Expiration Time:
 Description: (Max=24x3)
 Format: HH: mm: ss (HH: 24h hh: 12h ll: AM/PM)
 Accumulation: (Max=24x4)

☒ Ending:
 (Max=24x10)

☒ QR Code:

[Preview of connected printer output](#)
[Preview of account generator printer output](#)

Figure 3-2-42 Account Printout Customization Setting Screen

Note: If you don't print out QR code on the ticket, please disable "QR Code".

3-2-5-5 Portal Page

This feature allows redirecting subscriber’s browser to a specified portal page after successful login.

PORTAL PAGE

Set to redirect subscriber to a portal page after successful login.

URL Link

URL : http://

Apply

Figure 3-2-43 Portal Page Setting Screen

Item	Default	Description
URL Link	Empty	Enter the URL Link page. The input format can be “http://www.yahoo.com”. The maximum character of the URL Link is 200.

Click **Apply** button, the success dialog box appears. Click on **Back** to return to Portal Page setting screen.

3-2-5-6 Advertisement

The system allow service provider to input 5 URL links for advertisement link purpose.

ADVERTISEMENT

Specify URLs for advertisements. Advertisements are displayed at the start of network access.

Frequency	<input checked="" type="radio"/> One Time Only <input type="radio"/> Every <input type="text" value="0"/> Min(s)
Sequence	<input checked="" type="radio"/> Randomly <input type="radio"/> Orderly (From 1 to 10)
URL Link 1	URL : <input type="text" value="http://"/> <input type="text"/>
URL Link 2	URL : <input type="text" value="http://"/> <input type="text"/>
URL Link 3	URL : <input type="text" value="http://"/> <input type="text"/>
URL Link 4	URL : <input type="text" value="http://"/> <input type="text"/>
URL Link 5	URL : <input type="text" value="http://"/> <input type="text"/>

[Apply](#)

Figure 3-2-44 Advertisement URL Link Setting Screen

Item	Default	Description
Frequency	One Time Only	<p>One Time Only—One Time Only means to send the advertisement link once after the subscriber Login.</p> <p>Every~Min(s)—The field means to send the advertisement link every interval minutes. The value range is 1 to 60 (minutes).</p>
Sequence	Randomly	<p>Randomly—Display the advertisement page in the random order. From 1 to 10</p> <p>—Display the advertisement page in the order as setting.</p>
URL Link 1~5	Empty	<p>This function allows the administrator to input ten different websites in the table for advertisement. And these 5 websites will display to the subscribers at random when the subscribers login in the ALL-HS02530 system. The input format can be "http://www.yahoo.com". The maximum character of the URL Link # is 200.</p>

Click **Apply** button, the success dialog box appears. Click on **Back** to return to Advertisement URL Link setting screen.

3-2-5-7 Walled Garden

We prepare ten URL links that allows subscriber to access the specific Web pages even they didn't have a username or password. It's free trying and can use for advertisement.

WALLED GARDEN

Specify URLs that can be accessed without a username and password. These URLs are commonly used for advertisement or promotional purposes.

Link 1	Name: <input type="text"/>
	URL : <input type="text" value="http://"/> <input type="text"/>
Link 2	Name: <input type="text"/>
	URL : <input type="text" value="http://"/> <input type="text"/>
Link 3	Name: <input type="text"/>
	URL : <input type="text" value="http://"/> <input type="text"/>
Link 4	Name: <input type="text"/>
	URL : <input type="text" value="http://"/> <input type="text"/>
Link 5	Name: <input type="text"/>
	URL : <input type="text" value="http://"/> <input type="text"/>

Apply

Figure 3-2-45 Walled Garden Setting Screen

Item	Description
Name	The name is allowed user to set the prompt string in user customize login page. The maximum allowed characters length is 80.
URL 1~5	The input format can be "http://www.yahoo.com". The maximum character of the Link# is 200.

Click **Apply** button, the success dialog box appears. Click on **Back** to return to Walled Garden setting screen.

3-2-5-8 DDNS

The DDNS service (Dynamic Domain Name Service), an IP Registry provides a public central database where information such as email addresses, host names, IP addresses etc. can be stored and retrieved. This solves the problems if your DNS server uses an IP associated with dynamic IP addresses. When the ISP assigns the ALL-HS02530 a new IP, the ALL-HS02530 must inform the DDNS server the change of this IP so that the server can update its IP-to-DNS entry. Once the IP-to-DNS table in the DDNS server is updated, the DNS name for your web server (i.e., xyz.dyndns.org) is still usable.

DDNS

Force to update every hour(s) when WAN IP address does not change.

No.	Active	Settings Update Status Now
01	<input type="checkbox"/>	Status : N/A Service Provider <input type="text" value="dyndns.org (www.dyndns.org)"/> Registered Host Name <input type="text"/> (Example: xyz.dyndns.org) Login Name <input type="text"/> (max. 23 characters) Password <input type="text"/> (max. 23 characters) Email Address <input type="text"/> (optional) <input type="checkbox"/> Wildcards (optional)
02	<input type="checkbox"/>	Status : N/A <input type="checkbox"/> Wildcards (optional) Service Provider <input type="text" value="dyndns.org (www.dyndns.org)"/> Registered Host Name <input type="text"/> (Example: xyz.dyndns.org) Login Name <input type="text"/> (max. 23 characters) Password <input type="text"/> (max. 23 characters) Email Address <input type="text"/> (optional) <input type="checkbox"/> Wildcards (optional)
03	<input type="checkbox"/>	Status : N/A Service Provider <input type="text" value="dyndns.org (www.dyndns.org)"/> Registered Host Name <input type="text"/> (Example: xyz.dyndns.org) Login Name <input type="text"/> (max. 23 characters) Password <input type="text"/> (max. 23 characters) Email Address <input type="text"/> (optional) <input type="checkbox"/> Wildcards (optional)

[Apply](#)

Figure 3-2-46 DDNS Setting Screen

Item	Default	Description
Force to update every~day(s) when WAN IP address keeps no change	1 day	Enter a number in the field to set the force update interval (in days).
No	01~03	The index number of a DDNS account.
Active	Disable	Click on check box, active or inactive the DDNS record.
Update Status Now	Click the Update Status Now button to do manual update.	
Settings	Enter the account information of DDNS Server.	
Status	YY/MM/DD HH:MM:SS	Display the update date, time and status. The Status area shows the update time and current state of the DDNS Client.

		<p>N/A—DDNS Client service not installed.</p> <p>Update Successfully—DDNS Client service installed; service running.</p> <p>Update Fail—DDNS Client service installed; service not running.</p>
Service Provider	Dyndns.org (www.dyndns.org)	<p>Select a DDNS service provider by clicking in the list box.</p> <p>Note: Before configuring the DDNS settings, you have to register a dynamic domain at one of the dynamic domain service providers' list box.</p>
Registered Host Name	Empty	Enter the host name of DDNS server. The maximum character of the registered host name is 100.
Login Name	Empty	Enter the user name of DDNS server.
Password	Empty	Enter the user password of DDNS server.
Email Address	Empty	Enter your email address. The DDNS Server will e-mail you important information once your Internet Name has been successfully registered.
Wildcards (optional)	Disable	<p>Enable this function to be able to use</p> <p>*.mydomain.dyndns.org and not only mydomain.dyndns.org.</p>

Click **Apply** button, the success dialog box appears. Click on Back to return to DDNS setting screen.

3-2-5-9 Wireless

WIRELESS

General Setting	<div>Wireless Connection : <div>Enable</div></div> <div>Channel : <div>6</div></div> <div>802.11 Mode <div>802.11n + 802.11g + 802.11b</div></div> <div>Channel Width : <div>Auto 20/40 MHz</div></div>																				
Multiple ESSID Setting	<table><thead><tr><th>Item</th><th>ESSID</th><th>Security</th><th>Edit</th></tr></thead><tbody><tr><td>1</td><td>Wireless-1234_1</td><td>Open</td><td><div>Edit</div></td></tr><tr><td>2</td><td>Wireless-1234_2</td><td>Open</td><td><div>Edit</div></td></tr><tr><td>3</td><td>Wireless-1234_3</td><td>Open</td><td><div>Edit</div></td></tr><tr><td>4</td><td>Wireless-1234_4</td><td>Open</td><td><div>Edit</div></td></tr></tbody></table>	Item	ESSID	Security	Edit	1	Wireless-1234_1	Open	<div>Edit</div>	2	Wireless-1234_2	Open	<div>Edit</div>	3	Wireless-1234_3	Open	<div>Edit</div>	4	Wireless-1234_4	Open	<div>Edit</div>
Item	ESSID	Security	Edit																		
1	Wireless-1234_1	Open	<div>Edit</div>																		
2	Wireless-1234_2	Open	<div>Edit</div>																		
3	Wireless-1234_3	Open	<div>Edit</div>																		
4	Wireless-1234_4	Open	<div>Edit</div>																		

Do not change the below settings unless you are aware of the possible results. Click **Default** to restore the factory default settings.

Beacon Interval	<div>100</div>	(msec, range:1~1000, default:200)
RTS Threshold	<div>2342</div>	(range:256~2342, default:2342)
Fragmentation Threshold	<div>2346</div>	(range:256~2346, default:2346, even numbers only)
Preamble Type	<div><div>Short Preamble</div><div>Long Preamble</div><div>Dynamic Preamble</div></div>	

Default

Apply

Figure 3-2-47 Wireless Setting Screen

Item	Default	Description				
General Settings						
Wireless Connection	Enable	To Enable or Disable wireless connection.				
Channel	6	Select the channel ID for wireless connection.				
Multiple ESSID Setting	Click Edit button for each of 4 ESSID setting.					
WIRELESS ESSID 1 CONFIGURATION <div> <table border="1"> <tr> <td>General Settings</td><td> ESSID : <input type="text" value="Wireless-1234_1"/> (Max=32) Broadcast : <input type="button" value="Enable"/> </td></tr> <tr> <td>Security Settings</td><td> <input checked="" type="radio"/> Open <input type="radio"/> WPA <input type="radio"/> WPA2 <input type="radio"/> MixMode Group Key Rekeying: Per <input type="text" value="86400"/> Seconds <input type="radio"/> Use WPA or WPA2 with Pre-shared Key Pre-shared Key: <input type="text"/> (8~32 Characters) <input type="radio"/> Use WPA or WPA2 with 802.1x RADIUS Server IP/Domain: <input type="text"/> Authentication Port: <input type="text"/> Shared Secret Key: <input type="text"/> </td></tr> </table> <div>Apply</div> </div>			General Settings	ESSID : <input type="text" value="Wireless-1234_1"/> (Max=32) Broadcast : <input type="button" value="Enable"/>	Security Settings	<input checked="" type="radio"/> Open <input type="radio"/> WPA <input type="radio"/> WPA2 <input type="radio"/> MixMode Group Key Rekeying: Per <input type="text" value="86400"/> Seconds <input type="radio"/> Use WPA or WPA2 with Pre-shared Key Pre-shared Key: <input type="text"/> (8~32 Characters) <input type="radio"/> Use WPA or WPA2 with 802.1x RADIUS Server IP/Domain: <input type="text"/> Authentication Port: <input type="text"/> Shared Secret Key: <input type="text"/>
General Settings	ESSID : <input type="text" value="Wireless-1234_1"/> (Max=32) Broadcast : <input type="button" value="Enable"/>					
Security Settings	<input checked="" type="radio"/> Open <input type="radio"/> WPA <input type="radio"/> WPA2 <input type="radio"/> MixMode Group Key Rekeying: Per <input type="text" value="86400"/> Seconds <input type="radio"/> Use WPA or WPA2 with Pre-shared Key Pre-shared Key: <input type="text"/> (8~32 Characters) <input type="radio"/> Use WPA or WPA2 with 802.1x RADIUS Server IP/Domain: <input type="text"/> Authentication Port: <input type="text"/> Shared Secret Key: <input type="text"/>					
Figure 3-2-48 ESSID Setting Screen						
General Settings						
ESSID		The ESSID's name by default is related to the last 4 numbers of Wlan MAC. If the Wlan MAC is "00-90-0E-00-12-34", the default is "Wireless-1234_1(2,3,4)". It is case sensitive and must not exceed 32 characters.				
Security Settings						
Security	Open	Select Open to allow wireless station to communicate with the device without any data encryption. Select WPA / WPA2 / MixMode for data encryption.				
Group Key Re-Keying	86400 Seconds	Enter a number in the field to set the force re-keying interval.				
Use WPA or WPA2 with Pre-shared Key	Disable					
Pre-Shared Key	Empty	Enter a pre-shared key from 8 to 63 case sensitive ASCII characters.				
Use WPA or WPA2 with 802.1x	Disable					

ALL-HS02530 Hotspot in a Printer

RADIUS Server IP/Domain	Empty	Enter the RADIUS server IP address or domain name. The maximum allowed characters length is 15.
Authentication Port	Empty	Enter the authentication port number. The allowed numbers are from 0 to 65535.
Share Secret Key	Empty	Enter the RADIUS secret key
Beacon Interval	200	This value valid range is 1 to 1000 indicates the frequency interval of the beacon.
RTS Threshold	2347	This value valid range is 256-2342. This setting determines the packet size at which the ALL-HS02530 issues a request to send (RTS) before sending the packet. A low RTS Threshold setting can be useful in areas where many client devices are associating with the ALL-HS02530, or in areas where the clients are far apart and can detect only the ALL-HS02530 and not each other.
Fragmentation Threshold	2432	This setting determines the size at which packets are fragmented. Enter a setting ranging from 256 to 2432 bytes. Use a low setting in areas where communication is poor or where there is a great deal of radio interference.
Preamble Type	Long Preamble	The preamble type is a section of data at the head of a packet that contains information the ALL-HS02530 and client devices need when sending and receiving packets. The setting menu allows you to select a long, short or dynamic preamble type.

Click **Apply** button, the restart dialog box appears. Click on **Apply** to restart the system.

Click **Default** button to load the default manufacturer configuration to the system. All this page (Wireless) configuration setup will be replaced by default settings.

3-3 System Status

Display ALL-HS02530 system basic status, including,

1. System
2. Account List
3. Account Log
4. Current User
5. DHCP Clients
6. Session List

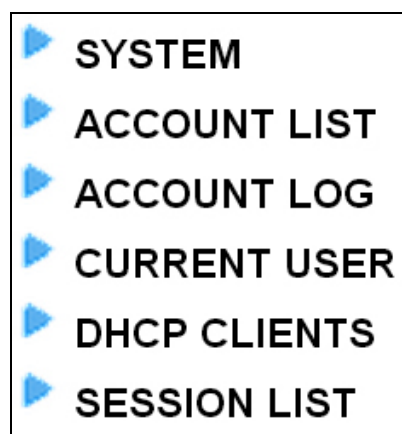


Figure 3-3-1 System Status Item Screen

3-3-1 System

The System Information Menu displays current system basic information including the service connection message, host name, LAN, WAN, DHCP Configuration, DNS, E-mail Redirection, SSL Certificate, network traffic Information and the system firmware version number.

ALL-HS02530 Hotspot in a Printer

SYSTEM

Detailed system information.
refresh

Service	Internet Connection	Fail
	Wireless Service	OK
System	System Name	
	Domain Name	
	Firmware Version	1.07.06
	Controller Board Firmware Version	1.00.00
	Wireless Version	1.00a
	Bootrom Version	1.03
	WAN MAC Address	00:90:0E:00:60:C1
	WLAN MAC Address	00:90:0E:00:60:C0
	System Time	2004/7/2 17:10:35
LAN IP	IP Address	10.59.1.1
	Subnet Mask	255.0.0.0
WAN IP	WAN Port Mode	DHCP Client
	IP Address	None
	Subnet Mask	None
	Gateway IP address	None
DNS	Primary DNS Server	
	Secondary DNS Server	
DHCP	DHCP Status	Server
	Start IP Address	10.59.1.2
	End IP Address	10.59.1.254
	Lease Time	300
Wireless	Channel	10
	ESSID 1	Wireless-1234_1
	ESSID 2	Wireless-1234_2
	ESSID 3	Wireless-1234_3
	ESSID 4	Wireless-1234_4
E-Mail Redirection		
Network Traffic	WAN Traffic	Tx Data: 580
		Rx Data: 0
		Tx Error: 0
		Rx Error: 0
	LAN Traffic	Tx Data: 4081
		Rx Data: 3645
		Tx Error: 0
		Rx Error: 0
ESSID 1 Traffic	Tx Data: 5	
	Rx Data: 0	
	Tx Error: 0	
	Rx Error: 0	
ESSID 2 Traffic	Tx Data: 5	
	Rx Data: 0	
	Tx Error: 0	
	Rx Error: 0	
Location Information	Location	
	Address	
	City	
	State	
	Zip	
	Country	
	Contact Name	
	Contact Telephone	
	Contact FAX	
Contact Email		
SSL Certificate	Country	00
	State	Local State
	Local City	Local City
	Organization	Local Group
	Organization Unit	Local Host
	Common Name	1.1.1.1
	Email Address	mail@1.1.1.1

Figure 3-3-2 System Status Screen

3-3-2 Account List

You can display a list of all the account information on this device. This table includes the username, password, usage time, time created, login time, expiration time and status.

ACCOUNT LIST

List existing accounts. [refresh](#)

S/N	Status	Username	Usage Time	Time Created	Login Time	Time left	Delete
00001	Finished	ca12vc23	00:30:00	05/06/2013 08:21:25	05/06/2013 08:29:55	00:30:00	<input type="checkbox"/>
00001	Un-Used	vc2312ac	01:00:00	05/06/2013 08:21:25		01:00:00	<input type="checkbox"/>

GO 1 PAGE

[Delete](#)
[Delete ALL](#)
[First](#)
[Previous](#)
[Next](#)
[End](#)

Figure 3-3-3 Account List

Click **refresh** button to update the account list page.

Click the column button (S/N, Status, Username, ...,etc.) to sort the column in ascending/descending order.

Select the check boxes and click **Delete** to delete the accounts.

Click **Delete ALL** button to delete all accounts in account list.

Note: This page will refresh automatically every 5 minutes.

3-3-3 Account Log

The account log shows the accounts' log information.

ACCOUNT LOG

List log of accounts.
Export
Clear Log
refresh

S/N	Username	Time Created	Login Time	Usage Time	Charge	Payment Info	Status
000013	wzc5	2013-05-09 14:35:36		01:00:00	2	Cash	Expired
000014	byha	2013-05-09 15:55:30		01:00:00	2	Cash	Delete
000015	63nv	2013-05-10 10:23:09		00:30:00	1	Credit Card	Un-Used
000016	pxvd	2013-05-10 10:23:13		01:00:00	2	Cash	Expired

GO
1
PAGE

First
Previous
Next
End

Figure 3-3-4 Account Log

Click **Export** to export the account logs to a text file format. (export.log)

Click **Clear Log** button to remove all account log entries.

Click **refresh** button to update the account log page.

Click the column button (S/N, Username, Time Created, ...,etc.) to sort the column in ascending/descending order.

3-3-4 Current User

Display the current logged-in subscribers' status. It allow service provider to disconnect any subscribers.

CURRENT USERS

CURRENT USERS							
refresh ↻							
No.	Interface	Type	Username	IP Address	MAC Address	Session	Delete
1.	Ethernet	Dynamic	8866gvqx	10.59.1.2	00:0C:6E:56:33:CF	10	<input type="checkbox"/>
2	ESSID 1	Dynamic	ld93k5j7	10.59.1.3	00:90:6E:56:33:CF	100	<input type="checkbox"/>
3	ESSID 2	No-Auth	-	10.59.1.4	00:90:6E:56:83:C1	56	<input type="checkbox"/>
4	ESSID 3	No-Auth	-	10.59.1.5	00:90:6E:AC:FF:C1	100	<input type="checkbox"/>
5	ESSID 4	No-Auth	-	10.59.1.6	00:AC:6E:EC:FF:C1	100	<input type="checkbox"/>
6	ESSID 1	Super	Super	10.59.1.12	00:90:9F:56:83:C1	100	<input type="checkbox"/>
GO 1 PAGE Delete Delete ALL							
First Previous Next End							

Figure 3-3-5 Current User List

Click **refresh** button to update the current user list page.

Click the column button (Interface, Type, Username, IP Address, ..., etc.) to sort the column in ascending/descending order.

Select the check boxes and click '**Delete**' to delete accounts.

Click **Delete ALL** to delete all accounts in current user list.

3-3-5 DHCP Clients

The DHCP client table shows the current DHCP users on the LAN.

DHCP CLIENTS

DHCP Client Information

☐ Refresh DHCP Client information every minutes. (1~60 minute)

No.	MAC Address	IP Address
-----	-------------	------------

Figure 3-3-6 Current User Screen

3-3-6 Session List


The remote site administrator could monitor the real time usage status of ALL-HS02530 via this page.

SESSION LIST

List sessions of Network events: Incoming and outgoing packet information, including source IP address, destination IP address, and port number.

☐ Refresh session list every minutes. (1~60 minute)

No.	TCP/UDP	Client IP	Client Port	Translated Port	Remote IP	Remote Port	Idle
-----	---------	-----------	-------------	-----------------	-----------	-------------	------

 PAGE





 First  Previous Next  End 

Figure 3-3-7 Session List Screen

3-4 System Tools

This allows service provider or administrator to process Firmware upgrade, change password and backup or restore configuration.

1. Configuration
2. Firmware
3. Boot Code
4. Controller Board Firmware
5. System Account
6. SSL Certificate
7. Ping Command
8. Restart
9. Logout



Figure 3-4-1 System Tools Item

3-4-1 Configuration

Use the Configuration item to save, restore or reset configuration parameters of the ALL-HS02530.

CONFIGURATION

Backup the system configuration from this device to your PC or restore your stored system configuration to this device.

Backup	Click Backup to backup the system configuration from this device to your computer or to the remote TFTP server. Remote TFTP Server IP Address : <input type="text"/> File Name : <input type="text"/>
Restore	To restore your stored system configuration to this device.. Local PC File Path : <input type="text"/> <input type="button" value="Select..."/> Remote TFTP Server IP Address : <input type="text"/> File Name : <input type="text"/>
Reset the system back to factory defaults	<input type="checkbox"/> Keep subscriber profile

Figure 3-4-2 Configuration Setting Screen

Item	Default	Description
Backup		Click it to save the system configuration to your computer. (export.cfg)
Remote TFTP Server IP Address	Empty	Enter the IP address of TFTP Server.
File Name	Empty	Enter the file name in the File Name field.
Restore		Click it to restore your system configuration.
Local PC File Path	Empty	Enter the file pathname of the system configuration file in the Local PC File Path field.
Remote TFTP Server IP Address	Empty	Enter the IP address of TFTP Server.
File Name	Empty	Enter the file name in the File Name field.
Reset the system back to factory defaults		Erase all setting and back to factory setting.
Keep subscriber profile	Disable	Click the keep subscriber profile to change all the parameters into factory setting but still reserve the subscriber profiles.

3-4-2 Firmware Upgrade

The Firmware Upgrade menu loads updated firmware to be permanent in flash ROM. The download file should be a binary file from factory; otherwise the agent will not accept it. After downloading the new firmware, the agent will automatically restart it.

Manual Firmware Upgrade

FIRMWARE

Manual Firmware Upgrade | Scheduled Firmware Upgrade

To upgrade firmware, click **Select** to locate the firmware file, or specify a remote TFTP server and file name, and click **Apply**.

Local PC File Path

Remote TFTP Server IP Address

File Name

Figure 3-4-3 Manual Firmware Upgrade Setting Screen

Item	Default	Description
This allow administrator to upgrade the firmware via HTTP.		
Local PC File Path	Empty	Enter the file name and location in the Local PC File Path field.
This allows administrator use TFTP server to upgrade firmware.		
Remote TFTP Server IP Address	Empty	Enter the IP address of TFTP Server.
File Name	Empty	Enter the file name in the File Name field.

Note:

1. Before downloading the new firmware, users must save the configuration file for restore configuration parameters of the device.
2. Do not turn the power off during the upgrade process. This will damage the unit.

Scheduled Firmware Upgrade

Scheduled Firmware Upgrade is a program that enables an automatic upgrade to the latest firmware version through the TFTP server.

FIRMWARE

Manual Firmware Upgrade

Scheduled Firmware Upgrade

To upgrade firmware, click **Select** to locate the firmware file, or specify a remote TFTP server and file name, and click **Apply**.

Local PC File Path

Select...

Remote TFTP Server IP Address

File Name

Apply

Figure 3-4-4 Scheduled Firmware Upgrade Setting Screen

Item	Default	Description
Disable/Enable		Disables or enables the scheduled firmware upgrade function.
TFTP Server IP	Empty	Enter the IP address of TFTP Server.
File Synchronization	Empty	Enter the file name and location in the File Synchronization field.
View Sample File		Click the button to display synchronization file example.
<div><div>Synchronization Check File Sample Code</div><div><div>Version=1.07.06</div><div>Filename=wsgap01.bin</div><div>Close</div></div></div> <div>Figure 3-4-5 Synchronization File Sample Code</div>		
Frequency	Weekly	Set the firmware upgrade time. The default value is "Weekly".

Note: Do not turn the power off during the upgrade process. This will damage the

unit.

3-4-3 Boot Code

BOOT CODE

To upgrade the Boot Code, click Select to locate the file and click Apply .	
Local PC File Path :	<input type="text"/> <input type="button" value="Select..."/>
<div style="text-align: right;"><input type="button" value="Apply"/></div>	

Figure 3-4-6 Boot Code Upgrade Setting Screen

3-4-4 Controller Board Firmware

Controller Board Firmware

To upgrade the Controller Board Firmware, click Select to locate the file and click Apply .	
Local PC File Path :	<input type="text"/> <input type="button" value="Select..."/>
<div style="text-align: right;"><input type="button" value="Apply"/></div>	

Figure 3-4-7 Controller Board Firmware Upgrade Setting Screen

3-4-5 System Account

Use the System Account screen to change the system accounts.

SYSTEM ACCOUNT

Administrator Account	
The Administrator account can fully control this system and modify all settings.	
Username :	<input type="text" value="account"/>
Password :	<input type="password" value="*****"/>
Confirm :	<input type="password"/>
Web-based Accounting Manager	
The Web-based accounting manager account can operate the proprietary web-based accounting system.	
Username :	<input type="text" value="account"/>
Password :	<input type="password" value="*****"/>
Confirm :	<input type="password"/>
Supervisor Account	
The Supervisor account can view system status and change passwords.	
Username :	<input type="text" value="supervisor"/>
Password :	<input type="password" value="*****"/>
Confirm :	<input type="password"/>
Super Subscriber Account	
The Super subscriber is a built-in subscriber account for system test or premium usage.	
Super Subscriber	<input type="text" value="Disable"/>
Idle Time Out:	<input type="text" value="5"/> Min(s) (1~1440)
Username :	<input type="text" value="supervisor"/>
Password :	<input type="password" value="*****"/>
Confirm :	<input type="password"/>
<input type="button" value="Apply"/>	

Figure 3-4-8 System Account Setting Screen

Item	Description
Username	The username can consist of up to 20 alphanumeric characters and is sensitive.
Password	The password can consist of up to 20 alphanumeric characters and is sensitive.
Confirm	The password for confirmation
Super Subscriber	Disables or enables the super account function.
Idle Time Out	The user idle time out valid is 1 to 1440 minutes. If the idle time out is set as 5 minutes, it means if the account doesn't send packet in 5 minutes, the account will logout automatically.

Administrator Account

Step 1: Start your Web browser and enter the factory default IP address **10.59.1.1** in your browser's location box. Press Enter.

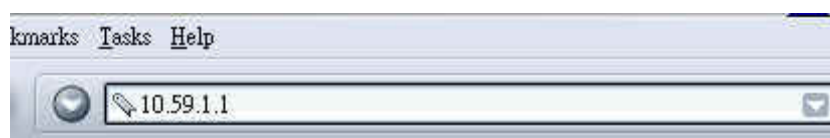


Figure 3-4-9 Web Browser Location Field (Factory Default)

Step 2: The ALL-HS02530 configuration main menu will appear. Enter **admin** as the Username and **admin** as the password and click **Login**. If you are first time setting the system, the wizard setup screen will appear.

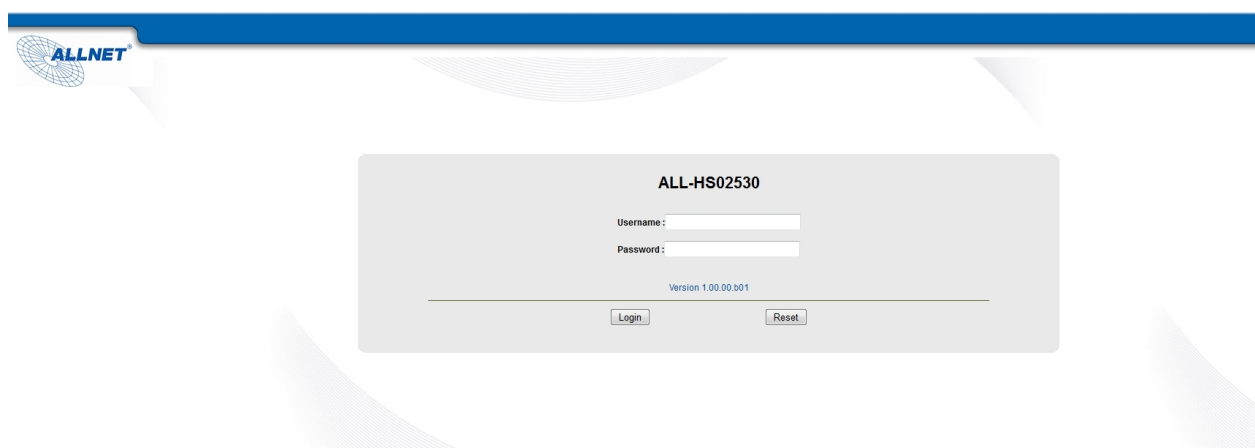


Figure 3-4-10 Administrator Account Login Screen (First Time)

Web-Based Accounting Manager

Step 1: Start your Web browser and enter the factory default IP address **10.59.1.1** in your browser's location box. Press Enter.



Figure 3-4-11 Web Browser Location Field (Factory Default)

Step 2: The ALL-HS02530 configuration main menu will appear. Enter **account** as the Username and **account** as the password and click **Login**.

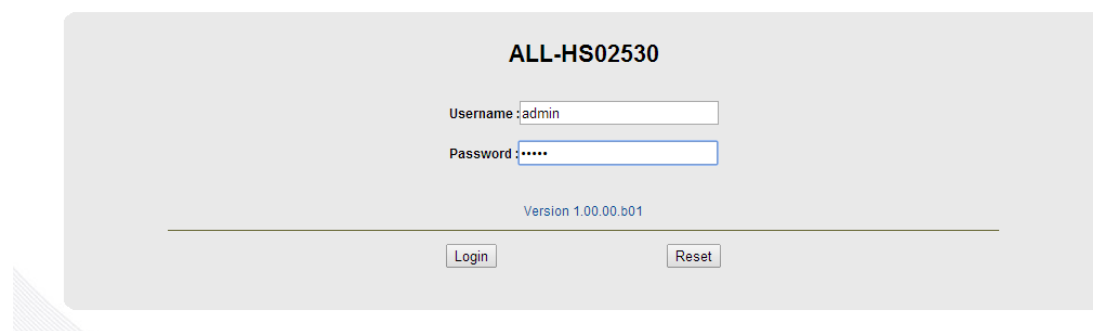


Figure 3-4-12 Web-Based Accounting Manager Login Screen

Step 3: After a valid user name and password have been provided, the account Generator Panel homepage will appear.

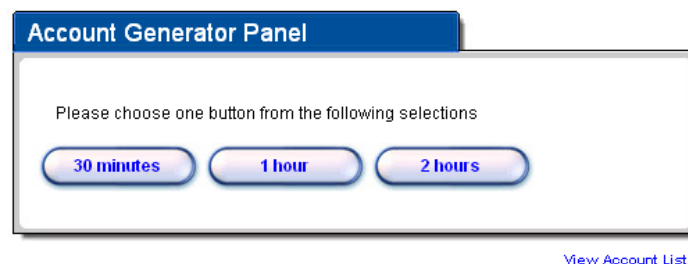


Figure 3-4-13 Account Generator Panel

Supervisor Account

Step 1: Start your Web browser and enter the factory default IP address **10.59.1.1** in your browser's location box. Press Enter.

ALL-HS02530 Hotspot in a Printer



Figure 3-4-14 Web Browser Location Field (Factory Default)

Step 2: The ALL-HS02530 configuration main menu will appear. Enter **supervisor** as the Username and **supervisor** as the password and click **Login**.


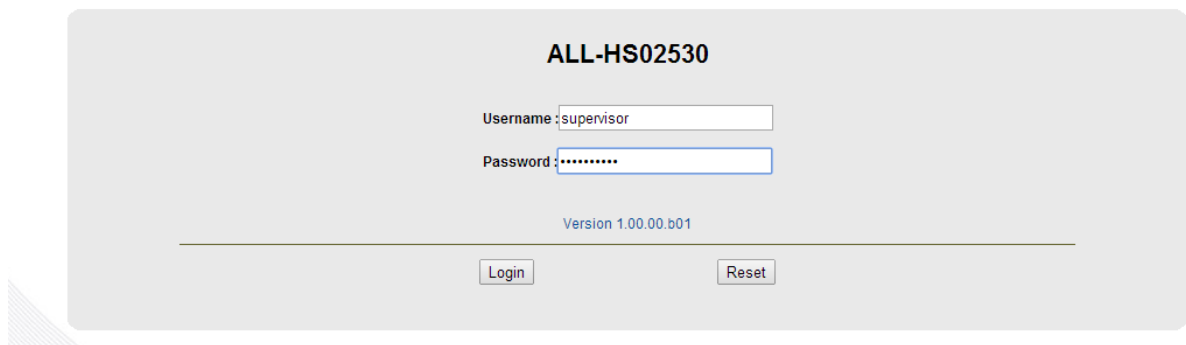


Figure 3-4-15 Supervisor Account Login Screen

Step 3: After a valid user name and password have been provided, the ALL-HS02530 configuration homepage will appear. “WIZARD SETUP” and “ADVANCED SETUP” are disabled.

Super Subscriber Account

Start your Web Browser; a subscriber login page will appear. Enter **super** as the Username and **super** as the password and click **Enter**, you can use Internet now.

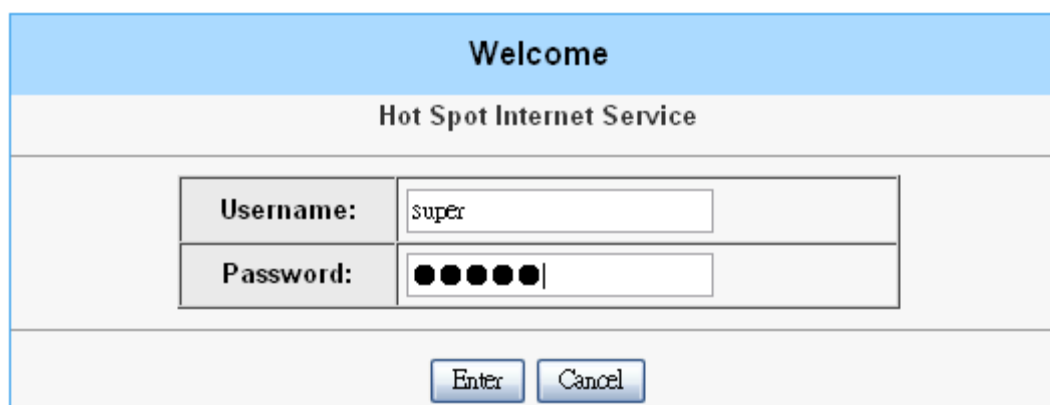


The image shows a web interface for a Hot Spot Internet Service. At the top, there is a blue header with the text "Welcome". Below this is a grey header with the text "Hot Spot Internet Service". The main area contains a login form with two rows: "Username:" with a text box containing "super", and "Password:" with a text box containing seven black dots. Below the form are two buttons: "Enter" and "Cancel".

Figure 3-4-16 Subscriber Login Page

3-4-6 SSL Certificate

The function allows you to download the registered CA certificate into the ALL-HS02530.

SSL CERTIFICATE

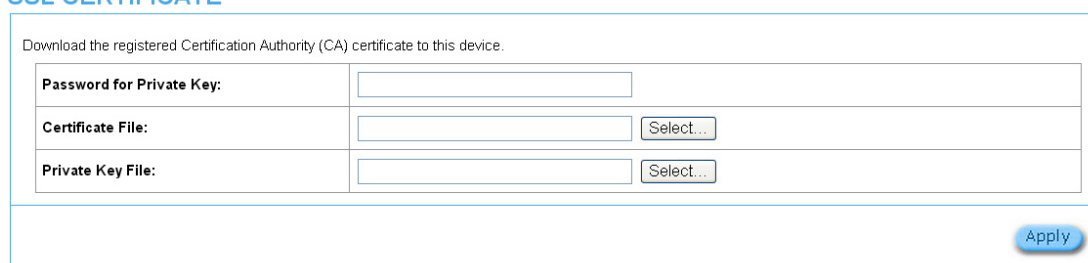

The image shows a web interface for downloading a CA certificate. At the top, there is a blue header with the text "SSL CERTIFICATE". Below this is a grey header with the text "Download the registered Certification Authority (CA) certificate to this device." The main area contains a form with three rows: "Password for Private Key:" with a text box, "Certificate File:" with a text box and a "Select..." button, and "Private Key File:" with a text box and a "Select..." button. At the bottom right of the form is a blue button labeled "Apply".

Figure 3-4-17 SSL Certificate Download Setting Screen

Note: The password field must be the same as the CA's registered password.

3-4-7 Ping Command

The Ping function can check the ALL-HS02530 networking connective or not.

PING

Execute a ping command to test the availability of a remote system. Enter an IP address.

Figure 3-4-18 Ping Command Screen

Item	Description
IP or URL	Enter the IP address or the URL link.

3-4-8 Restart

If your ALL-HS02530 is not operating correctly, you can choose this option to display the restart ALL-HS02530 screen. Clicking the apply button restart the ALL-HS02530, with all of your settings remaining intact.

RESTART

Click **Apply** to restart the system. If you do not wish to restart the system, choose a menu option to leave this page.

Figure 3-4-19 Restart Screen

3-4-9 Logout

If you would like to leave the configuration page, please click apply to exit.

LOGOUT

Click **Apply** to log out. If you do not wish to log out, choose a menu option to leave this page.

Apply

Figure 3-4-20 Logout Screen

4 QR Code Service

4-1 QR code setting

Please find **Advance setting > Customization > Account Printout > QR code**. If you don't print out the QR Code on the ticket, please disable it and click **Apply** button.

Step 1

CUSTOMIZATION

Login Page | Logo | Information Window | **Account Printout** | Credit Card | User Agreement Page

<input checked="" type="checkbox"/> Title:	<input checked="" type="radio"/> Format 1: Herzlich willkommen! (Max.=75) <input type="radio"/> Format 2: Willkommen! (Max.=75)
<input checked="" type="checkbox"/> Subtitle:	<input checked="" type="radio"/> Format 1: ALLNET Internet Zugang (Max.=80) <input type="radio"/> Format 2: ALL-HS02530 (Max.=80)
Username:	Username: (Max.=24)
Password:	Password: (Max.=24)
<input type="checkbox"/> Billing Method:	Abrechnung: (Max.=24) Time to Finish: Zeit bis Nutzungser (Max.=24) Accumulation: Akkumulation (Max.=24)
<input checked="" type="checkbox"/> Billing Profile:	Aktiv: (Max.=24)
<input type="checkbox"/> Purchase Unit:	Einheiten: (Max.=24)
<input checked="" type="checkbox"/> Usage Time:	Verfügbar: (Max.=24)
<input type="checkbox"/> Price:	Netto: (Max.=24)
<input type="checkbox"/> Tax:	MwSt: (Max.=24) TOTAL: Gesamt: (Max.=24)
<input checked="" type="checkbox"/> ESSID:	WiFi Name: (Max.=24)
<input checked="" type="checkbox"/> Wireless Security	WPA: WPA: (Max.=24) WPA2: Passwort: (Max.=24) MixMode: WPA/WPA2: (Max.=24) WEP: WEP: (Max.=24)
<input type="checkbox"/> Additional Label 1:	(Max.=24) Value: (Max.=24)

Figure 4-1-1 QR Coding Setting Screen

ALL-HS02530 Hotspot in a Printer

WIZARD SETUP	ADVANCED SETUP	SYSTEM STATUS	SYSTEM TOOLS
<input type="checkbox"/> Tax:	MwSt: <input type="text"/> (Max.=24) TOTAL: <input type="text"/> (Max.=24)		
<input checked="" type="checkbox"/> ESSID:	WiFi Name: <input type="text"/> (Max.=24)		
<input checked="" type="checkbox"/> Wireless Security	WPA: <input type="text"/> (Max.=24) WPA2: <input type="text"/> (Max.=24) MixMode: <input type="text"/> (Max.=24) WEP: <input type="text"/> (Max.=24)		
<input type="checkbox"/> Additional Label 1:	<input type="text"/> (Max.=24) Value: <input type="text"/> (Max.=24)		
<input type="checkbox"/> Additional Label 2:	<input type="text"/> (Max.=24) Value: <input type="text"/> (Max.=24)		
<input checked="" type="checkbox"/> Print out Time:	Format: <input type="text"/> dd/mm/yyyy <input type="text"/> HH:mm:ss (HH:24h hh:12h tt:AM/PM)		
<input checked="" type="checkbox"/> Expiration Time:	Description: <input type="text"/> (Max.=24x3) Format: <input type="text"/> dd/mm/yyyy <input type="text"/> HH:mm:ss (HH:24h hh:12h tt:AM/PM) Accumulation: <input type="text"/> (Max.=24x4)		
<input checked="" type="checkbox"/> Ending:	ALLNET GmbH Maistr. 2 62110 Gernsheim Vielen Dank! Login mit QR-Code: <input type="text"/> (Max.=24x10)		
<input checked="" type="checkbox"/> QR Code:	Printout the QR Code.		
Preview of account generator printer output			
<input type="button" value="Apply"/>			

Figure 4-1-2 QR Coding Setting Screen

4-2 Additional information for QR code use

If you will activate QR code service for Apple iOS 6 device and later,

1. Please find **Advance setting > Security > Pass Through**.
2. Choose "Enable".
3. Add **www.apple.com** into PASS THROUGH list in ALL-HS02530 because iOS6 device and later is required.
4. Click **Add to List** button.
5. Choose Active on the **Pass Through List**.

For certain QR code Apps, please add **go.redirectingat.com** and follow the above steps.

PASS THROUGH

Pass Through: **Enable**

Step 2: Choose Enable

Pass Through Destination allows the subscribers to access specified Internet websites without authentication, which is useful to promote selected services.Pass Through Subscriber is useful for VIP users without authentication.Pass Through LAN device is also useful for devices that do not have a web browser (cash registers, for example) or that are connected with LAN port (wireless access points, for example).

Please enter new pass through for destination (up to 20 entries)

☒ URL or Website: **www.apple.com**

Step 3: Add "www.apple.com"

☐ Start / End IP Address ~

Please enter new pass through for subscribers or LAN devices (up to 20 entries)

☐ Start / End IP Address ~

☐ IP Address: Subnet Mask:

☐ MAC Address: Mask: **FF-FF-FF-FF-FF-FF**

Description (max 20 characters)

Add to List

Step 4: Click Add to List

Pass Through List

No.	Active	Address List	Type	Description	Delete
1	<input checked="" type="checkbox"/>	www.apple.com	Destination		<input type="checkbox"/>

Step 5: Choose Active

Delete All

Apply

Figure 4-2-1 Pass Through Setting Screen

4-3 Use QR code to access the Internet

Please follow the steps to access the Internet for clients.

1. Print out the Ticket. You can find the ESSID and WPA/WPA2 printed on the ticket.

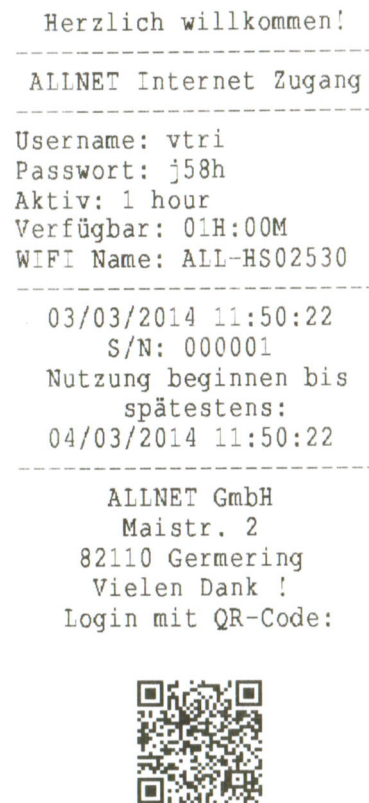


Figure 4-3-1 QR Coding Ticket

2. Connect to the **ESSID**(ex: ALL-HS02530), input **WPA/WPA2** password(ex: 1234567890).



Figure 4-3-2 Password Input Screen

3. Open up QR code APP and Scan.



Figure 4-3-3 Scan 1 Screen

4. Some Apps may require user to click "Go to URL".

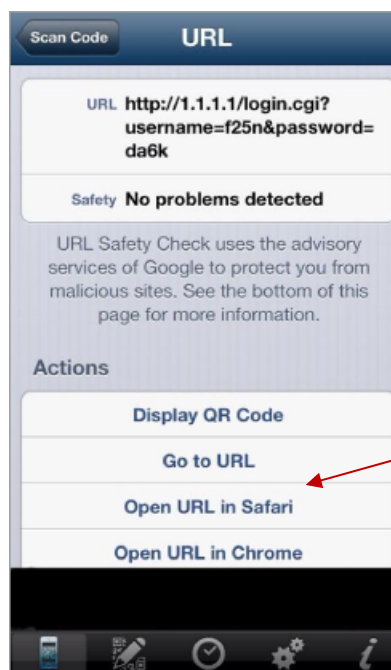


Figure 4-3-4 Scan 2 Screen

5. Client can use the Internet now.

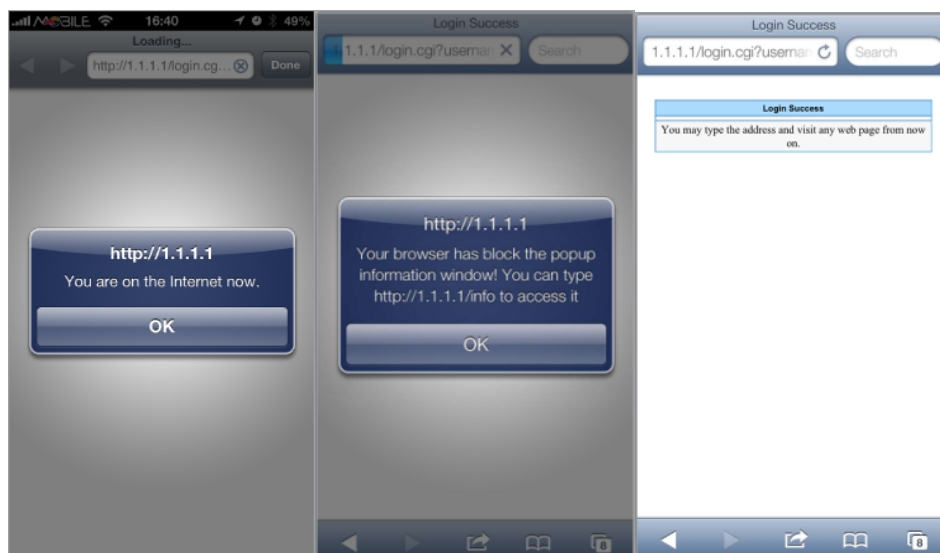


Figure 4-3-5 Scan Finish Screen

5 Personal ID Recognition

Some countries or areas would ask users to show their personal identification when accessing WiFi service according to laws for the cybercrime investigation.

ALL-HS02530 provides the function Personal Identification Recognition. **The default is disabled.** Subscribers need to activate it by the following steps.

5-1 Personal ID Recognition Setting

Step1. Active the function: Go to **Advanced Setup** -> **System** -> **System**. Enable the **Personal ID Recognition Mode**. Please refer the **Chapter 3-2-5-1 System**.

SYSTEM																					
System/Host Name	<input type="text"/>																				
Domain Name	<input type="text"/>																				
Location Information	<div>Location Name: <input type="text"/> (Max=50)</div> <div>Address: <input type="text"/> (Max=200)</div> <div>City: <input type="text"/> (Max=50)</div> <div>State / Province: <input type="text"/> (Max=50)</div> <div>Zip / Postal Code: <input type="text"/> (Max=10)</div> <div>Country: <input type="text"/> (Max=50)</div> <div>Contact Name: <input type="text"/> (Max=50)</div> <div>Contact Telephone: <input type="text"/> (Max=50)</div> <div>Contact FAX: <input type="text"/> (Max=50)</div> <div>Contact Email: <input type="text"/> (Max=50)</div>																				
Date/Time	<div>Time Zone: GMT <input type="button" value="v"/></div> <div><input type="radio"/> Manual Setting</div> <div>Date: 2011 / 1 / 1 (Year/Month/Day)</div> <div>Time: 00 : 00 : 00 (Hour : Minute : Second)</div> <div><input checked="" type="radio"/> NTP Setting Date: 2004/7/2 Time: 16:06:02 <input type="button" value="Update Now"/></div> <div> <div>Server IP/Domain Name 1: <input type="text"/> time.nist.gov</div> <div>Server IP/Domain Name 2: <input type="text"/> www.nist.gov</div> <div>Update Time: 24 hours</div> <div><input type="checkbox"/> Daylight Saving Time</div> <div>Start Date: 4 Month / 1 Day</div> <div>End Date: 10 Month / 31 Day</div> </div>																				
NAT (Network Address Translation)	<input checked="" type="radio"/> Enable <input checked="" type="checkbox"/> Plug and Play Internet access <input type="radio"/> Disable																				
User Session Limited	<input checked="" type="radio"/> Enable 300 (1~1024) <input type="radio"/> Disable																				
Layer 2 Isolation Security	<input checked="" type="radio"/> Enable <input type="radio"/> Disable																				
Secure administrator IP addresses	<input checked="" type="radio"/> Any <input type="radio"/> Specify <table border="1"> <tr><td>1</td><td><input type="text"/></td><td>~</td><td><input type="text"/></td></tr> <tr><td>2</td><td><input type="text"/></td><td>~</td><td><input type="text"/></td></tr> <tr><td>3</td><td><input type="text"/></td><td>~</td><td><input type="text"/></td></tr> <tr><td>4</td><td><input type="text"/></td><td>~</td><td><input type="text"/></td></tr> <tr><td>5</td><td><input type="text"/></td><td>~</td><td><input type="text"/></td></tr> </table>	1	<input type="text"/>	~	<input type="text"/>	2	<input type="text"/>	~	<input type="text"/>	3	<input type="text"/>	~	<input type="text"/>	4	<input type="text"/>	~	<input type="text"/>	5	<input type="text"/>	~	<input type="text"/>
1	<input type="text"/>	~	<input type="text"/>																		
2	<input type="text"/>	~	<input type="text"/>																		
3	<input type="text"/>	~	<input type="text"/>																		
4	<input type="text"/>	~	<input type="text"/>																		
5	<input type="text"/>	~	<input type="text"/>																		
Multicast passthrough	<input checked="" type="radio"/> Enable <input type="radio"/> Disable																				
Allow remote user to ping the device	<input checked="" type="radio"/> Enable <input type="radio"/> Disable																				
SSL Certificate	<input type="radio"/> Enable <input type="radio"/> Customer Certificate																				
Personal ID Recognition Mode	<input type="radio"/> Enable <input checked="" type="radio"/> Disable																				
<input type="button" value="Apply"/>																					

Figure 5-1-1 System Setting

Step2. The first billing profile you activate is the Personal ID Recognition selection.
There is only ONE billing profile in the Personal ID Recognition mode.

Please refer the **Chapter 3-2-2-1 Billing** to modify your first billing profile.

BILLING

☒ **Pre-Paid**
 The subscribers can access Internet with pre-defined usage time.
☐ Enable Credit Card Service WG-500P

☒ **Time to Finish**
 The subscriber can access Internet only one time with one account. Once subscriber login, the pre-defined usage time will start until run out even the subscriber stop to access the Internet before run out.

☐ **Accumulation**
 The subscriber can access Internet several times with one account. The system can keep and accumulate every single usage time until the pre-defined usage time run out.

Billing Profile

Currency: * \$ ☐ \$ ☒ Number of decimals places: 2)

☐ Tax Percentage: 5 %

No.	Active	Name (max 12 characters)	Account Usage Time	Charge
01	<input checked="" type="checkbox"/>	30 minutes	30 minutes	1.00
02	<input checked="" type="checkbox"/>	1 hour	1 hours	2.00
03	<input checked="" type="checkbox"/>	2 hours	2 hours	3.00
04	<input type="checkbox"/>	3 hours	3 hours	4.00
05	<input type="checkbox"/>	5 hours	5 hours	5.00
06	<input type="checkbox"/>	10 hours	10 hours	6.00
07	<input type="checkbox"/>	1 day	1 days	10.00
08	<input type="checkbox"/>	2 days	2 days	20.00
09	<input type="checkbox"/>	7 days	7 days	50.00
10	<input type="checkbox"/>	30 days	30 days	200.00

Figure 5-1-2 Billing Setting Screen

Step 3: Start your browser, and then enter the factory default IP address **10.59.1.1** in your browser's location box. Press **Enter**.

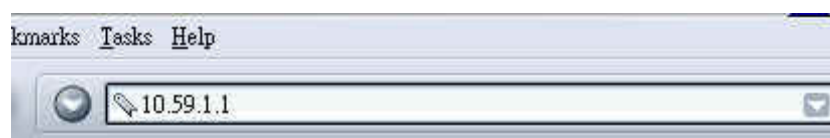


Figure 5-1-3 Web Browser Location Field (Factory Default)

Step 4: The ALL-HS02530 configuration tools menu will appear. In the Username and Password field, type the factory default user name “**account**” and password “**account**” and click **Login**.



Figure 5-1-4 Configuration Tools Menu

Step 5: ONLY account manager can operate PIR and printout the ticket. There are 3 types for the account manager to choose, including Driver License NO., Passport No. and Identify card No. Fill in numbers and click “+” or “-” for usage time.

Click the **Print** button to printout the ticket.

Click **View Account List** to see all accounts which are printed out.

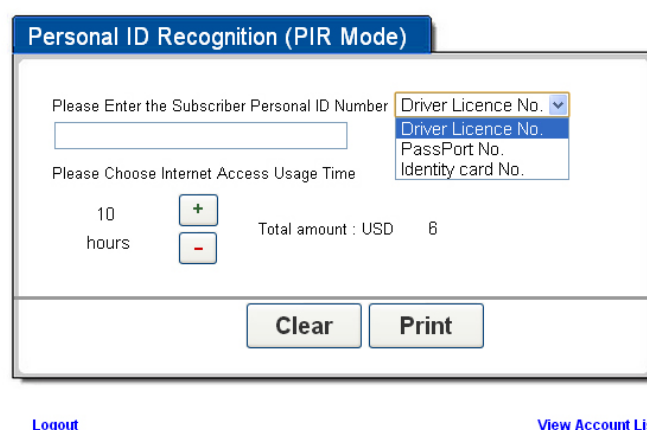


Figure 5-1-5 PIR

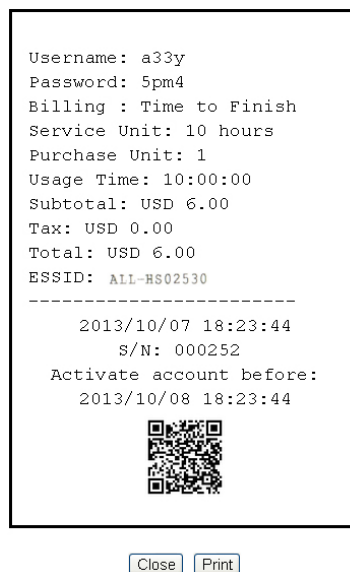


Figure 5-1-6 PIR Ticket

Step 6: Click **Logout and** then click the **Apply** button to finish it.

LOGOUT

Do you want to log out from the web configurator?	
	<input type="button" value="Apply"/>

Figure 5-1-7 Logout

Appendix A Signal Connection Arrangements

RJ-45 Ethernet Port

The ALL-HS02530 RJ-45 Ethernet port can connect to any networking devices that use a standard LAN interface, such as a Hub/Switch Hub or Router. Use unshielded twisted-pair (UTP) or shield twisted-pair (STP) cable to connect the networking device to the RJ-45 Ethernet port.

Depending on the type of connection, 10Mbps or 100Mbps, use the following Ethernet cable, as prescribed.

10Mbps: Use EIA/TIA-568-100-Category 3, 4 or 5 cables. 100Mbps: Use EIA/TIA-568-100-Category 5 cable.

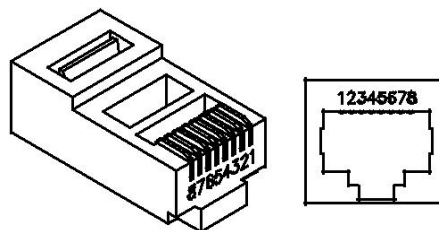


Figure RJ-45 Connector and Cable Pins

Note: To prevent loss of signal, make sure that the length of any twisted-pair connection does not exceed 100 meters.

Appendix B Regulations/EMI Compliance

FCC Regulatory Statement

Part 15-Class B compliant device

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including that which may cause undesired operation.

This equipment has been test and found to comply with the limits for a computing device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. The equipment and the receiver should be connected the outlets on separate circuits.
4. Consult the dealer or an experienced radio/television technician for help.

Changes or modification not expressly approved be the party responsible for compliance could void the user's authority to operate the equipment.

LIMITED WARRANTY

ALL-HS02530

What the warranty covers:

We warrant its products to be free from defects in material and workmanship during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, we will at its sole option repair or replace the product with a like product with a like product. Replacement product or parts may include remanufactured or refurbished parts or components.

How long the warranty is effective:

The ALL-HS02530 is warranted for one year for all parts and one year for all labor from the date of the first consumer purchase.

Who the warranty protects:

This warranty is valid only for the first consumer purchaser.

What the warranty does not cover:

1. Any product, on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
 - a. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
 - b. Repair or attempted repair by anyone not authorized by us.
 - c. Any damage of the product due to shipment.
 - d. Removal or installation of the product.
 - e. Causes external to the product, such as electric power fluctuations or failure.
 - f. Use of supplies or parts not meeting our specifications.
 - g. Normal wears and tears.
 - h. Any other cause that does not relate to a product defect.
3. Removal, installation, and set-up service charges.

How to get service:

1. For information about receiving service under warranty, contact our Customer Support.
2. To obtain warranted service, you will be required to provide (a) the original dated sales slip, (b) your name, (c) your address (d) a description of the problem and (e) the serial number of the product.
3. Take or ship the product prepaid in the original container to your dealer, and our service center.
4. For additional information, contact your dealer or our Customer Service Center.

Limitation of implied warranties:

THERE ARE NOWARRANTIED, EXPRESSED OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

ALL-HS02530 Hotspot in a Printer

Exclusion of damages:

Our LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT. We SHALL NOT BE LIABLE FOR:

1. DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECTS IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS, OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
2. ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE.
3. ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY.



ALLNET GPL Code Statement

This ALLNET product includes software code developed by third parties, including software code subject to the GNU General Public License ("GPL") or GNU Lesser General Public License ("LGPL"). As applicable, the terms of the GPL and LGPL, and information on obtaining access to the GPL code and LGPL code used in this product, are available to you at:

<http://www.allnet.de/gpl.html>

The GPL code and LGPL code used in this product is distributed WITHOUT ANY WARRANTY and is subject to the copyrights of one or more authors. For details, see the GPL code and the LGPL code for this product and the terms of the GPL and LGPL.

Written offer for GPL and LGPL source code

Where such specific license terms entitle you to the source code of such software, ALLNET will provide upon written request via e-mail and/or traditional paper mail the applicable GPL and LGPL source code files via CD-ROM for a nominal cost to cover shipping and media charges as allowed under the GPL and LGPL.

Please direct all inquiries to:

Email:

support@allnet.de

Snail Mail:

ALLNET GmbH

Maistraße 2

82110 Germering

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.

51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you

this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

GNU General Public License

Terms and conditions for copying, distribution and modification

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.

b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a

licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH

YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

one line to give the program's name and an idea of what it does.

Copyright (C) yyyy name of author

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the

GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA. Also add information on how to contact you by electronic and paper mail. If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) year name of author
Gnomovision comes with ABSOLUTELY NO WARRANTY; for details
type `show w'. This is free software, and you are welcome
to redistribute it under certain conditions; type `show c'
for details.

The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w' and `show c'; they could even be mouse-clicks or menu items--whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright
interest in the program `Gnomovision'
(which makes passes at compilers) written
by James Hacker.

signature of Ty Coon, 1 April 1989

Ty Coon, President of Vice

Source:

<http://www.gnu.org/licenses/old-licenses/gpl-2.0>



CE-Declaration of Conformity

For the following equipment:

Hotspot in a Printer

ALL-HS02530



The safety advice in the documentation accompanying the products shall be obeyed. The conformity to the above directive is indicated by the CE sign on the device.

The ALLNET ALL-HS02530 conforms to the Council Directives of 2004/108/EC.

This equipment meets the following conformance standards:

EN 55022:2010

EN 61000-3-2:2006 + A2:2009

EN 61000-3-3:2008

EN 55024:2010, including

IEC 61000-4-2:2008

IEC 61000-4-3:2006 + A1:2007 + A2:2010

IEC 61000-4-4:2012

IEC 61000-4-5:2005

IEC 61000-4-6:2008

IEC 61000-4-8:2009

IEC 61000-4-11:2004

This equipment is intended to be operated in all countries.

This declaration is made by

ALLNET Computersysteme GmbH

Maistraße 2

82110 Germering

Germany

Germering, 05.03.2014


Wolfgang Marcus Bauer
CEO