



## **ALL-SG8824PM**

**Smart managed 24 Port Gigabit PoE  
Switch, Power Budget 500Watt, 19"**



# **USER MANUAL**

**Default-IP**

**192.168.2.1**

**Password:**

**admin**

#### **FCC Warning**

This Equipment has been tested and found to comply with the limits for a Class-A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. It may cause harmful interference to radio communications if the equipment is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### **CE Mark Warning**

This is a Class-A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

## Table of Contents

<b>Before Starting</b> .....	5
<b>Intended Readers</b> .....	6
<b>Icons for Note, Caution, and Warning</b> .....	6
<b>Product Package Contents</b> .....	7
<b>Chapter 1: Product Overview</b> .....	8
<b>1.1. Product Brief Description</b> .....	9
<b>1.2. Product Specification</b> .....	10
<b>1.3. Hardware Description</b> .....	12
<b>1.4. Hardware Installation</b> .....	13
<b>Chapter 2: Preparing for Management</b> .....	14
<b>2.1. Preparation for Web Interface</b> .....	15
<b>Chapter 3: Web Management</b> .....	17
<b>3.1. Web Management - Overview</b> .....	18
<b>3.2. Web Management - Configuration</b> .....	19
<b>3.2.1. Configuration - System</b> .....	19
<b>3.2.2. Configuration - Ports</b> .....	23
<b>3.2.3. Configuration - VLANs</b> .....	25
<b>3.2.4. Configuration - Aggregation</b> .....	28
<b>3.2.5. Configuration - LACP</b> .....	29
<b>3.2.6. Configuration - RSTP</b> .....	30
<b>3.2.7. Configuration - 802.1X</b> .....	32
<b>3.2.8. Configuration - IGMP Snooping</b> .....	36
<b>3.2.9. Configuration - Mirroring</b> .....	39
<b>3.2.10. Configuration - Quality of Service</b> .....	40
<b>3.2.11. Configuration - Filter</b> .....	44
<b>3.2.12. Configuration - Power over Ethernet</b> .....	45
<b>3.2.13. Configuration - Rate Limit</b> .....	46
<b>3.2.14. Configuration - Storm Control</b> .....	47
<b>3.3. Web Management - Monitoring</b> .....	49
<b>3.3.1. Monitoring - Statistics Overview</b> .....	49
<b>3.3.2. Monitoring - Detailed Statistics</b> .....	49
<b>3.3.3. Monitoring - LACP Status</b> .....	50
<b>3.3.4. Monitoring - RSTP Status</b> .....	52
<b>3.3.5. Monitoring - IGMP Status</b> .....	55
<b>3.3.6. Monitoring - VeriPHY</b> .....	56
<b>3.3.7. Monitoring - Ping</b> .....	57

<b>3.4. Web Management - Maintenance</b> .....	59
<b>3.4.1. Maintenance - Warm Restart</b> .....	59
<b>3.4.2. Maintenance - Factory Default</b> .....	59
<b>3.4.3. Maintenance - Software Upload</b> .....	60
<b>3.4.4. Maintenance - Configuration File Transfer</b> .....	61
<b>3.4.5. Maintenance - Logout</b> .....	62
<b>Appendix A: Product Safety</b> .....	63
<b>Appendix B: IP Configuration for Your PC</b> .....	64
<b>Appendix C: Glossary</b> .....	68

# **Before Starting**

## **In Before Starting:**

This section contains introductory information, which includes:

- **Intended Readers**
- **Icons for Note, Caution, and Warning**
- **Product Package Contents**

## Before Starting

---

### Intended Readers

This manual provides information regarding to all the aspects and functions needed to install, configure, use, and maintain the product you've purchased.

This manual is intended for technicians who are familiar with in-depth concepts of networking management and terminologies.

### Icons for Note, Caution, and Warning

To install, configure, use, and maintain this product properly, please pay attention when you see these icons in this manual:



A **Note** icon indicates important information which will guide you to use this product properly.



A **Caution** icon indicates either a potential for hardware damage or data loss, including information that will guide you to avoid these situations.



A **Warning** icon indicates potentials for property damage and personal injury.

## Before Starting

---

### Product Package Contents

Before starting install this product, please check and verify the contents of the product package, which should include the following items:



One Network Switch



One Power Cord



One User Manual CD



One pair Rack-mount kit + 8 Screws

---



**Note:** If any item listed in this table above is missing or damaged, please contact your distributor or retailer as soon as possible.

# **Chapter 1:**

## **Product Overview**

### **In Product Overview:**

This section will give you an overview of this product, including its feature functions and hardware/software specifications.

- **Product Brief Description**
- **Product Specification**
- **Hardware Description**
- **Hardware Installation**



## **1.1. Product Brief Description**

### **Introduction**

This switch is 24-port 10/100/1000M PoE+ with 4 Combo SFP Rack-mount Web Smart PoE Switch, the switch supports IEEE 802.3at Power over Ethernet standard, maximum 500W power consumption per system. The switch also provides exceptionally smart Web management features, such as VLAN, QoS, RSTP, IGMP Snooping, LACP, IEEE 802.1X, Storm Control...etc. The switch is standard 19" rack-mount design to fit into the rack environment. With these features, the switch is a superb choice for medium or large network environment to strengthen its network connection and efficiency.

### **IEEE 802.3at Power over Ethernet (PoE) Ports**

This switch features 24 IEEE 802.3at Power over Ethernet (PoE) ports supplying up to 30 watts per port. This product can convert standard 100~240V/AC power into low-voltage DC that runs over existing LAN cable to power up IEEE 802.3at compliant network accessories. It also features PoE awareness to verify whether the network device receive power is IEEE 802.3at compliant, or only the data will be sent through LAN cable. By adding this switch to existing networking, installing networking products such as Access Points and IP cameras can be easily managed and set up. Wireless device deployments are easily located with available power outlets and network administrators don't need to use heavy AC power adapters anymore.

### **4 Gigabit Copper/SFP Combo Port**

This switch supports 4 Gigabit Copper or SFP combo ports to uplink to servers, storage, or other switching devices for long loop reach applications.

### **Exceptionally Smart**

This switch features management interface that can be managed through web browser and provides smart features that are ideal for simple network applications and basic monitoring tools to improve network efficiency. Through a web-based interface, an administrator can set up VLANs to segregate traffic, QoS to prioritize mission-critical data, link aggregation to create fat traffic pipelines, bandwidth control to limit traffic load and Port Security to secure your network. All of these features offer extra protection on the network edge. Best of all, the password-protected configuration interface can be accessed remotely.

## 1.2. Product Specification

<b>Interface</b>		
10/100/1000 Base RJ45 Ports		24
Gigabit SFP/RJ45 Combo Port		4
<b>System Performance</b>		
Packet Buffer		500Kb
MAC Address Table Size		8K
Switching Capacity		48Gbps
Forwarding Rate		35.7Mpps
<b>PoE Features</b>		
IEEE 802.3 af/at		IEEE 802.3 af/at
Number of PSE Ports		24
Max. Power Consumption		500W
External/Internal Power		Internal Power
Power Feeding Detecting Capability on PD		•
PD Classification		•
Power Management (per-port)	Enable/Disable PoE Per Port	•
	Overloading Protection	•
<b>L2 Features</b>		
Auto-negotiation		•
Auto MDI/MDIX		•
Flow Control (duplex)	802.3x (Full)	•
	Back-Pressure (Half)	•
VLAN	VLAN Group	16
	Tagged Based	•
	Port-based	•
Link Aggregation	IEEE 802.3ad with LACP	•
	Max. LACP Link Aggregation Group	8
IGMP Snooping v1/v2		•
Jumbo Frame		Up to 12.2K
<b>QoS Features</b>		
CoS	IEEE 802.1p	•
	TCP/UDP Port Based	•
	IP ToS precedence, IP DSCP	•
<b>Security</b>		
Management System User Name/Password Protection		•
Management VLAN		•
RADIUS (Authentication, Authorization, Accounting)		•
<b>Management</b>		
Web Based Management		•
Firmware Upgrade via HTTP		•
Configuration Download/Upload		•
DHCP Client		•
Cable Diagnostics		•
Port Mirroring		One to One or Many to One

## Chapter 1: Product Overview

### Product Specification

---

<b>Mechanical</b>	
Power Input	100~240VAC
Dimension (H*W*D)	44 x 440 x 331 mm
LED	Power, Link/Act, PoE
Operating Temperature	0 ~ 50°C
Storage Temperature	-20 ~ 85°C
Operating Humidity	10~90% (non-condensing)
Weight	4.7 KG
Certification	CE, FCC Class A
<b>Standard</b>	
IEEE 802.3 – 10BaseT	•
IEEE 802.3u - 100BaseTX	•
IEEE 802.3ab - 1000BaseT	•
IEEE 802.3z 1000BaseSX/LX	•
IEEE 802.3af Power over Ethernet (PoE)	•
IEEE 802.3at Power over Ethernet (PoE+)	•
IEEE 802.3x - Flow Control	•
IEEE 802.1Q - VLAN	•
IEEE 802.1p - Class of Service	•
IEEE 802.3ad - Link Aggregation Control Protocol (LACP)	•
IEEE 802.1w - Rapid Spanning Tree Protocol	•
IEEE 802.1x Port-based Network Access Control	•

### 1.3. Hardware Description

This section mainly describes the hardware of this PoE switch and gives a physical and functional overview on the certain switch.

#### Front Panel

The front panel of this switch consists of 24 10/100/1000M Base-TX RJ-45 ports and 4 Gigabit SFP/RJ45 Combo Port. The LED Indicators are also located on the front panel.



#### LED Indicators

The LED Indicators present real-time information of systematic operation status. The following table provides description of LED status and their meaning.

LED	Status	Description
Power	On	Power on
	Off	Disconnect to Power Source
Link/ ACT	On	Link
	Flashing	Data activating
	Off	No device is attached
PoE	On	Port is linked to Power Device
	Off	No Power Device is connected

#### Rear Panel

The 3-pronged power plug is placed at the rear panel of the switch right side shown as below.



## **1.4. Hardware Installation**

To install this switch, please place it on a large flat surface with a power socket close by. This surface should be clean, smooth, and level. Also, please make sure that there is enough space around this switch for RJ45 cable, power cord and ventilation.

If you're installing this switch on a 19-inch rack, please make sure to use the rack-mount kit (L brackets) and screws come with the product package. All screws must be fastened so the rack-mount kit and your product are tightly conjoined before installing it on your 19-inch rack.

### **Ethernet cable Request**

The wiring cable types are as below:

- 10 Base-T: 2-pair UTP/STP CAT. 3, 4, 5 cable, EIA/TIA-568 100-ohm (Max. 100m)
- 100 Base-TX: 2-pair UTP/STP CAT. 5 cable, EIA/TIA-568 100-ohm (Max. 100m)
- 1000 Base-T: 4-pair UTP/STP CAT. 5 cable, EIA/TIA-568 100-ohm (Max. 100m)
- PoE: To delivery power properly, it is recommended to use CAT 5e and CAT 6 cable. Ethernet cables of higher qualities can reduce the power lost during transmission.

### **SFP Installation**

While install the SFP transceiver, make sure the SFP type of the 2 ends is the same and the transmission distance, wavelength, fiber cable can meet your request. It is suggested to purchase the SFP transceiver with the switch provider to avoid any incompatible issue.

The way to connect the SFP transceiver is to Plug in SFP fiber transceiver fist. The SFP transceiver has 2 plug for fiber cable, one is TX (transmit), the other is RX (receive).

Cross-connect the transmit channel at each end to the receive channel at the opposite end.

For more information regarding to the product safety and maintenance guide, please refer to **Appendix A: Product Safety**.

## **Chapter 2:**

# **Preparing for Management**

### **In Preparing for Management:**

This section will guide your how to manage this product via management web page.


- **Preparation for Web Interface**

## 2.1. Preparation for Web Interface


The management web page allows you to use a web browser (such as Microsoft IE, Google Chrome, or Mozilla Firefox) to configure and monitor the switch from anywhere on the network.

Before using the web interface to manage your switch, please verify that your switch and your PC are on the same network. Please follow the steps down below to configure your PC properly:

1. Verify that the network interface card (NIC) of your PC is operational and properly installed, and that your operating system supports TCP/IP protocol.
2. Connect your PC with the switch via an RJ45 cable.
3. The default IP address of the switch is **192.168.2.1**. The switch and your PC should locate within the same IP Subnet. Change your PC's IP address to 192.168.2.X, where X can be any number from 2 to 254. Please make sure that the IP address you've assigned to your PC cannot be the same with the switch.

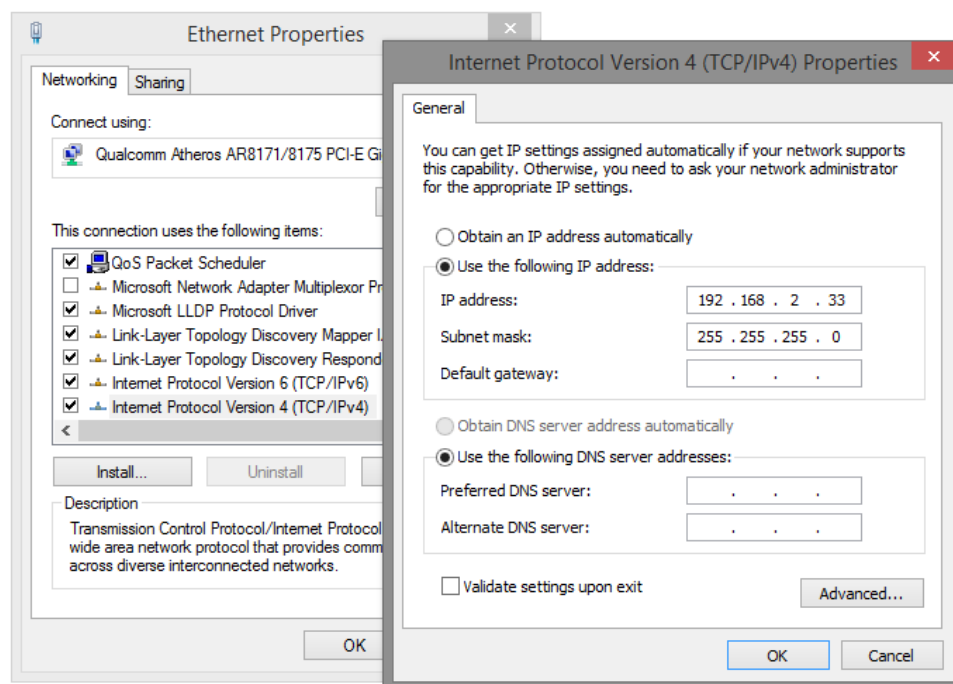

4. Launch the web browser (IE, Firefox, or Chrome) on your PC.
5. Type **192.168.2.1** (or the IP address of the switch) in the web browser's URL field, and press Enter.



## Chapter 2: Preparing for Management

### Preparation for Web Interface

---

6. The web browser will prompt you to log in. The default password for the configuration web page is **admin**.

Please enter password to login

Password:	<input type="text"/>
-----------	----------------------

Apply

For more information, please refer to **Appendix B: IP Configuration for Your PC**.



# Chapter 3:

## Web Management

### **In Web Management:**

As mentioned in *Chapter 2.1. Preparation for Web Interface*, This switch provides a web-based management interface. You can make all settings and monitor system status with this management web page.

Configuration/Monitor options included in the management web page can be divided into the following 3 categories, which will be discussed in detail in this chapter:

- **Web Management - Configuration**
- **Web Management - Monitoring**
- **Web Management - Maintenance**

### 3.1. Web Management - Overview

As shown in the figure on the right side, this switch's setting options can be divided into three main categories:

- **Configuration:** Here you can make system configurations. The settings you can configure here include changing the IP address of the switch, setting rate limit of each port, VLAN, IGMP Snooping, Quality of Service (QoS), and Power over Ethernet (turning PoE ON or OFF).
- **Monitoring:** Here you can monitor system status, or performing system diagnostic with VeriPHY and Ping.
- **Maintenance:** This section allows you to make system maintenance such as reboot your switch, reset settings (except switch's IP address) to default value, upload switch firmware, and download/upload system setting values.

The following section will discuss all the functions in detail.

#### Configuration

- System
- Ports
- VLANs
- Aggregation
- LACP
- RSTP
- 802.1X
- IGMP Snooping
- Mirroring
- Quality of Service
- Filter
- Power over Ethernet
- Rate Limit
- Storm Control

#### Monitoring

- Statistics Overview
- Detailed Statistics
- LACP Status
- RSTP Status
- IGMP Status
- VeriPHY
- Ping

#### Maintenance

- Warm Restart
- Factory Default
- Software Upload
- Configuration File Transfer
- Logout

## 3.2. Web Management - Configuration

### 3.2.1. Configuration - System

MAC Address	00-00-00-00-00-4a
S/W Version	G24 V120814
H/W Version	1.0
Active IP Address	192.168.2.1
Active Subnet Mask	255.255.255.0
Active Gateway	192.168.2.254
DHCP Server	0.0.0.0
Lease Time Left	0 secs

#### **MAC Address**

Displays the unique hardware address assigned by manufacturer (default).

#### **S/W Version**

Display the switch's firmware version.

#### **H/W Version**

Display the switch's Hardware version.

#### **Active IP Address**

The current active IP address of the switch.

#### **Active Subnet mask**

The current active subnet mask of the IP Address.

#### **Active Gateway**

The current active Gateway of the switch.

#### **DHCP Server**

The IP of the DHCP Server. Display after DHCP Client enabled.

#### **Lease Time Left**

The least received from the DHCP server. Display after the DHCP Client enabled.

DHCP Enabled	<input type="checkbox"/>
Fallback IP Address	192.168.2.1
Fallback Subnet Mask	255.255.255.0
Fallback Gateway	192.168.2.254
Management VLAN	1
Name	
Password	
Inactivity Timeout (secs)	0
SNMP enabled	<input checked="" type="checkbox"/>
SNMP Trap destination	0.0.0.0
SNMP Read Community	public
SNMP Write Community	private
SNMP Trap Community	public

### DHCP Enabled

Click the box to enable DHCP Client mode.

### Fallback IP address

Manually assign the IP address that the network is using. The default IP is 192.168.2.1

### Fallback Subnet Mask

Assign the subnet mask to the IP address

### Fallback Gateway

Assign the network gateway for industrial switch. The default gateway is 192.168.2.254.

### Management VLAN

ID of a configured VLAN (1-4094) through which you can manage the switch. By default, all ports on the switch are members of VLAN 1. However, if the management VLAN is changed, the management station must be attached to a port belonging to this VLAN.

### Name

Type in the new user name information.

### Password

Type in the new password (The default value of the switch is **admin**).

### Inactive Timeout

Here you can set the inactive timeout in seconds.

### SNMP Enabled

You can enable the SNMP (Simple Network Management Protocol) with the check box.

**SNMP Trap Destination**

Input the SNMP trap destination IP address here.

#### **SNMP Read Community**

Indicates the community read access string to permit access to SNMP agent.

#### **SNMP Write Community**

Indicates the community write access string to permit access to SNMP agent.

#### **SNMP Trap Community**

Indicates the community access string when sending SNMP trap packet.

#### **Buttons**

- **Apply:** Apply and save all the settings you've made on this page.
- **Refresh:** Refresh the page.

### 3.2.2. Configuration - Ports

#### Port Configuration

Enable Jumbo Frames

PERFECT\_REACH/Power Saving Mode: Disable

Port	Link	Mode	Flow Control
1	Down	Auto Speed <input type="button" value="v"/>	<input type="checkbox"/>
2	Down	Auto Speed <input type="button" value="v"/>	<input type="checkbox"/>
3	Down	Auto Speed <input type="button" value="v"/>	<input type="checkbox"/>
4	Down	Auto Speed <input type="button" value="v"/>	<input type="checkbox"/>
5	Down	Auto Speed <input type="button" value="v"/>	<input type="checkbox"/>
6	Down	Auto Speed <input type="button" value="v"/>	<input type="checkbox"/>
7	Down	Auto Speed <input type="button" value="v"/>	<input type="checkbox"/>
8	Down	Auto Speed <input type="button" value="v"/>	<input type="checkbox"/>

Drop frames after excessive collisions

#### Enable Jumbo Frames

This switch provides more efficient throughput for large sequential data transfers by supporting jumbo frames on Gigabit Ethernet ports up to 12.2KB. Compared to standard Ethernet frames that run only up to 1.5 KB, using jumbo frames significantly reduces the per-packet overhead required to process protocol encapsulation fields.

#### PERFECT\_REACH/Power Saving Mode

Adjusts the power provided to ports based on the length of the cable used to connect to other devices. Only sufficient power is used to maintain connection requirements.

#### Mode

Allows user to manually set the port speed such as Auto, 10 half, 10 Full, 100 Half, 100 Full, 1000 Full or Disabled. User may press Apply button to complete the configuration procedure.

#### Flow Control

Allows user to manually enable or disable the Flow Control feature. Click the checkbox of the specific ports you and press Apply button to complete the configuration procedure.

#### Drop frames after excessive collisions

If enabled, the switch will drop frames if excessive collisions happen.

© ALLNET GmbH Computersysteme 2015 - Alle Rechte vorbehalten

Irrtum und Änderungen vorbehalten

#### Buttons

- **Apply:** Apply and save all the settings you've made on this page.
- **Refresh:** Refresh the page.



### 3.2.3. Configuration - VLANs

#### Add a VLAN

VLAN ID

Add

VLAN stands for Virtual LAN, which is a logical network grouping that limits the broadcast domain and allows you to isolate network traffic so that only the members of the same VLAN group can communicate with each other.

#### VLAN ID

ID of configured VLAN (1 - 4094, no leading zeroes). Type the new ID and click Add. The web UI is directed to the VLAN Setup screen.

#### Add

After inputting the VLAN ID, press this button to add a new VLAN with the VLAN ID you inputted.

#### VLAN Setup

VLAN ID: 2			
Port	Member	Port	Member
Port 1	<input type="checkbox"/>	Port 13	<input type="checkbox"/>
Port 2	<input type="checkbox"/>	Port 14	<input type="checkbox"/>
Port 3	<input type="checkbox"/>	Port 15	<input type="checkbox"/>
Port 4	<input type="checkbox"/>	Port 16	<input type="checkbox"/>
Port 5	<input type="checkbox"/>	Port 17	<input type="checkbox"/>
Port 6	<input type="checkbox"/>	Port 18	<input type="checkbox"/>
Port 7	<input type="checkbox"/>	Port 19	<input type="checkbox"/>
Port 8	<input type="checkbox"/>	Port 20	<input type="checkbox"/>
Port 9	<input type="checkbox"/>	Port 21	<input type="checkbox"/>
Port 10	<input type="checkbox"/>	Port 22	<input type="checkbox"/>
Port 11	<input type="checkbox"/>	Port 23	<input type="checkbox"/>
Port 12	<input type="checkbox"/>	Port 24	<input type="checkbox"/>

Apply Refresh

#### Member

Check the check box of the port that you would like to add to the VLAN. Press the **Apply** button to save the settings you've made.

**VLAN Configuration List**

1							
---	--	--	--	--	--	--	--

**VLAN Configuration List**

Lists all the current VLAN groups created for this system. Up to 16 VLAN groups can be defined. VLAN 1 is the default untagged VLAN.

**Modify**

Press this button to modify the VLAN member port of the selected VLAN.

**Delete**

Press this button to delete the selected VLAN.

**Refresh**

Press this button to refresh web page.

**Port Config**

Press this button to enter the VLAN Per Port Configuration, as shown in the figure down below.

**VLAN Per Port Configuration**

Port	VLAN aware Enabled	Ingress Filtering Enabled	Packet Type	Pvid
Port 1	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/> All <input type="radio"/> Tagged Only	1
Port 2	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/> All <input type="radio"/> Tagged Only	1
Port 3	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/> All <input type="radio"/> Tagged Only	1
Port 4	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/> All <input type="radio"/> Tagged Only	1
Port 5	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/> All <input type="radio"/> Tagged Only	1
Port 6	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/> All <input type="radio"/> Tagged Only	1
Port 7	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/> All <input type="radio"/> Tagged Only	1
Port 8	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="radio"/> All <input type="radio"/> Tagged Only	1

**VLAN Aware Enabled**

Click the check box to enable the VLAN Aware function.

**Packet Type**

Here you can set if the port will accept all packets, or only packets that are tagged with the set PVID.

**PVID**

Click the scroll-down menu to select an existing VLAN as the PVID.

**Buttons**

- **Apply:** Apply and save all the settings you've made on this page.
- **Refresh:** Refresh the page.

### 3.2.4. Configuration - Aggregation

#### Aggregation/Trunking Configuration

Group\Port	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Normal	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>
Group 1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Group 2	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Group 3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Group 4	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Group 5	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Group 6	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Group 7	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Group 8	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

Port trunk allows multiple links to be bundled together and act as a single physical link for increased throughput. It provides load balancing, and redundancy of links in a switched inter-network. Actually, the link does not have an inherent total bandwidth equal to the sum of its component physical links. Traffic in a trunk is distributed across an individual link within the trunk in a deterministic method that called a hash algorithm. The hash algorithm automatically applies load balancing to the ports in the trunk. A port failure within the trunk group causes the network traffic to be directed to the remaining ports. Load balancing is maintained whenever a link in a trunk is lost or returned to service.

#### Aggregation / Trunking Configuration

To assign the ports to a trunk, click on the ports that you would like to set as the same aggregation/trunking group, and click the **Apply** button to save the settings you've made.

#### Buttons

- **Apply:** Apply and save all the settings you've made on this page.
- **Refresh:** Refresh the page.

### 3.2.5. Configuration - LACP

IEEE 802.3ad Link Aggregation Control Protocol (LACP) increases bandwidth by automatically aggregating several physical links together as a logical trunk and providing load balancing and fault tolerance for uplink connections. Once the port is configured as Static Aggregation port, the area will become gray. It means a port can only be the member of the Aggregation or LACP.

#### LACP Port Configuration

Port	Protocol Enabled	Key Value
1	<input type="checkbox"/>	auto
2	<input type="checkbox"/>	auto
3	<input type="checkbox"/>	auto
4	<input type="checkbox"/>	auto
5	<input type="checkbox"/>	auto
6	<input type="checkbox"/>	auto
7	<input type="checkbox"/>	auto
8	<input type="checkbox"/>	auto

#### Port

The port ID.

#### Protocol Enabled

Enables LACP Protocol on the associated port.

#### Key Value

Configures a port's LACP administration key. The port administrative key must be set to the same value for ports that belong to the same link aggregation group (LAG). If this administrative key is not set when an LAG is formed (i.e., it has the null value of 0), this key will automatically be set to the same value as that used by the LAG.

#### Buttons

- **Apply:** Apply and save all the settings you've made on this page.
- **Refresh:** Refresh the page.

### 3.2.6. Configuration - RSTP

IEEE 802.1w Rapid Spanning tree protocol (LACP) provides a loop-free network and redundant links to the core network with rapid convergence to ensure faster recovery from failed links, enhancing overall network stability and reliability.

#### RSTP System Configuration

System Priority	32768 ▾
Hello Time	2
Max Age	20
Forward Delay	15
Force version	Normal ▾

#### RSTP System Configuration

##### System Priority

This parameter configures the spanning tree priority globally for this switch. The device with the highest priority becomes the STP root device. However, if all devices have the same priority, the device with the lowest MAC address will then become the root device. Number between 0 - 61440 in increments of 4096. Therefore, there are 16 distinct values.

##### Hello Time

Interval (in seconds) at which the root device transmits a configuration message (BPDU frame). Number between 1-10 (default is 2).

##### Max Age

The maximum time (in seconds) a device can wait without receiving a configuration message before attempting to reconfigure. That also means the maximum life time for a BPDU frame. Number between 6-40 (default is 20).

##### Forward Delay

The maximum time (in seconds) the root device will wait before changing states (i.e., discarding to learning to forwarding). Number between 4 – 30 (default is 15).

##### Force Version

Set and show the RSTP protocol to use.

- **Normal:** Use RSTP
- **Compatible:** Compatible with STP.

### RSTP Port Configuration

Port	Protocol Enabled	Edge	Path Cost
Aggregations	<input type="checkbox"/>		
1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
3	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
4	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
5	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
6	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
7	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto
8	<input type="checkbox"/>	<input checked="" type="checkbox"/>	auto

### RSTP Port Configuration

#### Port

The port ID. Aggregations mean any configured trunk group.

Protocol Enabled: Click on the tick-box to enable/disable the RSTP protocol for the port.

#### Edge

Expect the port to be an edge port (linking to an end station) or a link to another STP device.

#### Path Cost

This parameter is used by the STP to determine the best path between devices.

Therefore, lower values should be assigned to ports attached to faster media, and higher values assigned to ports with slower media. Set the RSTP path cost on the port. Number between 0 - 200000000. The default value is "auto", it means the system will automatically generate path cost.

#### Buttons

- **Apply:** Apply and save all the settings you've made on this page.
- **Refresh:** Refresh the page.

### 3.2.7. Configuration - 802.1X

IEEE802.1X provides a security standard for network access control, especially in Wi-Fi wireless networks. 802.1X holds a network port disconnected until authentication is completed. The switch uses Extensible Authentication Protocol over LANS to exchange authentication protocol client identity with the client, and forward it to another remote RADIUS authentication server to verify access rights. The EAP packet from the RADIUS server also contains the authentication method to be used. The client can reject the authentication method and request another, depending on the configuration of the client software and the RADIUS server. Depending on the authenticated results, the port is either made available to the user, or the user is denied access to the network.

The RADIUS servers make the network a lot easier to manage for the administrator by gathering and storing the user lists.

#### 802.1X Configuration

Mode:  ▼  
 RADIUS IP:   
 RADIUS UDP Port:   
 RADIUS Secret:

Port	Admin State	Port State			
1	Force Authorized <span>▼</span>	802.1X Disabled	<a href="#">Re-authenticate</a>	<a href="#">Force Reinitialize</a>	<a href="#">Statistics</a>
2	Force Authorized <span>▼</span>	802.1X Disabled	<a href="#">Re-authenticate</a>	<a href="#">Force Reinitialize</a>	<a href="#">Statistics</a>
3	Force Authorized <span>▼</span>	802.1X Disabled	<a href="#">Re-authenticate</a>	<a href="#">Force Reinitialize</a>	<a href="#">Statistics</a>
4	Force Authorized <span>▼</span>	802.1X Disabled	<a href="#">Re-authenticate</a>	<a href="#">Force Reinitialize</a>	<a href="#">Statistics</a>
5	Force Authorized <span>▼</span>	802.1X Disabled	<a href="#">Re-authenticate</a>	<a href="#">Force Reinitialize</a>	<a href="#">Statistics</a>
6	Force Authorized <span>▼</span>	802.1X Disabled	<a href="#">Re-authenticate</a>	<a href="#">Force Reinitialize</a>	<a href="#">Statistics</a>
7	Force Authorized <span>▼</span>	802.1X Disabled	<a href="#">Re-authenticate</a>	<a href="#">Force Reinitialize</a>	<a href="#">Statistics</a>
8	Force Authorized <span>▼</span>	802.1X Disabled	<a href="#">Re-authenticate</a>	<a href="#">Force Reinitialize</a>	<a href="#">Statistics</a>
			<a href="#">Re-authenticate All</a>	<a href="#">Force Reinitialize All</a>	

#### Mode

By default, 802.1x is disabled. To use EAP for security, select enabled and set the 802.1X Global Settings for the Radius Server and applicable authentication information.

#### RADIUS server IP



The IP Address of the external Radius Server, you need to specify an RADIUS server to enable 802.1X authentication.

#### **RADIUS UDP Port**

The UDP port used for the communication between the switch and RADIUS server.

#### **RADIUS Secret**

The Key used for the communication between the switch and RADIUS server.

#### **Port**

The port ID

#### **Admin State**

There are 3 types, Auto, Force Authorized and Force Unauthorized.

- Auto: Select Auto when you enabled the IEEE 802.1X. If the client is successfully authorized, the port is authorized to be used as well. Otherwise, the port can't be used.
- Force Authorized: The default value. No matter the IEEE 802.1X is enabled or not, the port is always authorized to be used.
- Force Unauthorized: No matter the IEEE 802.1X is enabled or not, the port is always unauthorized to be used.

#### **Port State**

It indicates the state of the port. Authorized means the port is successfully authorized by the RADIUS server or the port is configured as "Force Authorized".

#### **Others**

Re-authenticate allows restart the authentication process, Force Reinitialize reinitializes the process and the Statistics displays the IEEE 802.1X counters and information of each port.

#### 802.1X Parameters

Reauthentication Enabled	<input type="checkbox"/> Enabled
Reauthentication Period [1-3600 seconds]	3600
EAP timeout [1 - 255 seconds]	30

#### Reauthentication Enabled

Click this check box to enable the re-authentication function.

#### Reauthentication Period [1-3600 seconds]

You can set the re-authentication period here in this field. The period is set in seconds and can be any value from 1 to 3600.

#### EAP timeout [1 - 255 seconds]

You can set the EAP timeout here in this field. The period is set in seconds and can be any value from 1 to 255.

#### Buttons

- **Apply:** Apply and save all the settings you've made on this page.
- **Refresh:** Refresh the page.

### 3.2.8. Configuration - IGMP Snooping

#### IGMP Configuration

IGMP Enabled

Router Ports 1  2  3  4  5  6  7  8   
9  10  11  12  13  14  15  16   
17  18  19  20  21  22  23  24

Unregistered IPMC Flooding enabled

VLAN ID	IGMP Snooping Enabled	IGMP Querying Enabled
1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Apply Refresh

IGMP Snooping is the process of listening to IGMP network traffic. IGMP Snooping, as implied by the name, is a feature that allows a Layer 2 switch to “listen in” on the IGMP conversation between hosts and routers by processing the layer3 IGMP packets sent in a multicast network.

When IGMP Snooping is enabled in a switch it analyzes all IGMP packets between hosts connected to the switch and multicast routers in the network. When a switch hears an IGMP report from a host for a given multicast group, the switch adds the host’s port number to the multicast list for that group. And, when the switch hears an IGMP Leave, it removes the host’s port from the table entry.

Prevents flooding of IP multicast traffic, and limits bandwidth intensive video traffic to only the subscribers.

#### IGMP Enabled

When enabled, the switch will monitor network traffic to determine which hosts want to receive multicast traffic.

#### Router Ports

Set if ports are connecting to the IGMP administrative routers.

#### Unregistered IPMC Flooding enabled

Set the forwarding mode for unregistered (not-joined) IP multicast traffic. The traffic will flood when enabled, and forward to router-ports only when disabled.

#### IGMP Snooping Enabled

When enabled, the port will monitor network traffic to determine which hosts want to receive the multicast traffic.

#### IGMP Querying Enabled

When enabled, the port can serve as the Querier, which is responsible for asking hosts if

they want to receive multicast traffic.

### Buttons

- **Apply:** Apply and save all the settings you've made on this page.
- **Refresh:** Refresh the page.

### 3.2.9. Configuration - Mirroring

#### Mirroring Configuration

Port	Mirror Source
1	<input type="checkbox"/>
2	<input type="checkbox"/>
3	<input type="checkbox"/>
4	<input type="checkbox"/>
5	<input type="checkbox"/>
6	<input type="checkbox"/>
7	<input type="checkbox"/>
8	<input type="checkbox"/>
9	<input type="checkbox"/>
10	<input type="checkbox"/>

Mirror Port	1 ▾
-------------	-----

Port Mirroring is used on a network switch to send a copy of network packets seen on one port (or an entire VLAN) to a network monitoring connection on another switch port. This is commonly used for network appliances that require monitoring of network traffic, such as an intrusion-detection system.

#### Port to Mirror to

The port that will “duplicate” or “mirror” the traffic on the source port. Only incoming packets can be mirrored. Packets will be dropped when the available egress bandwidth is less than ingress bandwidth.

#### Ports to Mirror

Select the ports that you want to mirror from this section of the page. A port will be mirrored when the “Mirroring Enabled” check-box is checked.

#### Buttons

- **Apply:** Apply and save all the settings you’ve made on this page.
- **Refresh:** Refresh the page.

### 3.2.10. Configuration - Quality of Service

#### QoS Configuration

QoS Mode    
 QoS Disabled  
 802.1p  
 DSCP

This switch supports IEEE 802.1p and DSCP for QoS. Click the QoS Mode scroll-down menu to choose the QoS mode you would like to apply, and the QoS Configuration will change according.

#### QoS IEEE 802.1p

#### QoS Configuration

QoS Mode    
 Prioritize Traffic

802.1p Configuration							
802.1p Value	Priority	802.1p Value	Priority	802.1p Value	Priority	802.1p Value	Priority
0	normal <input type="button" value="v"/>	1	low <input type="button" value="v"/>	2	low <input type="button" value="v"/>	3	normal <input type="button" value="v"/>
4	medium <input type="button" value="v"/>	5	medium <input type="button" value="v"/>	6	high <input type="button" value="v"/>	7	high <input type="button" value="v"/>

Packets are prioritized using the 802.1p field in the VLAN tag. This field is three bits long, representing the values 0 - 7. When the QoS Mode is set to 802.1p, the 802.1p Configuration table appears, allowing you to map each of the eight 802.1p values to a local priority queue (low, normal, medium or high). The default settings are shown below.

When the QoS Mode is set to 802.1p, the 802.1p Configuration table is displayed as shown below. The Custom Prioritize Traffic is the default and suggested value.



## QoS DSCP

### QoS Configuration

QoS Mode	DSCP
Prioritize Traffic	All High Priority

DSCP Configuration	
DSCP Value(0..63)	Priority
	high
	high
	high
	high
	high
	high
	high
	high
All others	high

APPLY CANCEL

In DSCP mode, packets are prioritized using the DSCP (Differentiated Services Code Point) value. The Differentiated Services Code Point (DSCP) is a six-bit field that is contained within an IP (TCP or UDP) header. The six bits allow the DSCP field to take any value in the range 0 - 63. When QoS Mode is set to DSCP, the DSCP Configuration table is displayed, allowing you to map each of the DSCP values to a hardware output queue (low, normal, medium or high). The default settings map all DSCP values to the high priority egress queue.

User can use the Prioritize Traffic drop-down list to quickly set the values in the DSCP Configuration table to a common priority queue. Use Custom if you want to set each value individually.

When the QoS Mode is set to DSCP, the DSCP Configuration table is displayed as shown below.

### Strict

Services the egress queues in sequential order, transmitting all traffic in the higher priority queues before servicing lower priority queues.

### WRR

Weighted Round-Robin shares bandwidth at the egress ports by using scheduling weights with default values of 1, 2, 4, 8 for queues 0 through 7, respectively. (This is the default selection.)

**Note:** WRR can only be selected if Jumbo Frame mode is disabled on the Port Configuration page

**Buttons**

- **Apply:** Apply and save all the settings you've made on this page.
- **Refresh:** Refresh the page.

### 3.2.11. Configuration - Filter

#### Filter Configuration

Port	Source IP Filter			DHCP Server Allowed
	Mode	IP Address	IP Mask	
1	Disabled ▾			<input checked="" type="checkbox"/>
2	Disabled ▾			<input checked="" type="checkbox"/>
3	Disabled ▾			<input checked="" type="checkbox"/>
4	Disabled ▾			<input checked="" type="checkbox"/>
5	Disabled ▾			<input checked="" type="checkbox"/>
6	Disabled ▾			<input checked="" type="checkbox"/>
7	Disabled ▾			<input checked="" type="checkbox"/>
8	Disabled ▾			<input checked="" type="checkbox"/>

Here you can set filter rules for all the port of the switch, restricting devices connect to certain ports access to this switch. There are 3 modes that you can choose for filter configuration:

- **Disabled:** this mode is disabled, no any protection here.
- **Static:** The IP address you typed here can't access the switch.
- **DHCP:** The IP address retrieve from the DHCP server can't access the switch.

#### Buttons

- **Apply:** Apply and save all the settings you've made on this page.
- **Refresh:** Refresh the page.

### 3.2.12. Configuration - Power over Ethernet

#### PoE (Power over Ethernet) Configuration

Port	PoE Enabled	PD Class	Delivering Power [W]	Current [mA]	Voltage [V]	Power Budget [%] (Total power = 500W)
1	<input checked="" type="checkbox"/>	--	0	0	0	
2	<input checked="" type="checkbox"/>	--	0	0	0	
3	<input checked="" type="checkbox"/>	--	0	0	0	
4	<input checked="" type="checkbox"/>	0	3.581	62.952	56.891	
5	<input checked="" type="checkbox"/>	--	0	0	0	
6	<input checked="" type="checkbox"/>	--	0	0	0	
7	<input checked="" type="checkbox"/>	--	0	0	0	
8	<input checked="" type="checkbox"/>	--	0	0	0	

PoE (Power over Ethernet) technology is a system to pass electrical power safely, along with data, on Ethernet cabling. Power is supplied in common mode over two or more of the differential pairs of wires found in the Ethernet cables and comes from a power supply within a PoE enabled networking device such as Switch or can be injected into a cable run with a mid-span power supply.

This screen shows all the PoE status when connect or disconnect to the PD device.

#### PoE Enabled

POE of the port is able to supply power to the attached PD (Powered Device)

#### PD Class

Detect the class of PD

#### Delivering Power (W)

The power (in Watt) that is delivered to the PD device connected to the port.

#### Power Budget Percentage

This field displays the total PoE power used.

#### Buttons

- **Apply:** Apply and save all the settings you've made on this page.
- **Refresh:** Refresh the page.

### 3.2.13. Configuration - Rate Limit

#### Rate Limit Configuration

Port	Policer	Shaper
1	No Limit ▾	No Limit ▾
2	No Limit ▾	No Limit ▾
3	No Limit ▾	No Limit ▾
4	No Limit ▾	No Limit ▾
5	No Limit ▾	No Limit ▾
6	No Limit ▾	No Limit ▾
7	No Limit ▾	No Limit ▾
8	No Limit ▾	No Limit ▾

You can define the certain port as Policer and Shaper before you set up the rate limit.

- **Policer:** The maximum transmitting rate will be set to the value you've set here.
- **Shaper:** The overall transmitting rate will be set to the value you've set here.

#### Policer

- **No Limit:** This drop-down menu allows you to specify that the selected port will have no bandwidth limit.
- **Rate (kbps):** This drop-down menu also allows you to select the data rate in Kbits per second, this can limit for the selected port. The value is between 128kbps – 3968kbps.

#### Shaper

- **No Limit:** This drop-down menu allows you to specify that the selected port will have no bandwidth limit.
- **Rate (kbps):** This drop-down menu also allows you to select the data rate in Kbits per second, this can limit for the selected port. The value is between 128kbps – 3968kbps.

#### Buttons

- **Apply:** Apply and save all the settings you've made on this page.
- **Refresh:** Refresh the page.

### 3.2.14. Configuration - Storm Control

Broadcast storms may occur when a device on your network is malfunctioning, or if application programs are not well designed or properly configured. If there is too much broadcast traffic on your network, performance can be severely degraded or everything can come to complete halt.

You can protect your network from broadcast storms by setting a threshold for broadcast traffic for each port. Any broadcast packets exceeding the specified threshold will then be dropped.

#### Storm Control Configuration

Storm Control Number of frames per second	
ICMP Rate	No Limit ▾
Learn Frames Rate	No Limit ▾
Broadcast Rate	No Limit ▾
Multicast Rate	No Limit ▾
Flooded unicast Rate	No Limit ▾

#### Enable Rate Limit

Click the check box and the rate to enable storm control.

#### Rate (number of frames per second)

The Rate field is set by a single drop-down list. The same threshold is applied to every port on the switch. When the threshold is exceeded, packets are dropped, irrespective of the flow-control settings.

#### ICMP Rate

This can prevent user to continue ping the switch and waste the CPU resource.

#### Learn Frame Rate

By default, the switch perform wire-speed learning on all ports. However, if some kind of unknown source MAC is classified as a "learn frame" and is redirect to CPU. These packets will be filtered after enabled this command.

#### Broadcast Rate

Broadcast Traffic.

#### Multicast Rate

Unknown Multicast Traffic. Before IGMP Snooping Enabled, all the Multicast are flooded and will be filtered by this command.

#### Flooded Unicast Rate

The source MAC is not yet learnt by the switch are unknown Unicast. This command can help limit such traffic.

#### Buttons

- **Apply:** Apply and save all the settings you've made on this page.
- **Refresh:** Refresh the page.



### 3.3. Web Management - Monitoring

#### 3.3.1. Monitoring - Statistics Overview

Statistics Overview for all ports

Port	Tx Bytes	Tx Frames	Rx Bytes	Rx Frames	Tx Errors	Rx Errors
1	81193	0	3858	29	0	0
2	30871	47	88294	275	0	0
3	0	0	0	0	0	0
4	0	0	0	0	0	0
5	0	0	0	0	0	0
6	0	0	0	0	0	0
7	0	0	0	0	0	0
8	0	0	0	0	0	0

This page displays the TX/RX Bytes/Frames/Errors of the switch.

#### Buttons

- **Clear:** Clear all the counters listed here.
- **Refresh:** Refresh the page.

#### 3.3.2. Monitoring - Detailed Statistics

Statistics for Port 1

<a href="#">Port 1</a>	<a href="#">Port 2</a>	<a href="#">Port 3</a>	<a href="#">Port 4</a>	<a href="#">Port 5</a>	<a href="#">Port 6</a>	<a href="#">Port 7</a>	<a href="#">Port 8</a>
<a href="#">Port 9</a>	<a href="#">Port 10</a>	<a href="#">Port 11</a>	<a href="#">Port 12</a>	<a href="#">Port 13</a>	<a href="#">Port 14</a>	<a href="#">Port 15</a>	<a href="#">Port 16</a>
<a href="#">Port 17</a>	<a href="#">Port 18</a>	<a href="#">Port 19</a>	<a href="#">Port 20</a>	<a href="#">Port 21</a>	<a href="#">Port 22</a>	<a href="#">Port 23</a>	<a href="#">Port 24</a>

Receive Total		Transmit Total	
Rx Packets	0	Tx Packets	0
Rx Octets	0	Tx Octets	0
Rx High Priority Packets	-	Tx High Priority Packets	-
Rx Low Priority Packets	-	Tx Low Priority Packets	-
Rx Broadcast	-	Tx Broadcast	-
Rx Multicast	-	Tx Multicast	-
Rx Broad- and Multicast	0	Tx Broad- and Multicast	0
Rx Error Packets	0	Tx Error Packets	0
Receive Size Counters		Transmit Size Counters	
Rx 64 Bytes	-	Tx 64 Bytes	-
Rx 65-127 Bytes	-	Tx 65-127 Bytes	-
Rx 128-255 Bytes	-	Tx 128-255 Bytes	-
Rx 256-511 Bytes	-	Tx 256-511 Bytes	-
Rx 512-1023 Bytes	-	Tx 512-1023 Bytes	-
Rx 1024- Bytes	-	Tx 1024- Bytes	-
Receive Error Counters		Transmit Error Counters	
Rx CRC/Alignment	-	Tx Collisions	-
Rx Undersize	-	Tx Drops	-
Rx Oversize	-	Tx Overflow	-
Rx Fragments	-		-
Rx Jabber	-		-
Rx Drops	-		-

This page displays the detailed information regarding to each port of the switch.

#### Ports

Press the hyper-link listed to display detailed information regarding to each port.

#### Buttons

- **Clear:** Clear all the counters listed here.
- **Refresh:** Refresh the page.






### 3.3.3. Monitoring - LACP Status

Here you can view the status of LACP.

#### LACP Aggregation Overview

Group/Port	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
Normal																									

#### Legend

	Down	Port link down
	Blocked	Port Blocked by RSTP. Number is Partner port number if other switch has LACP enabled
	Learning	Port Learning by RSTP
	Forwarding	Port link up and forwarding frames
	Forwarding	Port link up and forwarding by RSTP. Number is Partner port number if other switch has LACP enabled

#### LACP Aggregation Overview

##### Port

The port number.

##### Port Active

Shows if the port is a member of an active LACP group.

##### Partner Port Number

A list of the ports attached at the remote end of this LAG link member.

##### Operational Port Key

Current operational value of the key used by this LAG.

### LACP Port Status

LACP Port Status

Port	Protocol Active	Partner Port Number	Operational Port Key
1	no		
2	no		
3	no		
4	no		
5	no		
6	no		
7	no		
8	no		

Active LACP ports are capable of processing and sending LACP control frames. This allows LACP compliant devices to negotiate the aggregated link so the group may be changed dynamically as needs requires.

#### Buttons

- **Refresh:** Refresh the page.

### 3.3.4. Monitoring - RSTP Status

#### RSTP VLAN Bridge Overview

VLAN Id	Bridge Id	Hello Time	Max Age	Fwd Delay	Topology	Root Id
1	32769:00-00-00-00-00-4b	2	20	15	Steady	This switch is Root!

#### RSTP Port Status

Port/Group	Vlan Id	Path Cost	Edge Port	P2p Port	Protocol	Port State
Port 1						Non-STP
Port 2						Non-STP
Port 3						Non-STP
Port 4						Non-STP
Port 5						Non-STP
Port 6						Non-STP
Port 7						Non-STP
Port 8						Non-STP

#### RSTP VLAN Bridge Overview

##### Hello Time

Interval (in seconds) at which the root device transmits a configuration message.

##### Max Age

The maximum time (in seconds) a device can wait without receiving a configuration message before attempting to reconfigure. All device ports (except for designated ports) should receive configuration messages at regular intervals. Any port that age out STA information (provided in the last configuration message) becomes the designated port for the attached LAN. If it is a root port, a new root port is selected from among the device ports attached to the network.

##### Fwd Delay

The maximum time (in seconds) the root device will wait before changing states (i.e., discarding to learning to forwarding). This delay is required because every device must receive information about topology changes before it starts to forward frames. In addition, each port needs time to listen for conflicting information that would make it return to a discarding state; otherwise, temporary data loops might result.

##### Topology

Indicates if spanning tree topology is steady or undergoing reconfiguration. (The time required for reconfiguration is extremely short, so no values other than "steady" state are likely to be seen in this field.)

##### Root ID

The priority and MAC address of the device in the Spanning Tree that this switch has

accepted as the root device, and the port connected to the root device.

#### RSTP Port Status

##### Port/Group

The number of a port or the ID of a static trunk.

##### Path Cost

The cost for a packet to travel from this port to the root in the current Spanning Tree configuration. The slower the media, the higher the cost.

##### Edge Port

Shows if this port is functioning as an edge port, either through

##### Manual Selection (see the RSTP Port Configuration table) or Auto-Detection

If the switch detects another bridge connected to this port, the manual setting for Edge Port will be overridden, and the port will instead function as a point-to-point connection.

##### P2P Port

Shows if this port is functioning as a Point-to-Point connection to exactly one other bridge. The switch can automatically determine if the interface is attached to a point-to-point link or to shared media. If shared media is detected, the switch will assume that it is connected to two or more bridges.

##### Protocol

Shows the spanning tree protocol functioning on this port, either RSTP or STP (that is, STP-compatible mode).

##### Buttons

- **Refresh:** Refresh the page.

### 3.3.5. Monitoring - IGMP Status

#### IGMP Status

VLAN ID	Querier	Queries transmitted	Queries received	v1 Reports	v2 Reports	v3 Reports	v2 Leaves
1	Idle	0	0	0	0	0	0

#### VLAN ID

VLAN ID number.

#### Querier

Show whether Querying is enabled.

#### Queries Transmitted

Show the number of transmitted Query packets.

#### Queries Received

Show the number of received Query packets.

#### v1 Reports

Show the number of received v1 Report packets.

#### v2 Reports

Show the number of received v2 Report packets.

#### v3 Reports

Show the number of received v2 Report packets.

#### v3 Leave

Show the number of v3 leave packets received.

#### Buttons

- **Refresh:** Refresh the page.

### 3.3.6. Monitoring - VeriPHY

#### VeriPHY Cable Diagnostics

Port	Port 1 ▾
Mode	Full ▾

Apply

Cable Status		
Pair	Length [m]	Status
A	-	-
B	-	-
C	-	-
D	-	-

User can perform cable diagnostics for all ports or selected ports to diagnose any cable faults (short, open etc..) and feedback a distance to the fault.

#### Cable Diagnostics

Cable diagnostics is performed on a per-port basis. Select the port number from the drop-down list. Press Apply to start the test.

#### Cable Status

Shows the cable length, operating conditions and isolates a variety of common faults that can occur on Category 5 twisted pair cabling.



### 3.3.7. Monitoring - Ping

#### Ping Parameters

Target IP address	<input type="text"/>
Count	1 ▾
Time Out (in secs)	1 ▾

Apply

#### Ping Results

Target IP address	0.0.0.0
Status	Test complete
Received replies	0
Request timeouts	0
Average Response Time (in ms)	0

Refresh

Ping is a tool useful for checking if a device is available and can be reached in the network.

#### Ping Parameters

##### Target IP Address

IP address of the host

##### Count

Number of packets to send. (Range: 1-20)

##### Time Out

Setting the time period of host will be Ping

#### Ping Results

The result of the Ping test will be displayed in this field. The results can be:

- **Normal response:** The normal response occurs in one to ten seconds, depending on network traffic.
- **Destination does not respond:** If the host does not respond, a "timeout" appears in ten seconds.
- **Destination unreachable:** The gateway for this destination indicates that the destination is unreachable.
- **Network or host unreachable:** The gateway found no corresponding entry in the route table.



## 3.4. Web Management - Maintenance

### 3.4.1. Maintenance - Warm Restart

#### Warm Restart



Are you sure you want to perform a Warm Restart?

Here you can reboot the switch.

#### Buttons

- **Yes:** Reboot the switch.
- **No:** Cancel switch rebooting.

### 3.4.2. Maintenance - Factory Default

#### Factory Default




Are you sure you want to perform a Factory Default?

You can reset all current settings back to the switch's factory default settings (except the switch's IP address). Please note that the switch must be ON during the resetting process.

#### Buttons

- **Yes:** Reset all settings of the switch back to the factory default settings, including switch's IP address and system administrator password.
- **No:** Cancel resetting all settings back to the factory default settings.

**Note:** You can also reset all settings back to factory default value by pressing the switch's Reset button with a pin for 5 seconds. All the settings, including the switch's IP address, will be reset back to the default value. Please note that the switch must be ON during the resetting process.

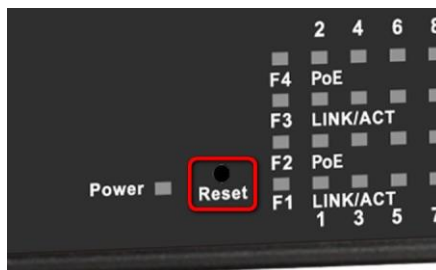

### 3.4.3. Maintenance - Software Upload

#### Software Upload

No file chosen

Here you can upload firmware from your PC to the switch.

#### Buttons

- **Choose File:** Press this button to choose the firmware file you would like to update to the switch.
- **Upload:** After choosing the firmware file, press this button to upload the firmware. Please note that the switch **MUST BE ON** during the uploading process. Turning the switch's power off during the uploading process might cause system malfunction. Also, it is highly recommended to reset your switch's setting back to factory default after uploading the firmware.

### 3.4.4. Maintenance - Configuration File Transfer

#### Configuration Upload

No file chosen

#### Configuration Download

Here you can upload pre-saved configuration file, or save all the current settings as a "\*.cfg" file.

#### Configuration Upload

##### Buttons

- **Choose File:** Press this button to choose the pre-saved configuration file.
- **Upload:** After choosing the configuration file, press this button to upload the file. Please note that the switch MUST BE ON during the uploading process. Turning the switch's power off during the uploading process might cause system malfunction.

#### Configuration Download

##### Buttons

- **Download:** Press this button to save all the current settings as a "\*.cfg" file.

### **3.4.5. Maintenance - Logout**

#### **Maintenance**

Warm Restart  
Factory Default  
Software Upload  
Configuration File Transfer  
**Logout**

Press the “Logout” option on the management web page to logout. It is highly recommended to logout after using the switch’s management web page. Also, the system will automatically logout if the management web page is not active after a set of time.

## **Appendix A: Product Safety**



This appendix describes safety issues regarding to this product. To use this product safely, it is highly recommended to read this appendix before installing and using this product.

Failure to follow these precautions and warnings might cause product malfunction, electrical shock, or even fire. If this product is working abnormally (e.g. generating smoke), please stop using this product and contact your distributor or retailer immediately.


### **DO NOT install this product under conditions listed below:**

- DO NOT install this product in an environment with conditions exceeding its specified operating environment.
- DO NOT install this product in an environment that is subjected to direct sunlight or near any heating equipment.
- DO NOT install this product in an environment with extreme temperature changes. Extreme temperature changes, even within the product's operating temperature range, may cause malfunctions.
- DO NOT install this product in a location near any sources of water or liquid.
- DO NOT stack this product with other network devices directly on top of one another. Stacking network devices directly without applying a mounting rack will cause this product to overheat.
- DO NOT install this product on an unstable surface. Doing so might cause this product to fall, resulting malfunction.

### **Product Maintenance Guide:**

- DO NOT disassemble this product. Doing so might cause malfunction and void your product's warranty.
- It is recommended to keep your product clear of dust. To remove dust from your product, please use a dry brush and brush it off gently.
- When not using this product, please store it in an environment with low humidity, cool temperature, and free of dust. Failure to do so might cause malfunction.
- Before powering up this product, please make sure that the electric power source meets this product's requirement. DO NOT use other power adapters if this product comes with its own power adapter in the package.


## Appendix B: IP Configuration for Your PC

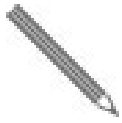


This appendix describes how to set the IP address of your PC so you can connect to product configuration webpage. The configuration webpage allows you to set system variables or monitor system status.

The following section will guide you to set the IP address properly in a Microsoft Windows 8 environment. Setting IP address in other Microsoft operating system (such as Windows Vista or Windows 7) is quite the same and can be related.

1. Open **Network and Sharing Center** in **Control Panel**, and click on **Change adapter settings** as shown in the figure down below.

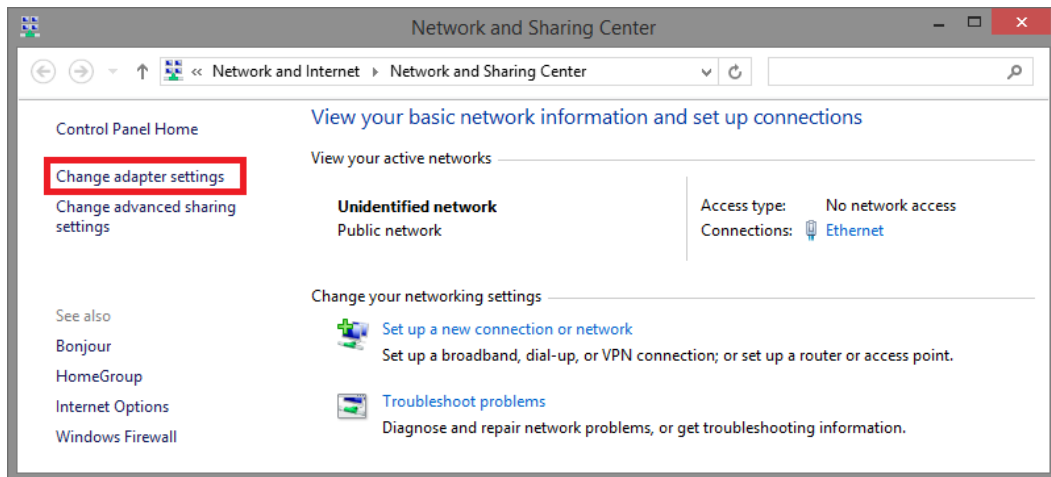

2. A **Network Connections** window will pop up, **showing** all the network connections available on your PC. Please double-click on the network connection you are using to connect the

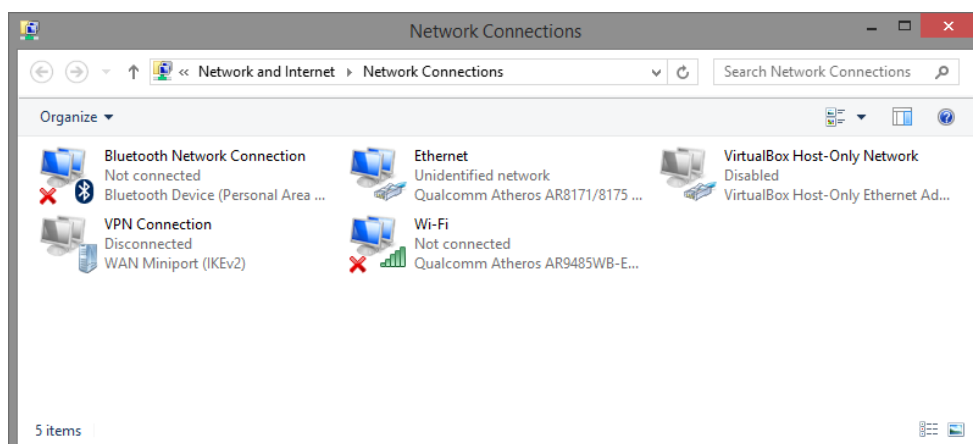




## Appendix B: IP Configuration for Your PC

---


3. An **Ethernet Status** window will pop up. Please click on the **Properties** button as shown in the figure down below.

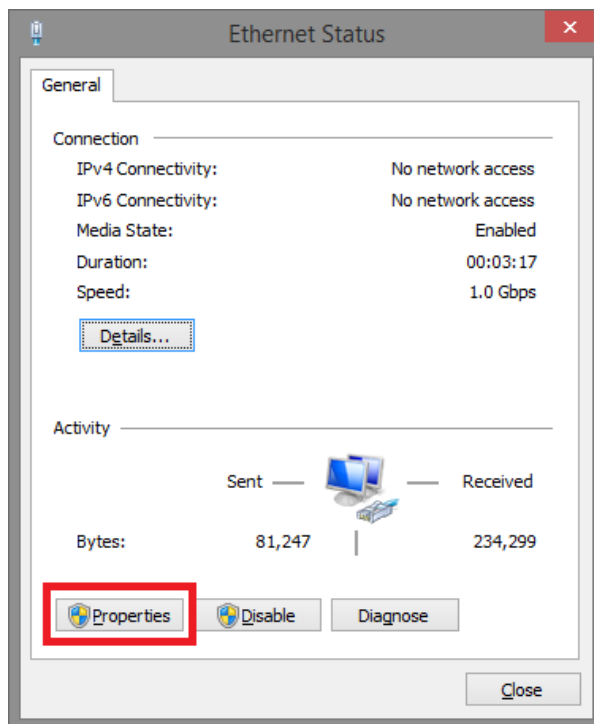

4. An **Ethernet Properties** window will pop up. Please double click on the **Internet Protocol Version 4 (TCP/IPv4)**.

## Appendix B: IP Configuration for Your PC

---

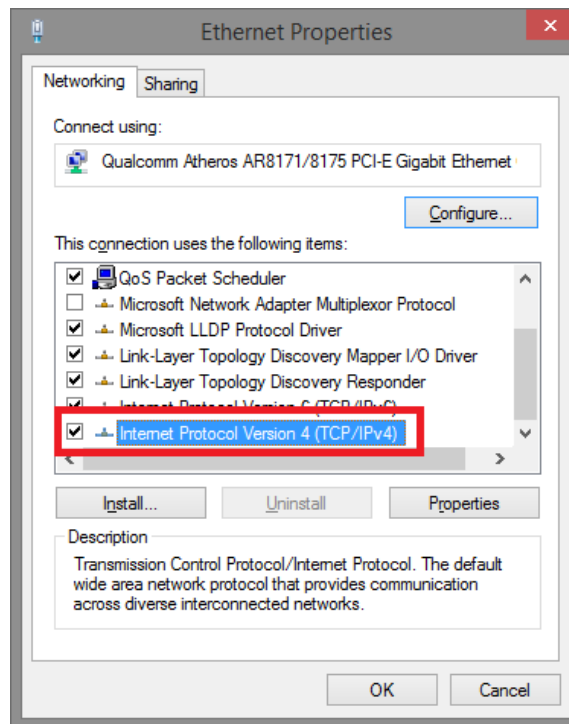


5. An **Internet Protocol Version 4 (TCP/IPv4) Properties** window will pop up. Please set your PC's IP address and subnet mask as shown in the figure down below.

By default, your product's IP address should be **192.168.2.1**. You can set any IP address as long as it's not the same with your product's IP address and is in the same network segment with your product's IP address.

Press **OK** to apply the TCP/IPv4 settings you just made. Now you can connect to your product using a web browser (i.e. Internet Explorer, Chrome, or Firefox).

## Appendix B: IP Configuration for Your PC

---

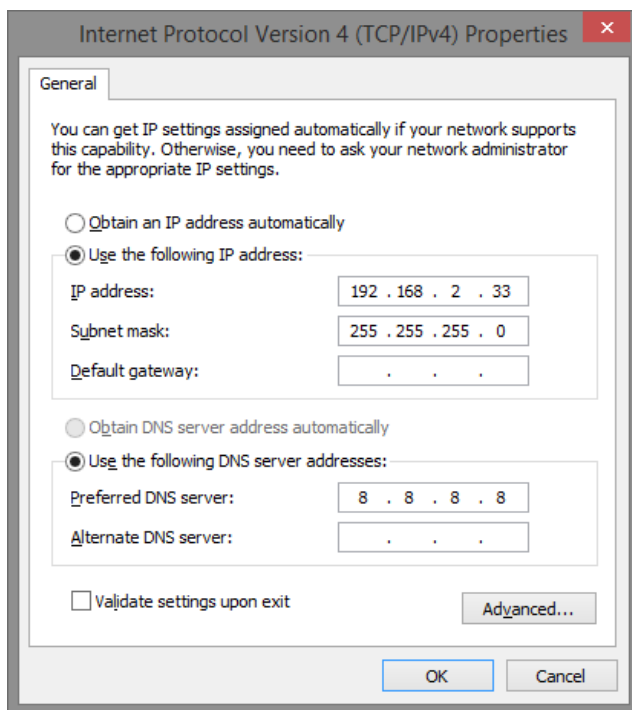

## Appendix C: Glossary

This appendix contains the terms and glossaries that are used in this user manual.

### A

#### ACE

ACE is an acronym for **A**ccess **C**ontrol **E**ntry. It describes access permission associated with a particular ACE ID.

There are three ACE frame types (Ethernet Type, ARP, and IPv4) and two ACE actions (permit and deny). The ACE also contains many detailed, different parameter options that are available for individual application.

#### ACL

ACL is an acronym for **A**ccess **C**ontrol **L**ist. It is the list table of ACEs, containing access control entries that specify individual users or groups permitted or denied to specific traffic objects, such as a process or a program.

Each accessible traffic object contains an identifier to its ACL. The privileges determine whether there are specific traffic object access rights.

ACL implementations can be quite complex, for example, when the ACEs are prioritized for the various situation. In networking, the ACL refers to a list of service ports or network services that are available on a host or server, each with a list of hosts or servers permitted or denied to use the service. ACL can generally be configured to control inbound traffic, and in this context, they are similar to firewalls.

There are 3 web-pages associated with the manual ACL configuration:

**ACL|Access Control List:** The web page shows the ACEs in a prioritized way, highest (top) to lowest (bottom). Default the table is empty. An ingress frame will only get a hit on one ACE even though there are more matching ACEs. The first matching ACE will take action (permit/deny) on that frame and a counter associated with that ACE is incremented. An ACE can be associated with a Policy, 1 ingress port, or any ingress port (the whole switch). If an ACE Policy is created then that Policy can be associated with a group of ports under the "Ports" web-page. There are number of parameters that can be configured with an ACE. Read the Web page help text to get further information for each of them. The maximum number of ACEs is 64.

**ACL|Ports:** The ACL Ports configuration is used to assign a Policy ID to an ingress port. This is useful to group ports to obey the same traffic rules. Traffic Policy is created under the "Access Control List" - page. You can you also set up specific traffic properties (Action / Rate Limiter / Port copy, etc) for each ingress port. They will though only apply if the frame gets past the ACE matching without getting matched. In that case a counter associated with that port is incremented. See the Web page help text for each specific port property.

**ACL|Rate Limiters:** Under this page you can configure the rate limiters. There can be 15 different rate limiters, each ranging from 1-1024K packets per seconds. Under "Ports" and "Access Control List" web-pages you can assign a Rate Limiter ID to the ACE(s) or ingress port(s).

### **Aggregation**

Using multiple ports in parallel to increase the link speed beyond the limits of a port and to increase the redundancy for higher availability.

### **ARP**

ARP is an acronym for **A**ddress **R**esolution **P**rotocol. It is a protocol that used to convert an IP address into a physical address, such as an Ethernet address. ARP allows a host to communicate with other hosts when only the Internet address of its neighbors is known. Before using IP, the host sends a broadcast ARP request containing the Internet address of the desired destination system.

### **ARP Inspection**

ARP Inspection is a secure feature. Several types of attacks can be launched against a host or devices connected to Layer 2 networks by "poisoning" the ARP caches. This feature is used to block such attacks. Only valid ARP requests and responses can go through the switch device.

### **Auto-Negotiation**

Auto-negotiation is the process where two different devices establish the mode of operation and the speed settings that can be shared by those devices for a link.

## **C**

### **CDP**

CDP is an acronym for **C**isco **D**iscovery **P**rotocol.

## D

### DEI

DEI is an acronym for **D**rop **E**ligible **I**ndicator. It is a 1-bit field in the VLAN tag.

### DES

DES is an acronym for **D**ata **E**ncryption **S**tandard. It provides a complete description of a mathematical algorithm for encrypting (enciphering) and decrypting (deciphering) binary coded information.

Encrypting data converts it to an unintelligible form called cipher. Decrypting cipher converts the data back to its original form called plaintext. The algorithm described in this standard specifies both enciphering and deciphering operations which are based on a binary number called a key.

### DHCP

DHCP is an acronym for **D**ynamic **H**ost **C**onfiguration **P**rotocol. It is a protocol used for assigning dynamic IP addresses to devices on a network.

DHCP used by networked computers (clients) to obtain IP addresses and other parameters such as the default gateway, subnet mask, and IP addresses of DNS servers from a DHCP server.

The DHCP server ensures that all IP addresses are unique, for example, no IP address is assigned to a second client while the first client's assignment is valid (its lease has not expired). Therefore, IP address pool management is done by the server and not by a human network administrator.

Dynamic addressing simplifies network administration because the software keeps track of IP addresses rather than requiring an administrator to manage the task. This means that a new computer can be added to a network without the hassle of manually assigning it a unique IP address.

### DHCP Relay

DHCP Relay is used to forward and to transfer DHCP messages between the clients and the server when they are not on the same subnet domain.

The DHCP option 82 enables a DHCP relay agent to insert specific information into a DHCP request packets when forwarding client DHCP packets to a DHCP server and remove the specific information from a DHCP reply packets when forwarding server

DHCP packets to a DHCP client. The DHCP server can use this information to implement IP address or other assignment policies. Specifically the option works by setting two sub-options: Circuit ID (option 1) and Remote ID (option2). The Circuit ID sub-option is supposed to include information specific to which circuit the request came in on. The Remote ID sub-option was designed to carry information relating to the remote host end of the circuit.

The definition of Circuit ID in the switch is 4 bytes in length and the format is "vlan\_id" "module\_id" "port\_no". The parameter of "vlan\_id" is the first two bytes represent the VLAN ID. The parameter of "module\_id" is the third byte for the module ID (in standalone switch it always equal 0, in stackable switch it means switch ID). The parameter of "port\_no" is the fourth byte and it means the port number.

The Remote ID is 6 bytes in length, and the value is equal the DHCP relay agents MAC address.

### **DHCP Snooping**

DHCP Snooping is used to block intruder on the untrusted ports of the switch device when it tries to intervene by injecting a bogus DHCP reply packet to a legitimate conversation between the DHCP client and server.

### **DNS**

DNS is an acronym for **D**omain **N**ame **S**ystem. It stores and associates many types of information with domain names. Most importantly, DNS translates human-friendly domain names and computer hostnames into computer-friendly IP addresses. For example, the domain name www.example.com might translate to 192.168.0.1.

### **Dotted Decimal Notation**

Dotted Decimal Notation refers to a method of writing IP addresses using decimal numbers and dots as separators between octets.

An IPv4 dotted decimal address has the form x.y.z.w, where x, y, z, and w are decimal numbers between 0 and 255.

### **Drop Precedence Level**

Every incoming frame is classified to a Drop Precedence Level (DP level), which is used throughout the device for providing congestion control guarantees to the frame according to what was configured for that specific DP level. A DP level of 0 (zero) corresponds to 'Committed' (Green) frames and a DP level of 1 or higher corresponds to 'Discard Eligible' (Yellow) frames.

© ALLNET GmbH Computersysteme 2015 - Alle Rechte vorbehalten

Irrtum und Änderungen vorbehalten

## **DSCP**

DSCP is an acronym for **D**ifferentiated **S**ervices **C**ode **P**oint. It is a field in the header of IP packets for packet classification purposes.



## E

### EEE

EEE is an abbreviation for Energy Efficient Ethernet defined in IEEE 802.3az.

### EPS

EPS is an abbreviation for Ethernet Protection Switching defined in ITU/T G.8031.

### Ethernet Type

Ethernet Type, or EtherType, is a field in the Ethernet MAC header, defined by the Ethernet networking standard. It is used to indicate which protocol is being transported in an Ethernet frame.

## F

### Fast Leave

Multicast snooping Fast Leave processing allows the switch to remove an interface from the forwarding-table entry without first sending out group specific queries to the interface. The VLAN interface is pruned from the multicast tree for the multicast group specified in the original leave message. Fast-leave processing ensures optimal bandwidth management for all hosts on a switched network, even when multiple multicast groups are in use simultaneously. This processing applies to IGMP and MLD.

## H

### HTTP

HTTP is an acronym for **H**ypertext **T**ransfer **P**rotocol. It is a protocol that used to transfer or convey information on the World Wide Web (WWW).

HTTP defines how messages are formatted and transmitted, and what actions Web servers and browsers should take in response to various commands. For example, when you enter a URL in your browser, this actually sends an HTTP command to the Web server directing it to fetch and transmit the requested Web page. The other main standard that controls how the World Wide Web works is HTML, which covers how Web pages are formatted and displayed.

Any Web server machine contains, in addition to the Web page files it can serve, an HTTP daemon, a program that is designed to wait for HTTP requests and handle them when they arrive. The Web browser is an HTTP client, sending requests to server machines. An HTTP client initiates a request by establishing a Transmission Control

© ALLNET GmbH Computersysteme 2015 - Alle Rechte vorbehalten

Irrtum und Änderungen vorbehalten

Protocol (TCP) connection to a particular port on a remote host (port 80 by default). An HTTP server listening on that port waits for the client to send a request message.

## **HTTPS**

HTTPS is an acronym for **H**ypertext **T**ransfer **P**rotocol over **S**ecure Socket Layer. It is used to indicate a secure HTTP connection.

HTTPS provide authentication and encrypted communication and is widely used on the World Wide Web for security-sensitive communication such as payment transactions and corporate logons.

HTTPS is really just the use of Netscape's Secure Socket Layer (SSL) as a sublayer under its regular HTTP application layering. (HTTPS uses port 443 instead of HTTP port 80 in its interactions with the lower layer, TCP/IP.) SSL uses a 40-bit key size for the RC4 stream encryption algorithm, which is considered an adequate degree of encryption for commercial exchange.

## **I**

## **ICMP**

ICMP is an acronym for **I**nternet **C**ontrol **M**essage **P**rotocol. It is a protocol that generated the error response, diagnostic or routing purposes. ICMP messages generally contain information about routing difficulties or simple exchanges such as time-stamp or echo transactions. For example, the PING command uses ICMP to test an Internet connection.

## **IEEE 802.1X**

IEEE 802.1X is an IEEE standard for port-based Network Access Control. It provides authentication to devices attached to a LAN port, establishing a point-to-point connection or preventing access from that port if authentication fails. With 802.1X, access to all switch ports can be centrally controlled from a server, which means that authorized users can use the same credentials for authentication from any point within the network.

## **IGMP**

IGMP is an acronym for **I**nternet **G**roup **M**anagement **P**rotocol. It is a communications protocol used to manage the membership of Internet Protocol multicast groups. IGMP is used by IP hosts and adjacent multicast routers to establish multicast group memberships. It is an integral part of the IP multicast specification, like ICMP for unicast connections. IGMP can be used for online video and gaming, and allows more efficient use of resources when supporting these uses.

## **IGMP Querier**

A router sends IGMP Query messages onto a particular link. This router is called the Querier.

## **IMAP**

IMAP is an acronym for **I**nternet **M**essage **A**ccess **P**rotocol. It is a protocol for email clients to retrieve email messages from a mail server.

IMAP is the protocol that IMAP clients use to communicate with the servers, and SMTP is the protocol used to transport mail to an IMAP server.

The current version of the Internet Message Access Protocol is IMAP4. It is similar to Post Office Protocol version 3 (POP3), but offers additional and more complex features. For example, the IMAP4 protocol leaves your email messages on the server rather than downloading them to your computer. If you wish to remove your messages from the server, you must use your mail client to generate local folders, copy messages to your local hard drive, and then delete and expunge the messages from the server.

## **IP**

IP is an acronym for **I**nternet **P**rotocol. It is a protocol used for communicating data across an internet network.

IP is a "best effort" system, which means that no packet of information sent over is assured to reach its destination in the same condition it was sent. Each device connected to a Local Area Network (LAN) or Wide Area Network (WAN) is given an Internet Protocol address, and this IP address is used to identify the device uniquely among all other devices connected to the extended network.

The current version of the Internet protocol is IPv4, which has 32-bits Internet Protocol addresses allowing for in excess of four billion unique addresses. This number is reduced drastically by the practice of webmasters taking addresses in large blocks, the bulk of which remain unused. There is a rather substantial movement to adopt a new version of the Internet Protocol, IPv6, which would have 128-bits Internet Protocol addresses. This number can be represented roughly by a three with thirty-nine zeroes after it. However, IPv4 is still the protocol of choice for most of the Internet.

## **IPMC**

IPMC is an acronym for **IP MultiCast**.

IPMC supports IPv4 and IPv6 multicasting. IPMCv4 denotes multicast for IPv4. IPMCv6 denotes multicast for IPv6.

## **IP Source Guard**

IP Source Guard is a secure feature used to restrict IP traffic on DHCP snooping untrusted ports by filtering traffic based on the DHCP Snooping Table or manually configured IP Source Bindings. It helps prevent IP spoofing attacks when a host tries to spoof and use the IP address of another host.

## **L**

### **LACP**

LACP is an IEEE 802.3ad standard protocol. The **L**ink **A**ggregation **C**ontrol **P**rotocol, allows bundling several physical ports together to form a single logical port.

### **LLC**

The IEEE 802.2 **L**ogical **L**ink **C**ontrol (LLC) protocol provides a link mechanism for upper layer protocols. It is the upper sub-layer of the Data Link Layer and provides multiplexing mechanisms that make it possible for several network protocols (IP, IPX) to coexist within a multipoint network. LLC header consists of 1 byte DSAP (Destination Service Access Point), 1 byte SSAP (Source Service Access Point), 1 or 2 bytes Control field followed by LLC information.

### **LLDP**

LLDP is an IEEE 802.1ab standard protocol.

The **L**ink **L**ayer **D**iscovery **P**rotocol (LLDP) specified in this standard allows stations attached to an IEEE 802 LAN to advertise, to other stations attached to the same IEEE 802 LAN, the major capabilities provided by the system incorporating that station, the management address or addresses of the entity or entities that provide management of those capabilities, and the identification of the stations point of attachment to the IEEE 802 LAN required by those management entity or entities. The information distributed via this protocol is stored by its recipients in a standard Management Information Base (MIB), making it possible for the information to be accessed by a Network Management System (NMS) using a management protocol such as the Simple Network Management Protocol (SNMP).

### **LLDP-MED**

LLDP-MED is an extension of IEEE 802.1ab and is defined by the telecommunication industry association (TIA-1057).

### **LLQI**

LLQI (Last Listener Query Interval) is the maximum response time used to calculate the

© ALLNET GmbH Computersysteme 2015 - Alle Rechte vorbehalten

Irrtum und Änderungen vorbehalten

Maximum Response Code inserted into Specific Queries. It is used to detect the departure of the last listener for a multicast address or source. In IGMP, this term is called LMQI (Last Member Query Interval).

## **LOC**

LOC is an acronym for **L**oss **O**f **C**onnectivity and is detected by a MEP and is indicating lost connectivity in the network. Can be used as a switch criteria by EPS

## **M**

### **MAC Table**

Switching of frames is based upon the DMAC address contained in the frame. The switch builds up a table that maps MAC addresses to switch ports for knowing which ports the frames should go to (based upon the DMAC address in the frame). This table contains both static and dynamic entries. The static entries are configured by the network administrator if the administrator wants to do a fixed mapping between the DMAC address and switch ports.

The frames also contain a MAC address (SMAC address), which shows the MAC address of the equipment sending the frame. The SMAC address is used by the switch to automatically update the MAC table with these dynamic MAC addresses. Dynamic entries are removed from the MAC table if no frame with the corresponding SMAC address has been seen after a configurable age time.

### **Mirroring**

For debugging network problems or monitoring network traffic, the switch system can be configured to mirror frames from multiple ports to a mirror port. (In this context, mirroring a frame is the same as copying the frame.)

Both incoming (source) and outgoing (destination) frames can be mirrored to the mirror port.

### **MLD**

MLD is an acronym for **M**ulticast **L**istener **D**iscovery for IPv6. MLD is used by IPv6 routers to discover multicast listeners on a directly attached link, much as IGMP is used in IPv4. The protocol is embedded in ICMPv6 instead of using a separate protocol.

### **MSTP**

In 2002, the IEEE introduced an evolution of RSTP: the **M**ultiple **S**panning **T**ree **P**rotocol. The MSTP protocol provides for multiple spanning tree instances, while ensuring RSTP

and STP compatibility. The standard was originally defined by IEEE 802.1s, but was later incorporated in IEEE 802.1D-2005.



## **MVR**

Multicast VLAN Registration (MVR) is a protocol for Layer 2 (IP)-networks that enables multicast-traffic from a source VLAN to be shared with subscriber-VLANs.

The main reason for using MVR is to save bandwidth by preventing duplicate multicast streams being sent in the core network, instead the stream(s) are received on the MVR-VLAN and forwarded to the VLANs where hosts have requested it/them (Wikipedia).

## **N**

### **NTP**

NTP is an acronym for **N**etwork **T**ime **P**rotocol, a network protocol for synchronizing the clocks of computer systems. NTP uses UDP (datagrams) as transport layer.

## **O**

### **Optional TLVs.**

A LLDP frame contains multiple TLVs

For some TLVs it is configurable if the switch shall include the TLV in the LLDP frame. These TLVs are known as optional TLVs. If an optional TLV is disabled the corresponding information is not included in the LLDP frame.

### **OUI**

OUI is the organizationally unique identifier. An OUI address is a globally unique identifier assigned to a vendor by IEEE. You can determine which vendor a device belongs to according to the OUI address which forms the first 24 bits of a MAC address.

## **P**

### **PCP**

PCP is an acronym for **P**riority **C**ode **P**oint. It is a 3-bit field storing the priority level for the 802.1Q frame. It is also known as User Priority.

### **PD**

PD is an acronym for **P**owered **D**evice. In a PoE system the power is delivered from a PSE (power sourcing equipment) to a remote device. The remote device is called a PD.

### **PHY**

PHY is an abbreviation for Physical Interface Transceiver and is the device that

implement the Ethernet physical layer (IEEE-802.3).

## **PING**

Ping is a program that sends a series of packets over a network or the Internet to a specific computer in order to generate a response from that computer. The other computer responds with an acknowledgment that it received the packets. Ping was created to verify whether a specific computer on a network or the Internet exists and is connected.

Ping uses Internet Control Message Protocol (ICMP) packets. The PING Request is the packet from the origin computer, and the PING Reply is the packet response from the target.

## **PoE**

PoE is an acronym for **P**ower **O**ver **E**thernet.

Power Over Ethernet is used to transmit electrical power, to remote devices over standard Ethernet cable. It could for example be used for powering IP telephones, wireless LAN access points and other equipment, where it would be difficult or expensive to connect the equipment to main power supply.

## **Policer**

A policer can limit the bandwidth of received frames. It is located in front of the ingress queue.

## **Private VLAN**

In a private VLAN, PVLANS provide layer 2 isolation between ports within the same broadcast domain. Isolated ports configured as part of PVLAN cannot communicate with each other. Member ports of a PVLAN can communicate with each other.

## **PTP**

PTP is an acronym for **P**recision **T**ime **P**rotocol, a network protocol for synchronizing the clocks of computer systems.

# **Q**

## **QCE**

QCE is an acronym for **Q**oS **C**ontrol **E**ntry. It describes QoS class associated with a particular QCE ID.

There are six QCE frame types: Ethernet Type, VLAN, UDP/TCP Port, DSCP, TOS, and Tag Priority. Frames can be classified by one of 4 different QoS classes: "Low", "Normal", "Medium", and "High" for individual application.

© ALLNET GmbH Computersysteme 2015 - Alle Rechte vorbehalten

Irrtum und Änderungen vorbehalten

## **QCL**

QCL is an acronym for **Q**oS **C**ontrol **L**ist. It is the list table of QCEs, containing QoS control entries that classify to a specific QoS class on specific traffic objects.

Each accessible traffic object contains an identifier to its QCL. The privileges determine specific traffic object to specific QoS class.

## **QL**

QL In SyncE this is the Quality Level of a given clock source. This is received on a port in a SSM indicating the quality of the clock received in the port.

## **QoS**

QoS is an acronym for **Q**uality **o**f **S**ervice. It is a method to guarantee a bandwidth relationship between individual applications or protocols.

A communications network transports a multitude of applications and data, including high-quality video and delay-sensitive data such as real-time voice. Networks must provide secure, predictable, measurable, and sometimes guaranteed services.

Achieving the required QoS becomes the secret to a successful end-to-end business solution. Therefore, QoS is the set of techniques to manage network resources.

## **QoS class**

Every incoming frame is classified to a QoS class, which is used throughout the device for providing queuing, scheduling and congestion control guarantees to the frame according to what was configured for that specific QoS class. There is a one to one mapping between QoS class, queue and priority. A QoS class of 0 (zero) has the lowest priority.

## **R**

### **RARP**

RARP is an acronym for **R**everse **A**ddress **R**esolution **P**rotocol. It is a protocol that is used to obtain an IP address for a given hardware address, such as an Ethernet address. RARP is the complement of ARP.

### **RADIUS**

RADIUS is an acronym for **R**emote **A**uthentication **D**ial **I**n **U**ser **S**ervice. It is a networking protocol that provides centralized access, authorization and accounting management for people or computers to connect and use a network service.

© ALLNET GmbH Computersysteme 2015 - Alle Rechte vorbehalten

Irrtum und Änderungen vorbehalten

## **RSTP**

In 1998, the IEEE with document 802.1w introduced an evolution of STP: the **R**apid **S**panning **T**ree **P**rotocol, which provides for faster spanning tree convergence after a topology change. Standard IEEE 802.1D-2004 now incorporates RSTP and obsoletes STP, while at the same time being backwards-compatible with STP.

## **S**

### **sFlow**

sFlow is an industry standard technology for monitoring switched networks through random sampling of packets on switch ports and time-based sampling of port counters. The sampled packets and counters (referred to as flow samples and counter samples, respectively) are sent as sFlow UDP datagrams to a central network traffic monitoring server. This central server is called an sFlow receiver or sFlow collector.

### **Shaper**

A shaper can limit the bandwidth of transmitted frames. It is located after the ingress queues.

### **SMTP**

SMTP is an acronym for **S**imple **M**ail **T**ransfer **P**rotocol. It is a text-based protocol that uses the Transmission Control Protocol (TCP) and provides a mail service modeled on the FTP file transfer service. SMTP transfers mail messages between systems and notifications regarding incoming mail.

### **SNAP**

The **S**ub **N**etwork **A**ccess **P**rotocol (SNAP) is a mechanism for multiplexing, on networks using IEEE 802.2 LLC, more protocols than can be distinguished by the 8-bit 802.2 Service Access Point (SAP) fields. SNAP supports identifying protocols by Ethernet type field values; it also supports vendor-private protocol identifier.

### **SNMP**

SNMP is an acronym for **S**imple **N**etwork **M**anagement **P**rotocol. It is part of the Transmission Control Protocol/Internet Protocol (TCP/IP) protocol for network management. SNMP allow diverse network objects to participate in a network management architecture. It enables network management systems to learn network problems by receiving traps or change notices from network devices implementing SNMP.

### **SNTP**

SNTP is an acronym for **S**imple **N**etwork **T**ime **P**rotocol, a network protocol for synchronizing the clocks of computer systems. SNTP uses UDP (datagrams) as transport layer.

## **SSH**

SSH is an acronym for **S**ecure **S**Hell. It is a network protocol that allows data to be exchanged using a secure channel between two networked devices. The encryption used by SSH provides confidentiality and integrity of data over an insecure network. The goal of SSH was to replace the earlier rlogin, TELNET and rsh protocols, which did not provide strong authentication or guarantee confidentiality.

## **SSM**

SSM In SyncE this is an abbreviation for Synchronization Status Message and is containing a QL indication.

## **STP**

**S**panning **T**ree **P**rotocol is an OSI layer-2 protocol which ensures a loop free topology for any bridged LAN. The original STP protocol is now obsolete by RSTP.

## **SyncE**

SyncE is an abbreviation for Synchronous Ethernet. This functionality is used to make a network 'clock frequency' synchronized. Not to be confused with real time clock synchronized (IEEE 1588).

# **T**

## **TACACS+**

TACACS+ is an acronym for **T**erminal **A**ccess **C**ontroller **A**ccess **C**ontrol **S**ystem **P**lus. It is a networking protocol which provides access control for routers, network access servers and other networked computing devices via one or more centralized servers. TACACS+ provides separate authentication, authorization and accounting services.

## **Tag Priority**

Tag Priority is a 3-bit field storing the priority level for the 802.1Q frame.

## **TCP**

TCP is an acronym for **T**ransmission **C**ontrol **P**rotocol. It is a communications protocol that uses the Internet Protocol (IP) to exchange the messages between computers.

The TCP protocol guarantees reliable and in-order delivery of data from sender to receiver and distinguishes data for multiple connections by concurrent applications (for example, Web server and e-mail server) running on the same host.

The applications on networked hosts can use TCP to create connections to one another. It is known as a connection-oriented protocol, which means that a connection is

established and maintained until such time as the message or messages to be exchanged by the application programs at each end have been exchanged. TCP is responsible for ensuring that a message is divided into the packets that IP manages and for reassembling the packets back into the complete message at the other end.

Common network applications that use TCP include the World Wide Web (WWW), e-mail, and File Transfer Protocol (FTP).

## **TELNET**

TELNET is an acronym for **TE**letype **NET**work. It is a terminal emulation protocol that uses the Transmission Control Protocol (TCP) and provides a virtual connection between TELNET server and TELNET client.

TELNET enables the client to control the server and communicate with other servers on the network. To start a Telnet session, the client user must log in to a server by entering a valid username and password. Then, the client user can enter commands through the Telnet program just as if they were entering commands directly on the server console.

## **TFTP**

TFTP is an acronym for **T**rivial **F**ile **T**ransfer **P**rotocol. It is transfer protocol that uses the User Datagram Protocol (UDP) and provides file writing and reading, but it does not provide directory service and security features.

## **ToS**

ToS is an acronym for **T**ype **o**f **S**ervice. It is implemented as the IPv4 ToS priority control. It is fully decoded to determine the priority from the 6-bit ToS field in the IP header. The most significant 6 bits of the ToS field are fully decoded into 64 possibilities, and the singular code that results is compared against the corresponding bit in the IPv4 ToS priority control bit (0~63).

## **TLV**

TLV is an acronym for **T**ype **L**ength **V**alue. A LLDP frame can contain multiple pieces of information. Each of these pieces of information is known as TLV.

## **U**

### **UDP**

UDP is an acronym for **U**ser **D**atagram **P**rotocol. It is a communications protocol that uses the Internet Protocol (IP) to exchange the messages between computers.

UDP is an alternative to the Transmission Control Protocol (TCP) that uses the Internet

© ALLNET GmbH Computersysteme 2015 - Alle Rechte vorbehalten

Irrtum und Änderungen vorbehalten



Protocol (IP). Unlike TCP, UDP does not provide the service of dividing a message into packet datagrams, and UDP doesn't provide reassembling and sequencing of the packets. This means that the application program that uses UDP must be able to make sure that the entire message has arrived and is in the right order. Network applications that want to save processing time because they have very small data units to exchange may prefer UDP to TCP.

UDP provides two services not provided by the IP layer. It provides port numbers to help distinguish different user requests and, optionally, a checksum capability to verify that the data arrived intact.

Common network applications that use UDP include the Domain Name System (DNS), streaming media applications such as IPTV, Voice over IP (VoIP), and Trivial File Transfer Protocol (TFTP).

### UPnP

UPnP is an acronym for **U**niversal **P**lug and **P**lay. The goals of UPnP are to allow devices to connect seamlessly and to simplify the implementation of networks in the home (data sharing, communications, and entertainment) and in corporate environments for simplified installation of computer components

### User Priority

User Priority is a 3-bit field storing the priority level for the 802.1Q frame. It is also known as PCP.

## V

### VLAN

Virtual LAN. A method to restrict communication between switch ports. VLANs can be used for the following applications:

**VLAN unaware switching:** This is the default configuration. All ports are VLAN unaware with Port VLAN ID 1 and members of VLAN 1. This means that MAC addresses are learned in VLAN 1, and the switch does not remove or insert VLAN tags.

**VLAN aware switching:** This is based on the IEEE 802.1Q standard. All ports are VLAN aware. Ports connected to VLAN aware switches are members of multiple VLANs and transmit tagged frames. Other ports are members of one VLAN, set up with this Port VLAN ID, and transmit untagged frames.

**Provider switching:** This is also known as Q-in-Q switching. Ports connected to subscribers are VLAN unaware, members of one VLAN, and set up with this unique Port VLAN ID. Ports connected to the service provider are VLAN aware, members of multiple VLANs, and set up to tag all frames. Untagged frames received on a subscriber port are forwarded to the provider port with a single VLAN tag. Tagged frames received on a subscriber port are forwarded to the provider port with a double VLAN tag.

### **VLAN ID**

VLAN ID is a 12-bit field specifying the VLAN to which the frame belongs.

### **Voice VLAN**

Voice VLAN is VLAN configured specially for voice traffic. By adding the ports with voice devices attached to voice VLAN, we can perform QoS-related configuration for voice data, ensuring the transmission priority of voice traffic and voice quality.

## Safety Warnings

For your safety, be sure to read and follow all warning notices and instructions.

- Do not open the device. Opening or removing the device cover can expose you to dangerous high voltage points or other risks. Only qualified service personnel can service the device. Please contact your vendor for further information.
- Do not use your device during a thunderstorm. There may be a risk of electric shock brought about by lightning.
- Do not expose your device to dust or corrosive liquids.
- Do not use this product near water sources.
- Make sure to connect the cables to the correct ports.
- Do not obstruct the ventilation slots on the device.



## CE-Declaration of Conformity

For the following equipment:

Germering, 7th of August, 2015

### **Smart managed 24 Port Gigabit PoE Switch ALL-SG8824PM**

**CE** The safety advice in the documentation accompanying the products shall be obeyed. The conformity to the above directive is indicated by the CE sign on the device.

The Allnet ALL-SG8824PM conforms to the Council Directives of 2004/108/EC.

This equipment meets the following conformance standards:

*EN55022:2010: Class A*

*IEC61000-3-2:2005+A1:2008+A2:2009*

*IEC61000-3-3:2008*

*EN55024:2010*

*IEC61000-4-2:2008*

*IEC61000-4-3:2006+A1:2007+A2:2010*

*IEC61000-4-4:2004+A1:2010 IEC61000-4-5:2005*

*IEC61000-4-6:2008*

*IEC61000-4-8:2009*

*IEC61000-4-11:2004*

This equipment is intended to be operated in all countries.

This declaration is made by

ALLNET GmbH Computersysteme  
Maistraße 2  
82110 Germering  
Germany

Germering, 07.08.2015

  
\_\_\_\_\_  
Wolfgang Marcus Bauer  
CEO

## **DISCLAIMER\_OF\_WARRANTY**

This Program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; version 2 of the License.

This Program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this Program; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

The full text of the GNU General Public License version 2 is included with the software distribution in the file LICENSE.GPLv2

### **NO WARRANTY**

BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

### **Written Offer for Source Code**

For binaries that you receive from ALLNET GmbH Computersysteme on physical media or within the download of the offered firmware that are licensed under any version of the GNU General Public License (GPL) or the GNU LGPL, you can receive a complete machine-readable copy of the source code by sending a written request to:

ALLNET GmbH Computersysteme

Maistrasse 2

© ALLNET GmbH Computersysteme 2015 - Alle Rechte vorbehalten  
Irrtum und Änderungen vorbehalten

82110 Germering

Your request should include: (i) the name of the covered binary, (ii) the version number of the ALLNET product containing the covered binary, (iii) your name, (iv) your company name (if applicable) and (v) your return mailing and email address (if available). We may charge you a nominal fee to cover the cost of the media and distribution. Your request must be sent within three (3) years of the date you received the GPL or LGPL covered code. For your convenience, some or all of the source code may also be found at:

<http://www.allnet.de/gpl.html>

## **LICENSE.GPLv2**

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc. 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

### Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

© ALLNET GmbH Computersysteme 2015 - Alle Rechte vorbehalten

Irrtum und Änderungen vorbehalten

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

## GNU GENERAL PUBLIC LICENSE

### TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

© ALLNET GmbH Computersysteme 2015 - Alle Rechte vorbehalten

Irrtum und Änderungen vorbehalten

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:
  - a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
  - b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.
6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.
7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

© ALLNET GmbH Computersysteme 2015 - Alle Rechte vorbehalten

Irrtum und Änderungen vorbehalten



It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

#### NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.
12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED

© ALLNET GmbH Computersysteme 2015 - Alle Rechte vorbehalten  
Irrtum und Änderungen vorbehalten

INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

#### END OF TERMS AND CONDITIONS

##### How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

<one line to give the program's name and a brief idea of what it does.> Copyright (C) <year> <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA

Also add information on how to contact you by electronic and paper mail. If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) year name of author

Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w'.

This is free software, and you are welcome to redistribute it under certain conditions; type `show c' for details.

The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w' and `show c'; they could even be mouse-clicks or menu items--whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program

© ALLNET GmbH Computersysteme 2015 - Alle Rechte vorbehalten  
Irrtum und Änderungen vorbehalten

`Gnomovision' (which makes passes at compilers) written by James Hacker.

<signature of Ty Coon>, 1 April 1989

Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License.

### **LICENSE.LGPLv2.1**

#### GNU LESSER GENERAL PUBLIC LICENSE

Version 2.1, February 1999

Copyright (C) 1991, 1999 Free Software Foundation, Inc. 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA  
Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.  
[This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

#### Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some specially designated software packages--typically libraries--of the Free Software Foundation and other authors who decide to use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case, based on the explanations below.

When we speak of free software, we are referring to freedom of use, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish); that you receive source code or can get it if you want it; that you can change the software and use pieces of it in new free programs; and that you are informed that you can do these things.

To protect your rights, we need to make restrictions that forbid distributors to deny you these rights or to ask you to surrender these rights. These restrictions translate to certain responsibilities for you if you distribute copies of the library or if you modify it.

For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with

the library, you must provide complete object files to the recipients, so that they can relink them with the library after making changes to the library and recompiling it. And you must show them these terms so they know their rights.

We protect your rights with a two-step method: (1) we copyright the library, and (2) we offer you this license, which gives you legal permission to copy, distribute and/or modify the library.

To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by problems that might be introduced by others.

Finally, software patents pose a constant threat to the existence of any free program. We wish to make sure that a company cannot effectively restrict the users of a free program by obtaining a restrictive license from a patent holder.

Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license.

Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those libraries into non-free programs.

When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library. The ordinary General Public License therefore permits such linking only if the entire combination fits its criteria of freedom. The Lesser General Public License permits more lax criteria for linking other code with the library.

We call this license the "Lesser" General Public License because it does Less to protect the user's freedom than the ordinary General Public License. It also provides other free software developers Less of an advantage over competing non-free programs. These disadvantages are the reason we use the ordinary General Public License for many libraries. However, the Lesser license provides advantages in certain special circumstances.

For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, non-free programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in non-free programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C Library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU/Linux operating system.

Although the Lesser General Public License is Less protective of the users' freedom, it does ensure that the user of a program that is linked with the Library has the freedom and the wherewithal to run that program using a modified version of the Library.

The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a "work based on the library" and a "work that uses the library". The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

© ALLNET GmbH Computersysteme 2015 - Alle Rechte vorbehalten

Irrtum und Änderungen vorbehalten

## GNU LESSER GENERAL PUBLIC LICENSE

### TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Lesser General Public License (also called "this License"). Each licensee is addressed as "you".

A "library" means a collection of software functions and/or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables.

The "Library", below, refers to any such software library or work which has been distributed under these terms. A "work based on the Library" means either the Library or any derivative work under copyright law: that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term "modification".)

"Source code" for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the library.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope.

The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

1. You may copy and distribute verbatim copies of the Library's complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:
  - a) The modified work must itself be a software library.
  - b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change.
  - c) You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License.
  - d) If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith

effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful.

(For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library.

In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices.

Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy.

This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

4. You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

5. A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a "work that uses the Library". Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License.

However, linking a "work that uses the Library" with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a "work that uses the library". The executable is therefore covered by this License. Section 6 states terms for distribution of such executables.

When a "work that uses the Library" uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not. Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.)

Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

6. As an exception to the Sections above, you may also combine or link a "work that uses the Library" with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer's own use and reverse engineering for debugging such modifications.

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things:

- a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above); and, if the work is an executable linked with the Library, with the complete machine-readable "work that uses the Library", as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)
- b) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (1) uses at run time a copy of the library already present on the user's computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified version is interface-compatible with the version that the work was made with.

- c) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.
- d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.
- e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy.

For an executable, the required form of the "work that uses the Library" must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

- 7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:
  - a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.
  - b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.
- 8. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
- 9. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.
- 10. Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.

© ALLNET GmbH Computersysteme 2015 - Alle Rechte vorbehalten

Irrtum und Änderungen vorbehalten



11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty-free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

13. The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.

14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

© ALLNET GmbH Computersysteme 2015 - Alle Rechte vorbehalten  
Irrtum und Änderungen vorbehalten

15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.
16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

#### END OF TERMS AND CONDITIONS

##### How to Apply These Terms to Your New Libraries

If you develop a new library, and you want it to be of the greatest possible use to the public, we recommend making it free software that everyone can redistribute and change. You can do so by permitting redistribution under these terms (or, alternatively, under the terms of the ordinary General Public License).

To apply these terms, attach the following notices to the library. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

<one line to give the library's name and a brief idea of what it does.> Copyright (C) <year> <name of author>

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Also add information on how to contact you by electronic and paper mail.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the library, if necessary. Here is a sample; alter the names:

© ALLNET GmbH Computersysteme 2015 - Alle Rechte vorbehalten  
Irrtum und Änderungen vorbehalten

Yoyodyne, Inc., hereby disclaims all copyright interest in the library 'Frob' (a library for tweaking knobs) written by James Random Hacker.

<signature of Ty Coon>, 1 April 1990 Ty Coon, President of Vice

That's all there is to it!